



User Manual

AC3000 High-Power Wi-Fi Tri-Band Router

DIR-3040

Preface

D-Link reserves the right to revise this publication and to make changes in the content hereof without obligation to notify any person or organization of such revisions or changes.

Manual Revisions

Hardware	Revision	Date	Description
A1	v1.00	2019/06/10	Initial release

Trademarks

D-Link and the D-Link logo are trademarks or registered trademarks of D-Link Corporation or its subsidiaries in the United States or other countries. All other company or product names mentioned herein are trademarks or registered trademarks of their respective companies.

Apple®, Apple logo®, Safari®, iPhone®, and Macintosh® are trademarks of Apple Inc., registered in the U.S. and other countries. App StoreSM is a service mark of Apple Inc.

Chrome™ browser, Google Play™ and Android™ are trademarks of Google Inc.

Internet Explorer®, Windows® and the Windows logo are trademarks of the Microsoft group of companies.

Copyright © 2019 by D-Link Corporation, Inc.

All rights reserved. This publication may not be reproduced, in whole or in part, without prior expressed written permission from D-Link Corporation, Inc.

Table of Contents

Product Overview.....	1	IPv4 - Dynamic IP (DHCP).....	34
Package Contents.....	1	IPv4 - Static IP	35
System Requirements	2	IPv4 - PPPoE	36
Features.....	3	IPv4 - PPTP	38
Hardware Overview	4	IPv4 - L2TP	40
LED Indicators	4	IPv4 - DS-Lite	42
Back Panel	5	Internet - IPv6.....	43
Front Panel	6	IPv6 - Auto Detection	44
Installation	7	IPv6 - Static IPv6	46
Before you Begin.....	7	IPv6 - Auto Configuration (SLAAC/DHCPv6)	48
Wireless Installation Considerations.....	8	IPv6 - PPPoE	51
Setup.....	9	IPv6 - 6rd	55
D-Link Wi-Fi App Setup.....	10	IPv6 - Local Connectivity Only	57
Hardware Setup	12	Internet - VLAN	58
Setup Wizard	15	Wireless	60
Configuration.....	22	Guest Zone.....	65
Home	23	Network.....	67
Internet.....	24	USB Sharing	69
DIR-3040.....	25	D-Link Cloud.....	71
Connected Clients	26	Features.....	72
Extenders	28	QoS Engine.....	72
Mesh Network.....	30	Firewall Settings - Advanced	74
USB Device	31	Firewall Settings - IPv4/IPv6 Rules.....	76
Settings	32	Port Forwarding	78
Wizard	32	Port Forwarding - Virtual Server.....	80
Internet - IPv4.....	33	Website Filter.....	82
		Static Route - IPv4.....	83

Static Route - IPv6.....	84	Connect or Disconnect.....	121
Dynamic DNS	85	Windows 7.....	122
Quick VPN	87	VPN Setup Instructions.....	122
Management.....	88	Connect or Disconnect.....	125
Time & Schedule - Time	88	Windows 8.1/8.....	126
Time & Schedule - Schedule	89	VPN Setup Instructions.....	126
System Log.....	90	Connect or Disconnect.....	131
System Admin - Admin.....	92	Windows 10	132
System Admin - System.....	93	VPN Setup Instructions.....	132
User.....	94	Connect or Disconnect.....	134
Upgrade	96	Android	135
Statistics	97	VPN Setup Instructions.....	135
Statistics - Extender.....	98	Connect or Disconnect.....	137
Third Party Services.....	99	Connect a Wireless Client to your Router	139
Registering a D-Link Cloud Service Account.....	100	WPS Button.....	139
Amazon Alexa Setup	103	Windows® 10	140
Amazon Alexa Voice Commands	107	Windows® 8 - WPA/WPA2.....	141
The Google Assistant Setup.....	108	Windows® 7.....	143
The Google Assistant Voice Commands.....	111	Troubleshooting	145
Wi-Fi Mesh Setup	112	Wireless Basics	147
Setup Using an Ethernet Cable	113	Wireless Modes	151
Quick VPN.....	114	Networking Basics	152
Important Information	115	Wireless Security	154
iOS Devices	116	Technical Specifications	155
VPN Setup Instructions.....	116	Regulatory Statements	156
Connect or Disconnect.....	118		
Mac OS X.....	119		
VPN Setup Instructions.....	119		

Product Overview

Package Contents

	DIR-3040
DIR-3040	V
Quick Install Guide	V
Quick Installation Card	V
Ethernet Cable (RJ45)	V
Power Adapter	V

If any of the above items are missing or damaged, please contact your local reseller.

Note: *Using a power supply with a different voltage rating than the one included with the router will cause damage and void the warranty for this product.*

System Requirements

Network Requirements	• An Ethernet-based cable, DSL or fiber modem • IEEE 802.11ac/n/g/b/a wireless clients • 10/100/1000 Ethernet
Web-based Configuration Utility Requirements	Computer with the following: • Windows®, Macintosh, or Linux-based operating system • An installed Ethernet adapter Browser Requirements: • Internet Explorer 10 or higher • Firefox 28 or higher • Safari 6 or higher • Chrome 28 or higher Windows® Users: Make sure you have the latest version of Java installed. Visit www.java.com to download the latest version.
D-Link Wi-Fi App Requirements	• iOS® or Android™ device (Please refer to the app's store page to check whether your device is compatible.)

Features

Need super-fast Wi-Fi for your wire-free, all-streaming house? With a powerful dual-core processor, the AC3000 High-Power Wi-Fi Tri-Band Router packs in enough processing power to handle every networking task you throw at it. It's a powerful, intelligent home router that supercharges your mesh network with D-Link's Wi-Fi Mesh technology so you can grow your mesh network by adding compatible D-Link routers and extenders. It even integrates voice assistant compatibility for Amazon Alexa and Google Assistant so you can control your network with voice commands.

Handle More with a High-Power Processor

With the DIR-3040, you're not only enjoying buffer-free gaming and lightning fast surfing, you're also enjoying features such as an integrated mesh for a higher coverage network, an automatically optimizing QoS with a built-in speedtest, an automatic firmware update system that ensures the latest features, and compatibility with voice assistants. All this is possible with the router's 880 Mhz dual-core high-power processor, 128 MB of flash memory and 256 MB of RAM.

Extend and Customize Your High-speed Wireless AC Network

D-Link's Wi-Fi Mesh is a scalable solution that allows you to easily increase the coverage of your home or office wireless AC network. Expand your Wi-Fi coverage by adding compatible D-Link access points. Mix and match suitable D-Link devices according to your budget and preferences to fit any floorplan. Setup is effortless; configuration of multiple access points can be done in minutes as settings can be passed on to other access points once the first access point is configured.

Enhanced Quality of Service Features

The built-in Quality of Service (QoS) engine allows you to prioritize important traffic to ensure that your favorite applications are receiving optimal bandwidth. Also included as part of the QoS feature is the speedtest, which not only allows you to check the current upload and download speed of your Internet connection, but also gives you the option of automatically configuring your router to optimize your traffic according to speedtest results.

Always Up-to-Date with the Latest Features


The DIR-3040 will automatically check daily for updates to make sure that the device always has the latest features and firmware, and will install the update silently in the background. For an extra peace of mind, in the event of failure during the firmware update, the router will store a backup system image in the memory before proceeding with the update.

Easy to Set Up and Manage

Sharing your Internet connection doesn't have to be a complicated process; just download the free D-Link Wi-Fi app for your mobile device and follow the on-screen step-by-step instructions to set up your DIR-3040. You also have the option to use a web browser to access the setup wizard and to manage your router. Support for industry-standard Wi-Fi Protected Setup (WPS) lets you create encrypted connections to new devices by pressing a button.


Hardware Overview

LED Indicators

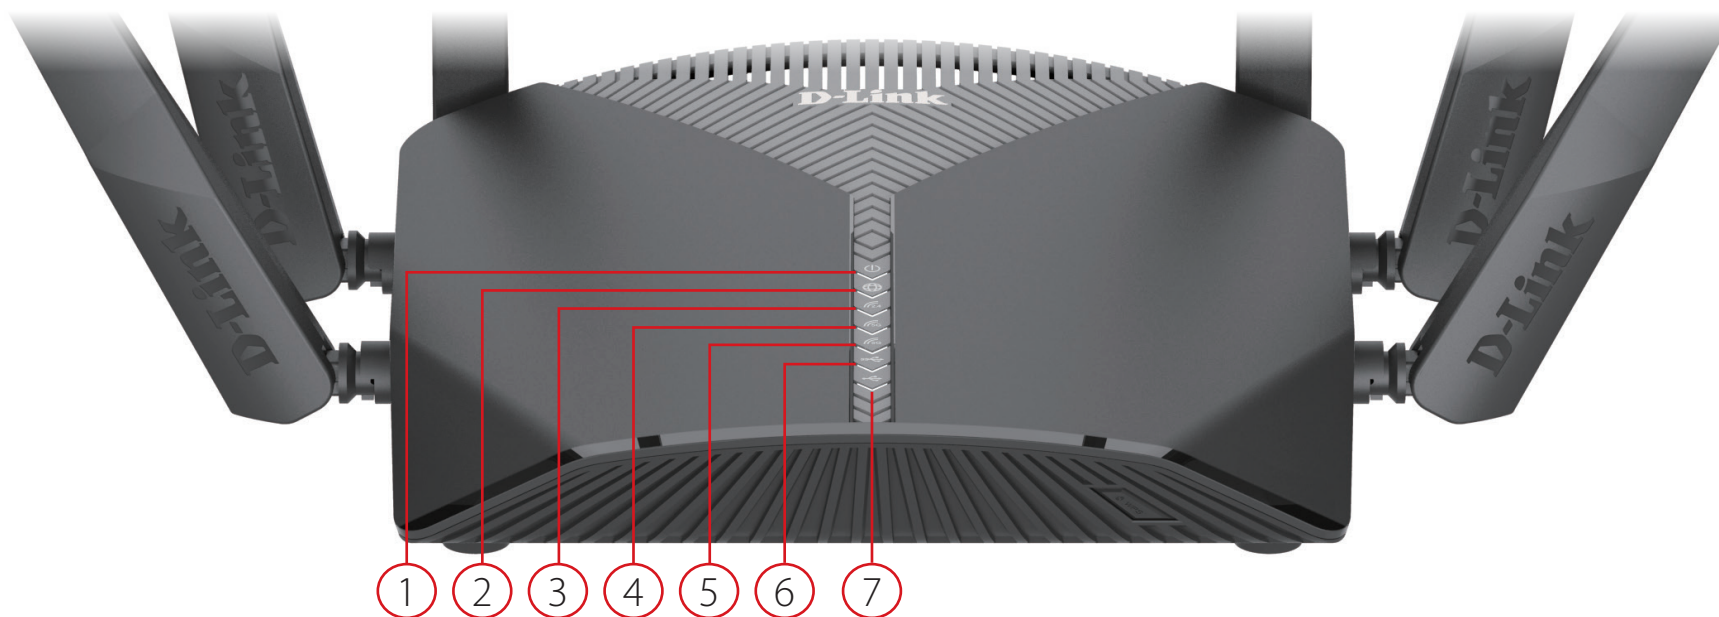

1	Power LED	A solid white light indicates a proper connection to the power supply. The light will be solid orange during boot up or during the factory reset process.
2	Internet LED	A solid white light indicates a connection on the Internet port. If the LED is orange, the router cannot connect to the Internet.
3	Wireless (2.4 GHz LED)	A solid light indicates that the 2.4 GHz wireless band is enabled.
4	Wireless (5 GHz LED)	A solid light indicates that the 5 GHz wireless band is enabled.
5	Wireless (2 nd 5 GHz LED)	A solid light indicates that the 2 nd 5 GHz wireless band is enabled.
6	Super Speed USB LED	A solid white light indicates a USB storage device is connected to the USB 3.0 port at the back of the router.
7	USB LED	A solid white light indicates a USB storage device is connected to the USB 2.0 port at the back of the router.

Back Panel

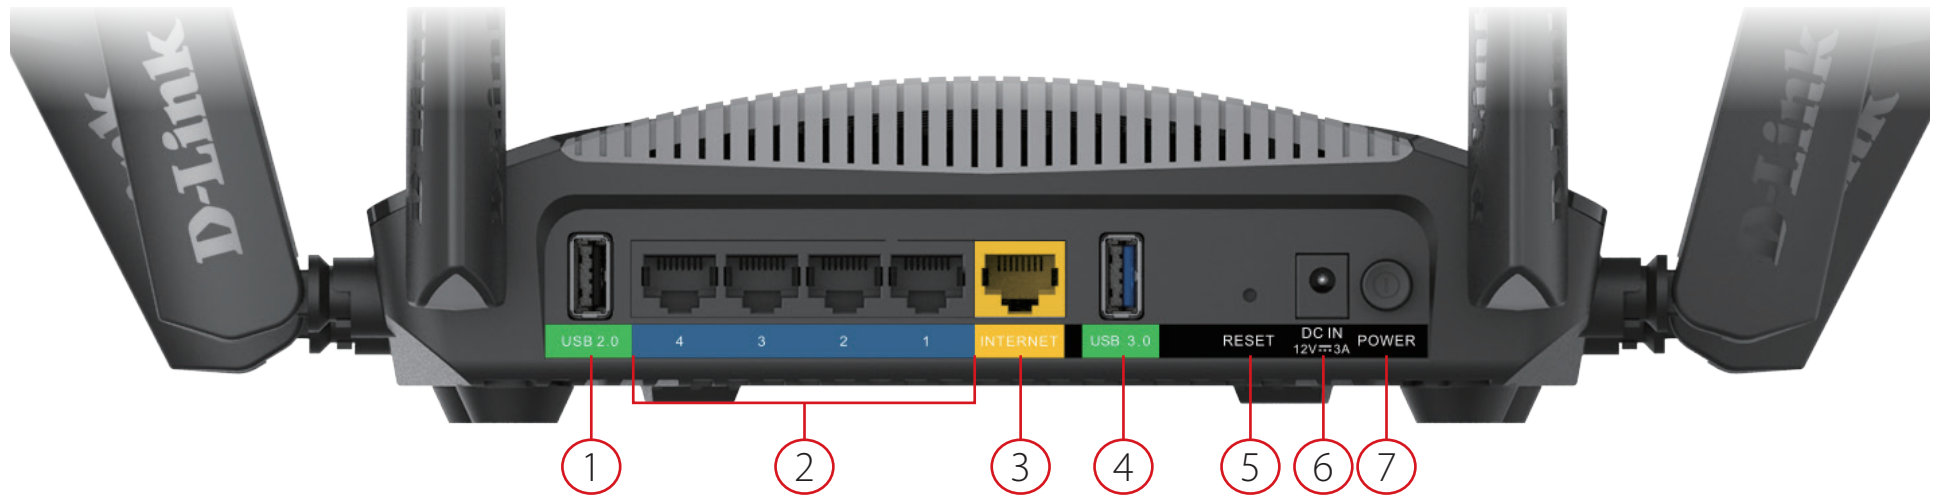

1	USB 2.0 Port	Connect a USB storage device to share files over the network.
2	Gigabit LAN Ports (1- 4)	Connect Ethernet devices such as computers, switches, storage (NAS) devices, and game consoles.
3	Gigabit WAN Port	Using an Ethernet cable, connect your broadband modem to this port.
4	USB 3.0 Port	Connect a USB storage device to share files over the network.
5	Reset Button	Insert a paperclip in the hole, wait for 10 seconds, and release to reset the router to default settings.
6	Power Connector	Connector for the supplied power adapter.
7	Power Button	Press the power button to power the device on or off.

Front Panel



1	WPS Button	Press to start the WPS process and automatically create an encrypted connection to a WPS client.
---	-------------------	--

Installation

This section will walk you through the installation of your DIR-3040.

Before you Begin

- Placement of the router is very important. Do not place the router in an enclosed area such as a closet, cabinet, attic, or garage.
- Configure the router with the computer that was last connected directly to your Internet connection. Verify that it is connected to the Internet before connecting additional devices.
- If your ISP provided you with a modem/router combo, you will need to set it to “bridge” mode so the router can work properly. Please contact your ISP or refer to the user manual for your modem/router device.
- You can only use the Ethernet port on your modem. If you were using the USB connection before using the router, then you must turn off your modem, disconnect the USB cable and connect an Ethernet cable to the Internet port on the router, and then turn the modem back on. In some cases, you may need to call your Internet Service Provider (ISP) to change connection types (USB to Ethernet).
- If connecting to a DSL modem, make sure to have your DSL service information provided by your Internet Service Provider handy. This information is likely to include your DSL account's Username and Password. Your ISP may also supply you with additional WAN configuration settings which might be necessary to establish a connection.
- If you are connecting a considerable amount of networking equipment, it may be a good idea to take the time to label each cable or take a picture of your existing setup before making any changes.
- If you have DSL and are connecting via PPPoE, make sure you disable or uninstall any PPPoE software such as WinPoET, BroadJump, or EnterNet 300 from your computer or you will not be able to connect to the Internet.

Wireless Installation Considerations

The D-Link wireless router lets you access your network using a wireless connection from virtually anywhere within the operating range of your wireless network. Keep in mind that the number, thickness and location of walls, ceilings, or other objects that the wireless signals must pass through may limit the range. Typical ranges vary depending on the types of materials and background RF (radio frequency) noise in your home or business. The key to maximizing wireless range is to follow these basic guidelines:

1. Keep the number of walls and ceilings between the D-Link router and other network devices to a minimum - each wall or ceiling can reduce your adapter's range from 3-90 feet (1-30 meters.) Position your devices so that the number of walls or ceilings is minimized.
2. Be aware of the direct line between network devices. A wall that is 1.5 feet thick (0.5 meters), at a 45-degree angle appears to be almost 3 feet (1 meter) thick. At a 2-degree angle it looks over 42 feet (14 meters) thick. Position devices so that the signal will travel straight through a wall or ceiling (instead of at an angle) for better reception.
3. Building materials make a difference. A solid metal door or aluminum studs may have a negative effect on range. Try to position access points, wireless routers, and computers so that the signal passes through drywall or open doorways. Materials and objects such as glass, steel, metal, walls with insulation, water (fish tanks), mirrors, file cabinets, brick, and concrete will degrade your wireless signal.
4. Keep your product away (at least 3-6 feet or 1-2 meters) from electrical devices or appliances that generate RF noise.
5. If you are using 2.4 GHz cordless phones, your wireless connection may degrade dramatically or drop completely. Make sure your 2.4 GHz phone base is as far away from your wireless devices as possible. The base transmits a signal even if the phone is not in use.

Setup

There are several different ways you can configure your router to connect to the Internet

- **D-Link Wi-Fi App** - Use your compatible Android or iOS device to install and configure your router. Refer to **D-Link Wi-Fi App Setup** on page **10**.
- **Hardware Setup** - This section explains how to setup your DIR-3040. Refer to **Hardware Setup** on page **12**.
- **D-Link Setup Wizard** - This wizard will launch when you log into the router by using your PC for the first time. Refer to **Setup Wizard** on page **15**.
- **Manual Setup** - Log in to the router to manually configure your router. Refer to **Configuration** on page **22**

D-Link Wi-Fi App Setup

The D-Link Wi-Fi app allows you to install and configure your DIR-3040 from your compatible Android or iOS device.

Note: *The screenshots may be different depending on your mobile device's OS version. The following steps show the iOS interface of the D-Link Wi-Fi app. If you are using an Android device, the appearance may be different from that of the screenshots, but the process is the same.*

Step 1

Search and install the free **D-Link Wi-Fi** app available on the App Store or on Google Play. You can also scan the QR code on the right, which will take you to the respective D-Link Wi-Fi app store page.



Step 2


Launch the D-Link Wi-Fi app from the home screen of your device.



D-Link Wi-Fi

Step 3

Tap on the **Install New Device** button at the middle of the screen.

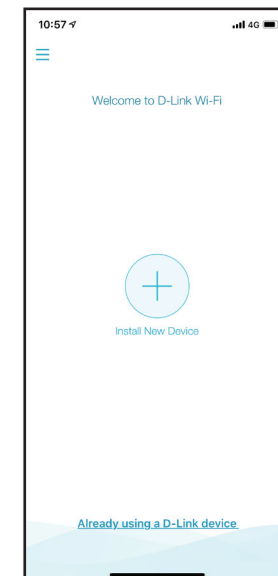



Step 4

Tap **Yes** to scan the setup QR code located in the Quick Install Card and proceed to step 6. Alternatively, you can tap **No** to proceed to step 5.



Step 5

Select **Router** and select **DIR-3040** from the list of available devices. Tap **Next** to continue.

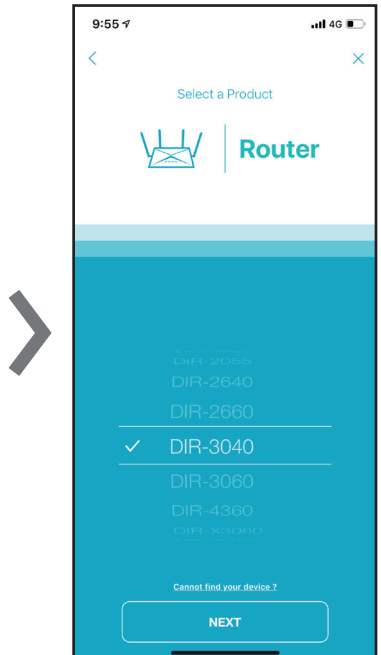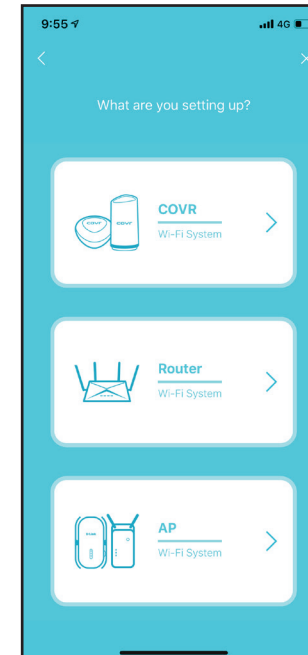


Step 6

You will now be guided through a step-by-step process for setting up your router. Simply follow the on-screen instructions to continue the installation and the configuration process.

Hardware Setup


Step 1

The DIR-3040 is designed to give you the fastest, most stable network connection possible. In order to maximize performance, fully extend the antennas into a 105 degree angle to provide optimal wireless coverage. Keep the router in an open area for better wireless coverage.

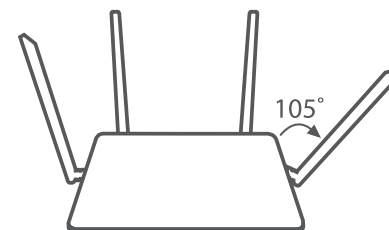


Step 2

Position your DIR-3040 near your Internet-connected modem. Place it in an open area for better wireless coverage.

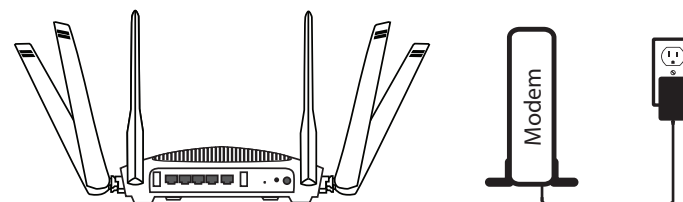


Step 3

Turn off and unplug the power to your cable or DSL broadband modem. This is required. In some cases, you may need to turn it off for up to five minutes.

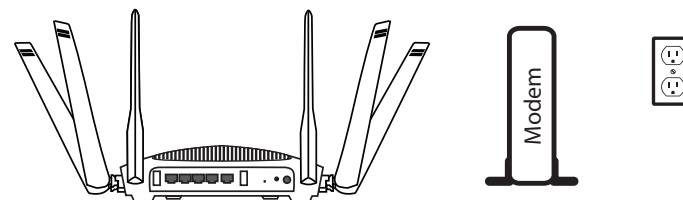


Step 4

Use the Ethernet cable to connect your modem to the port labelled **INTERNET** on the router.

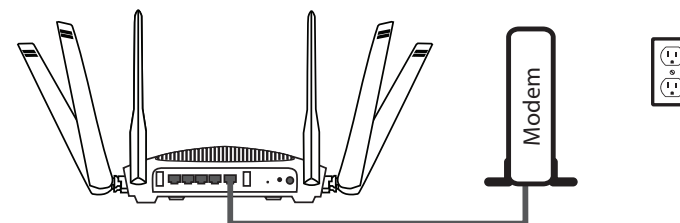


Step 5

Plug in and turn your modem back on and wait approximately one minute before proceeding.

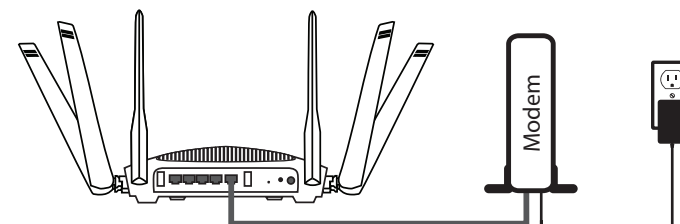


Step 6

Connect the supplied power adapter to the router and a power outlet, press the power button, and wait approximately one minute until the LED indicator on the front of the device changes from orange to solid white.

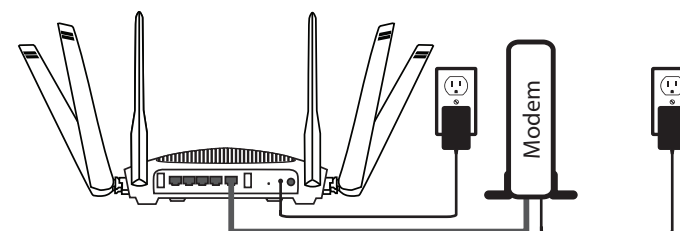


Step 7

If you are configuring the router wirelessly from a PC, connect to the Wi-Fi network printed on the label attached to the bottom of your router or in the Quick Installation Card.

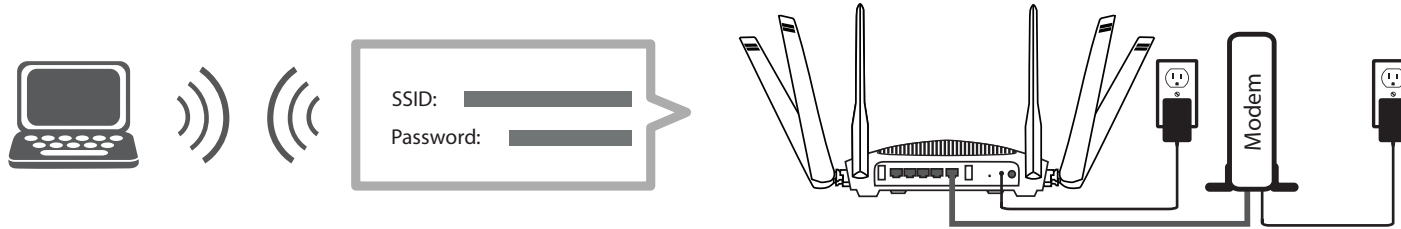

If you are configuring the router from a PC with a wired Ethernet connection, plug one end of an Ethernet cable into the port labeled 1 on the back of the router, and the other end into the Ethernet port on your computer.

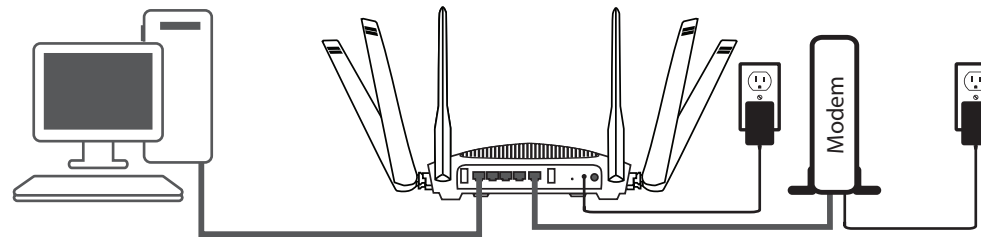

Step 8


 
If you are connecting to a broadband service that uses a dynamic connection (not PPPoE), you may be online already. Try opening a web browser and connecting to a website. If the website does not load, proceed to **Setup Wizard** on page 15.

Setup Wizard


The setup wizard is designed to guide you through a step-by-step process to configure your new DIR-3040 and connect to the Internet via a wireless setup process.

If this is your first time installing the router, open your web browser and enter **http://dlinkrouter.local/** in the address bar. Alternatively, enter the IP address of the router (default: **http://192.168.0.1**).

If this is your first time logging in to the and no connection has been established, the setup wizard will automatically appear instead of the log in page. If the setup process was not previously completed, then log in to the interface by leaving the password field blank.

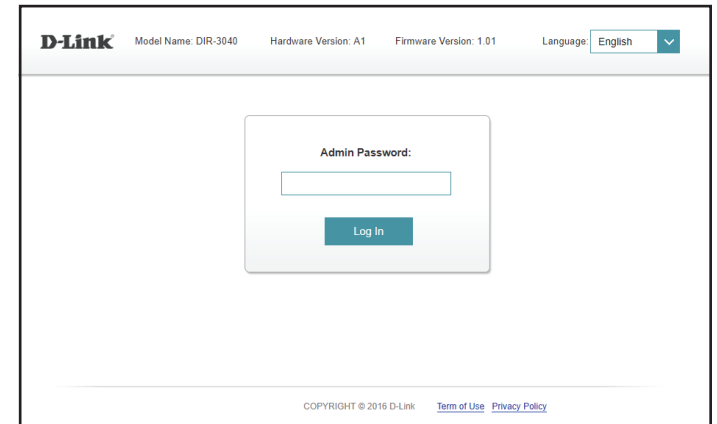


Agree to the Terms of Use and Privacy Policy before proceeding.

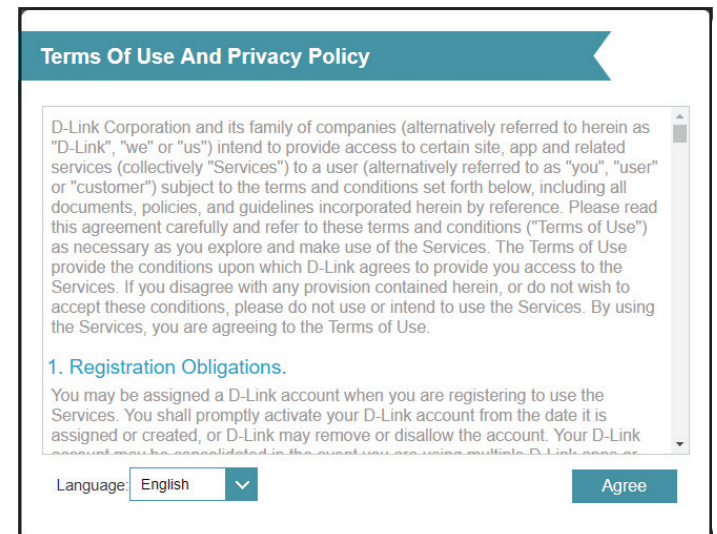


Follow the on-screen instructions to configure your new D-Link router and connect to the Internet.

Click **Next** to continue.

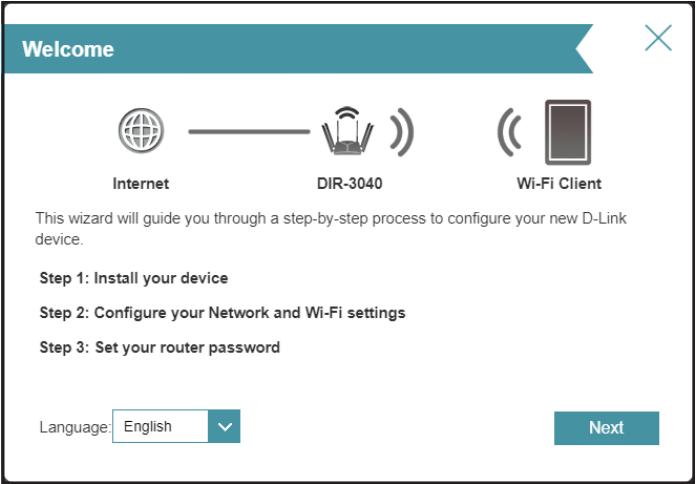


Please wait while your router detects your Internet connection type.

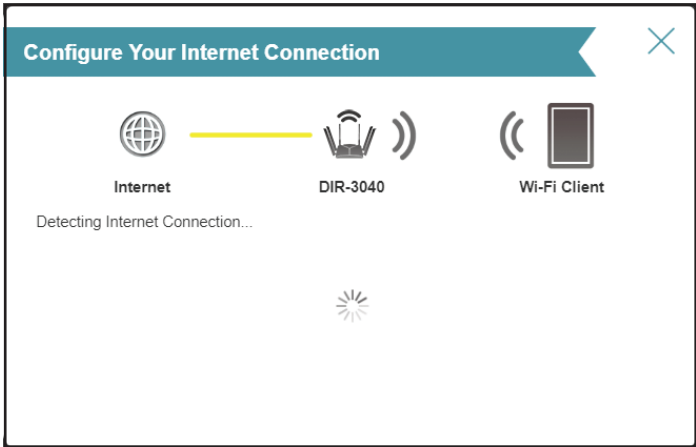

If the router does not detect a valid Internet connection, a list of connection types to choose from will be displayed. Select your Internet connection type (this information can be obtained from your Internet Service Provider).

Click **Next** to continue.

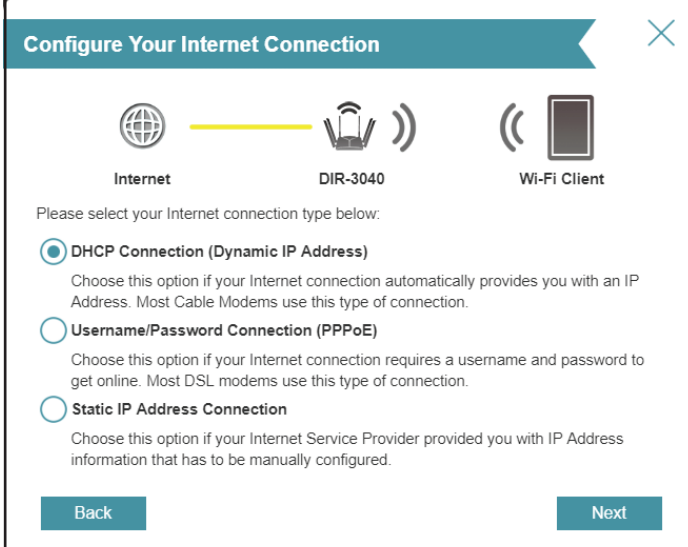

Configure Your Internet Connection

Internet DIR-3040 Wi-Fi Client

Please select your Internet connection type below:


- ☒ **DHCP Connection (Dynamic IP Address)**
Choose this option if your Internet connection automatically provides you with an IP Address. Most Cable Modems use this type of connection.
- ☐ **Username/Password Connection (PPPoE)**
Choose this option if your Internet connection requires a username and password to get online. Most DSL modems use this type of connection.
- ☐ **Static IP Address Connection**
Choose this option if your Internet Service Provider provided you with IP Address information that has to be manually configured.

Back Next

If the router detected or you selected **PPPoE**, enter your PPPoE username and password. If you do not have this information, please contact your ISP.

Click **Next** to continue.

Note: Make sure to remove all other existing PPPoE software from your computer. The software is no longer needed and will not work through a router.

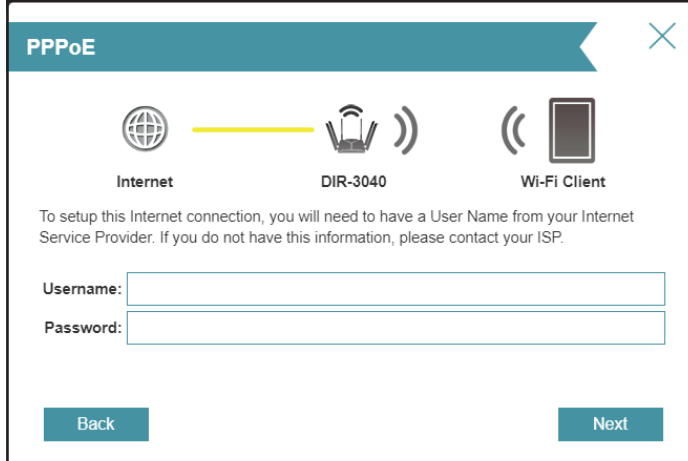

PPPoE

Internet DIR-3040 Wi-Fi Client

To setup this Internet connection, you will need to have a User Name from your Internet Service Provider. If you do not have this information, please contact your ISP.


Username:

Password:

Back Next

If the router detected or you selected **Static**, enter the IP and DNS settings supplied by your ISP. If you do not have this information, please contact your ISP.

Click **Next** to continue.

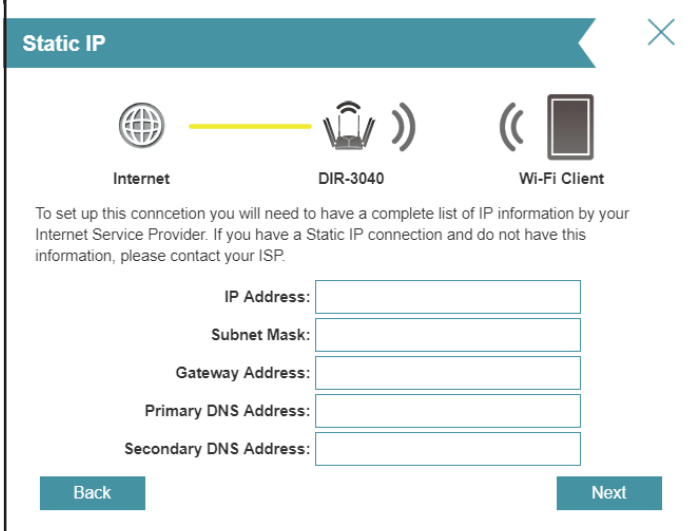

Static IP

Internet — DIR-3040 — Wi-Fi Client

To set up this connection you will need to have a complete list of IP information by your Internet Service Provider. If you have a Static IP connection and do not have this information, please contact your ISP.

IP Address:

Subnet Mask:

Gateway Address:

Primary DNS Address:


Secondary DNS Address:

Back Next

Type in a **Wi-Fi Network Name** and **Wi-Fi Password** to setup your Wi-Fi network. Your wireless clients will need to have this passphrase to be able to connect to your wireless network.

Click **Next** to continue.

Note: The router's Smart Connect feature presents a single wireless network. When connecting clients to an extension network, they will be automatically added to the best band, either 2.4 GHz or 5 GHz. To disable the Smart Connect feature and individually configure 2.4 GHz and 5 GHz networks, refer to **Wireless** on page **60**.

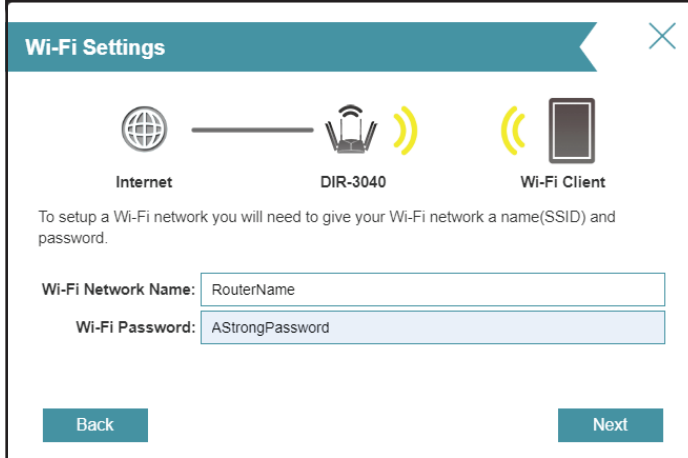

Wi-Fi Settings

Internet — DIR-3040 — Wi-Fi Client

To setup a Wi-Fi network you will need to give your Wi-Fi network a name(SSID) and password.


Wi-Fi Network Name:

Wi-Fi Password:

Back Next

In order to restrict the router's configuration access, please enter a password. You will be prompted for this password every time you want to use the router's web configuration utility.


Click **Next** to continue.

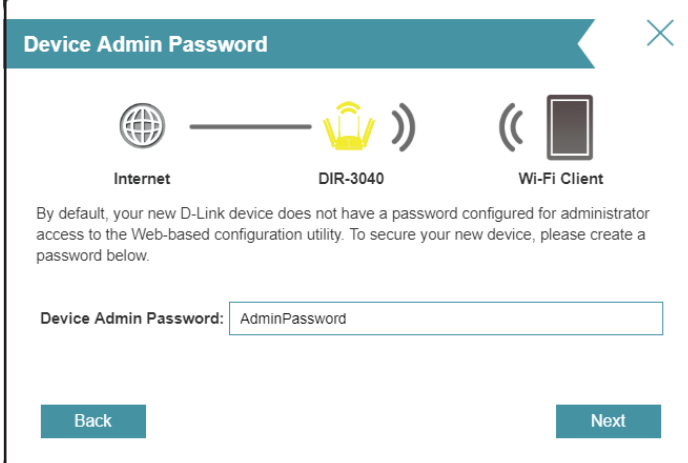

The screenshot shows the 'Device Admin Password' configuration screen. At the top, there is a teal header with the title 'Device Admin Password' and a close button (X). Below the header, a network diagram shows 'Internet' connected to 'DIR-3040' (the router), which is then connected to a 'Wi-Fi Client'. The text below the diagram states: 'By default, your new D-Link device does not have a password configured for administrator access to the Web-based configuration utility. To secure your new device, please create a password below.' There is a text input field labeled 'Device Admin Password:' containing the text 'AdminPassword'. At the bottom, there are two buttons: 'Back' on the left and 'Next' on the right.

Select your time zone from the drop-down menu.

Click **Next** to continue.

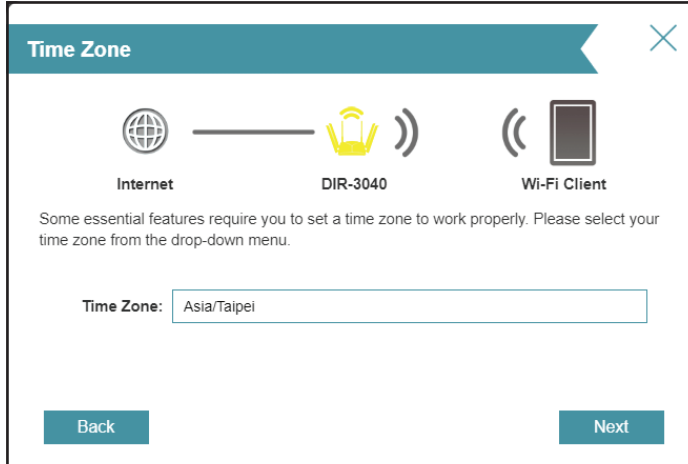

The screenshot shows the 'Time Zone' configuration screen. At the top, there is a teal header with the title 'Time Zone' and a close button (X). Below the header, the same network diagram as the previous screen is shown. The text below the diagram states: 'Some essential features require you to set a time zone to work properly. Please select your time zone from the drop-down menu.' There is a text input field labeled 'Time Zone:' containing the text 'Asia/Taipei'. At the bottom, there are two buttons: 'Back' on the left and 'Next' on the right.

Keeping your router's firmware up-to-date provides you with the latest features over the air. Choose whether to keep your device up-to-date automatically or to manage the device updates by yourself.

Click **Next** to continue.

Install Updates Automatically



Always Update provides latest protection and new feature over the air, gives your device fresh and sound firmware.

☒

Keep my device up to date automatically.

☐

I want to manage the device updates myself.

Back

Next

You will be presented with a summary of your settings.

Click **Next** to finalize the settings or **Back** to make changes.

Summary


Internet


DIR-3040


Wi-Fi Client

Below is a summary of your Wi-Fi security and device password settings. Please note down your settings and click "Next".


Connection Type:	Dynamic IP (DHCP)
Wi-Fi Network Name:	RouterName
Wi-Fi Password:	AStrongPassword
Device Admin Password:	AdminPassword

Back

Next

Please wait while the device settings are saved.

Do not turn off or unplug your router during this time.

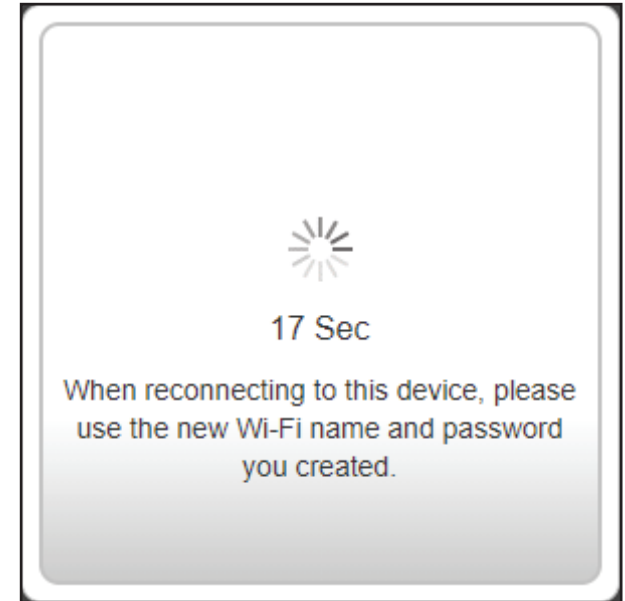


Your new settings have been saved and your router is now configured.

Click **OK** to close the Setup Wizard.


Congratulations, your device has been successfully configured!

You can log in to the configuration utility by inputting the Admin Password.

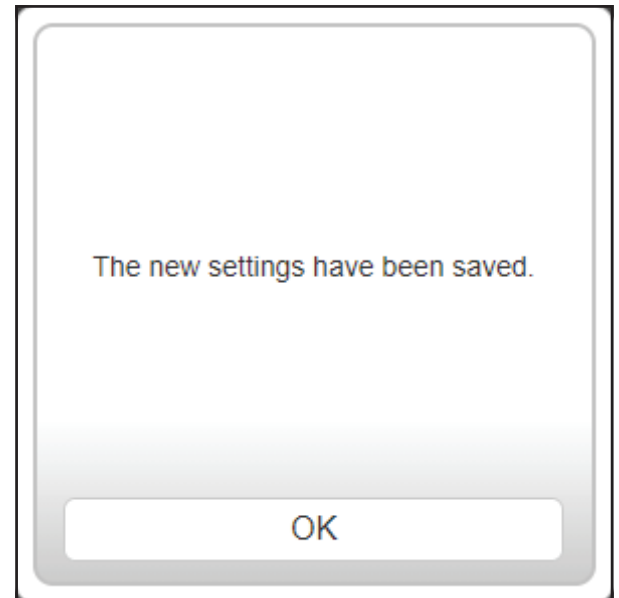


Configuration

 To access the configuration utility, open your web-browser and enter **http://dlinkrouter.local./** or you may also connect by typing the IP address of the router (by default this is **http://192.168.0.1**) in the address bar.



Enter your password. If you previously followed the setup wizard, please use the admin password you entered during the wizard. Otherwise, leave the password blank. Click **Log In** to proceed.


Note: *If you cannot remember your password and cannot log in, use a paperclip to press the recessed **Reset** button on the back of the device for longer than 10 seconds to restore the router to its default settings.*

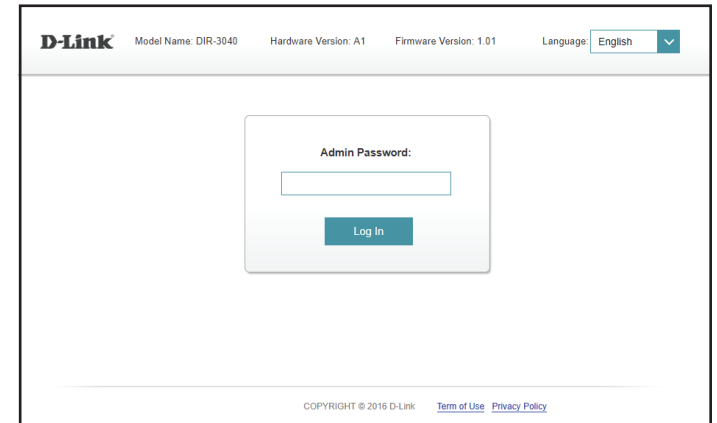

The router's home page will open displaying its current connection status.

The bar at the top of the page has quick access to **Settings**, **Features** and **Management** functions. You can quickly jump back Home at any time.

Note: *The system will automatically log out after a period of inactivity.*


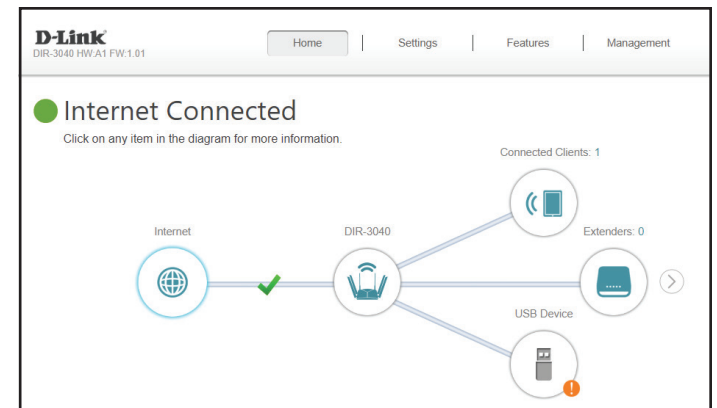


Home

The Home page displays the current status of the router in the form of an interactive diagram. You can click each icon to display information about each part of the network at the bottom of the screen. The menu bar at the top of the page will allow you to quickly navigate to other pages.

The Home page displays whether or not the router is currently connected to the Internet.

If it is disconnected, click **Click to repair** to bring up the setup wizard, refer to the **Setup Wizard** on page **15** for more information.

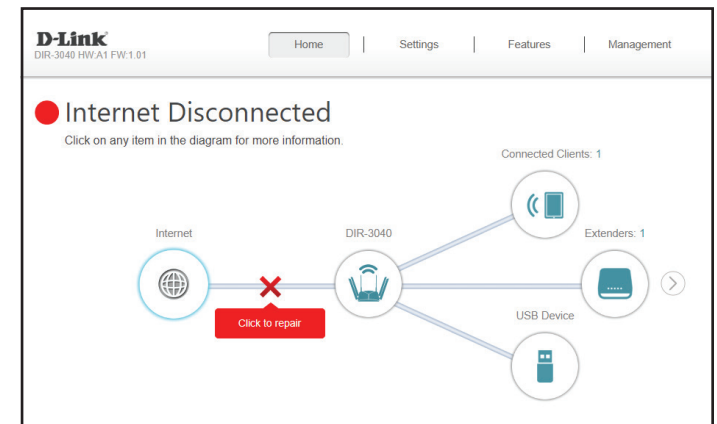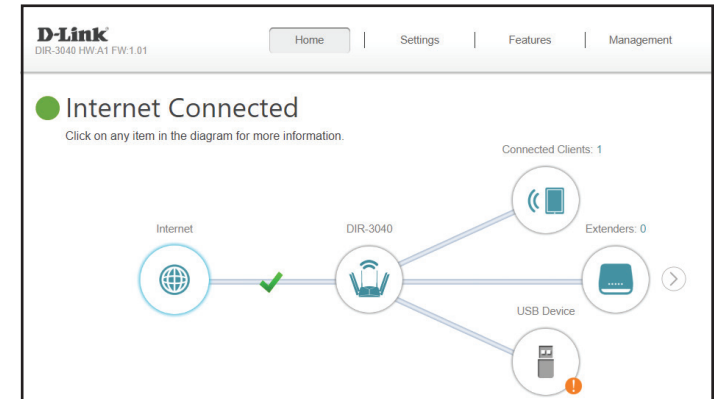

Internet

To bring up more details about your Internet connection, click on the **Internet** icon.

Click **IPv4** or **IPv6** to see details of the IPv4 connection and IPv6 connection respectively.

Click **Release IP Address** to disconnect from the Internet. If you do this and wish to reconnect, click **Renew**.

To reconfigure the Internet settings, refer to **Internet - IPv4** on page 33

The screenshot displays the D-Link DIR-3040 web interface. At the top, the navigation bar includes 'Home', 'Settings', 'Features', and 'Management'. The main heading is 'Internet Connected' with a green status indicator and a note to 'Click on any item in the diagram for more information.' Below this is a network diagram showing the 'Internet' connected to the 'DIR-3040' router, which is then connected to 'Connected Clients: 1', 'Extenders: 0', and a 'USB Device'. The 'Internet' section is expanded, showing a table of connection details. The table has two tabs: 'IPv4' (selected) and 'IPv6'. The 'IPv4' tab shows the following information:

IPv4	
Cable Status:	Connected
Connection Type:	Dynamic IP (DHCP)
Network Status:	Connected
Connection Uptime:	0 Day 0 Hour 9 Min 36 Sec
MAC Address:	74.DA.DA.D9.1C.09
IP Address:	172.17.6.39
Subnet Mask:	255.255.255.0
Default Gateway:	172.17.6.254
Primary DNS Server:	192.168.168.201
Secondary DNS Server:	192.168.168.249

Below the table, there is a 'Release IP Address' button.

DIR-3040

Click on the **DIR-3040** icon to view details about the router and its wireless settings.

Here you can see the router's current Wi-Fi network name and password, as well as the router's MAC address, IPv4 address, and IPv6 address.

To reconfigure the network settings, either click **Go to settings** on the lower left, or click **Settings** (at the top of the page) and then **Network** on the menu that appears. Refer to **Network** on page 67 for more information.

To reconfigure the wireless settings, either click **Go to settings**, on the lower right, or click **Settings** (at the top of the page) and then **Wireless** on the menu that appears. Refer to **Wireless** on page 60 for more information.



Connected Clients

Click on the **Connected Clients** icon to view details about the connected clients to the router and their wireless settings.

On this page you can see all the clients currently connected to the router, and their IP addresses.

To edit each client's settings, click the pencil icon on the client you want to edit.



Edit Rule	
Name	Enter a custom name for this client.
Vendor	Displays the vendor of the client.
MAC Address	Displays the MAC address of the client.
IP Address	Displays the current IP address of the client.
Reserve IP	Enable to reserve an IP address for the client.
IP Address (Reserved)	Specify an IP address for the router's DHCP server to assign.
Parental Control	Enable Parental Control for the client to specify whether it is allowed network access.
Schedule	Use the drop-down menu to select the time schedule that the Parental Controls will be enabled for. The schedule may be set to Always OFF meaning that the client will always be blocked from accessing the network, or you can create your own schedules in the Schedules section to specify the times that the client is allowed to access the network. Refer to Time & Schedule - Schedule on page 89 for more information.

Click **Save** when you are done.

Edit Rule

Name:08626PCWIN10

Vendor: D-Link International

MAC Address: c8:d3:a3:03:43:86

IP Address: 192.168.0.106

Reserve IP:Enabled

Remaining: 24

IP Address (Reserved):

Parental Control:Enabled

Schedule:Always OFF

Save

Extenders

Click on the **Extenders** icon to view details about the connected extenders to the router and their wireless settings.

On this page you can see all the extenders currently connected to the router, and configure them.

To edit each extender's settings, click the pencil icon on the extender you want to edit.



Edit Rule	
Name	Enter a custom name for this extender.
MAC Address	Displays the MAC address of the extender.
Click Save when you are done.	

Edit Rule



Name:

MAC Address: 58:d5:6e:36:71:a8

Save

Click the settings cog on the bottom right of the extender you wish to configure to either **Reboot** the device or to **Remove** the device from the network.

Click the arrow next to the Extenders icon to access information regarding your Mesh Network. For more information regarding your Mesh Network, refer to **Mesh Network** on page **30**.

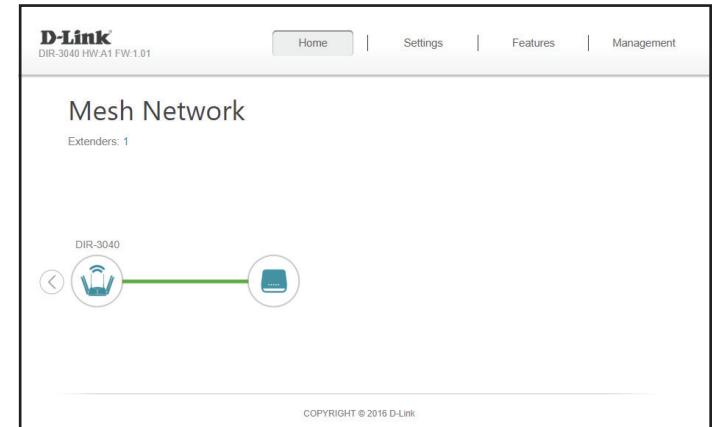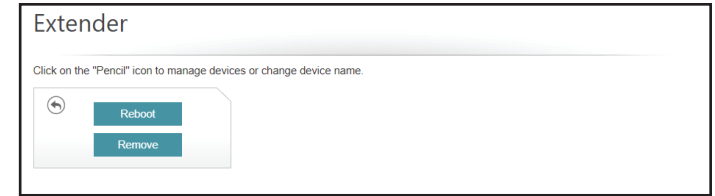


Mesh Network

D-Link's Wi-Fi Mesh is a scalable solution that allows you to easily increase the coverage of your home or office wireless AC network. Expand your Wi-Fi coverage by adding compatible D-Link access points. Mix and match suitable D-Link devices according to your budget and preferences to fit any floorplan. Setup is effortless; configuration of multiple access points can be done in minutes as settings can be passed on to other access points once the first access point is configured.

Wi-Fi Mesh intelligently finds the shortest/fastest path to your router. So even if you have eight mesh nodes, you can count on Wi-Fi Mesh to push your 4K streaming movies and intense VR games to your device at lightning speeds. Wi-Fi Mesh can also automatically detect malfunctioning nodes and reroute the connection to your working mesh devices.

The Mesh Network page gives you an instant, up-to-date overview of your mesh network topology complete with intuitive routing paths, bottle-necks and weak spots.

Please refer to **Wi-Fi Mesh** on page **60** for Wi-Fi Mesh configuration options.

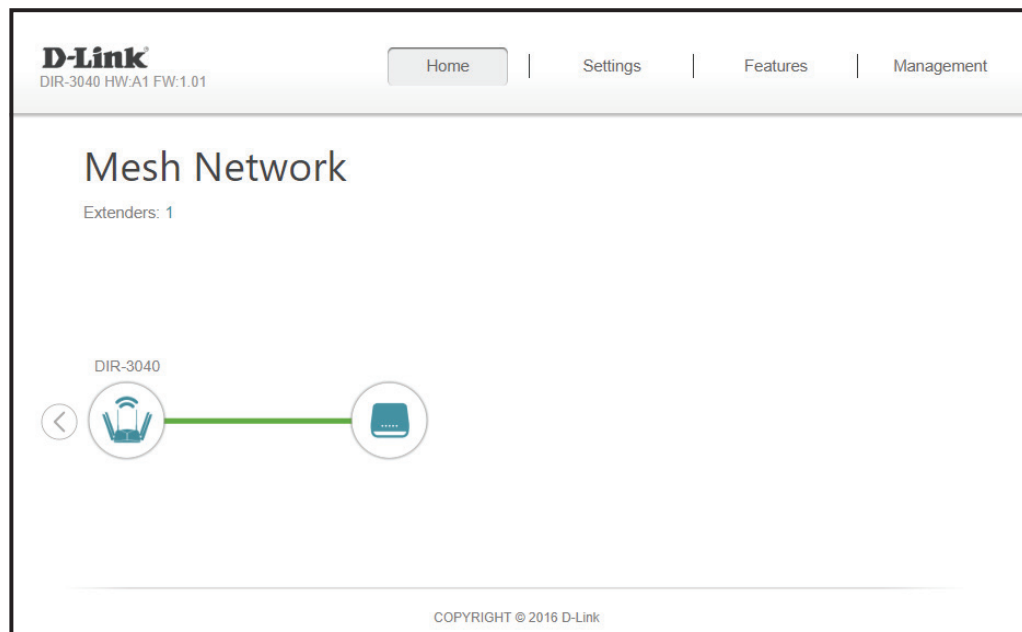


USB Device

Click on the USB Device icon to view details about the currently connected USB storage device, UPnP media server, Windows File Sharing, and FTP.

If you have a USB device connected, you can see its name and how much free space it has.


To reconfigure the USB sharing settings, either click **Go to settings** on the lower right, or click **Settings** (at the top of the page) and then **USB Sharing** on the drop down menu that appears. Refer to **USB Sharing** on page 69 for more information.

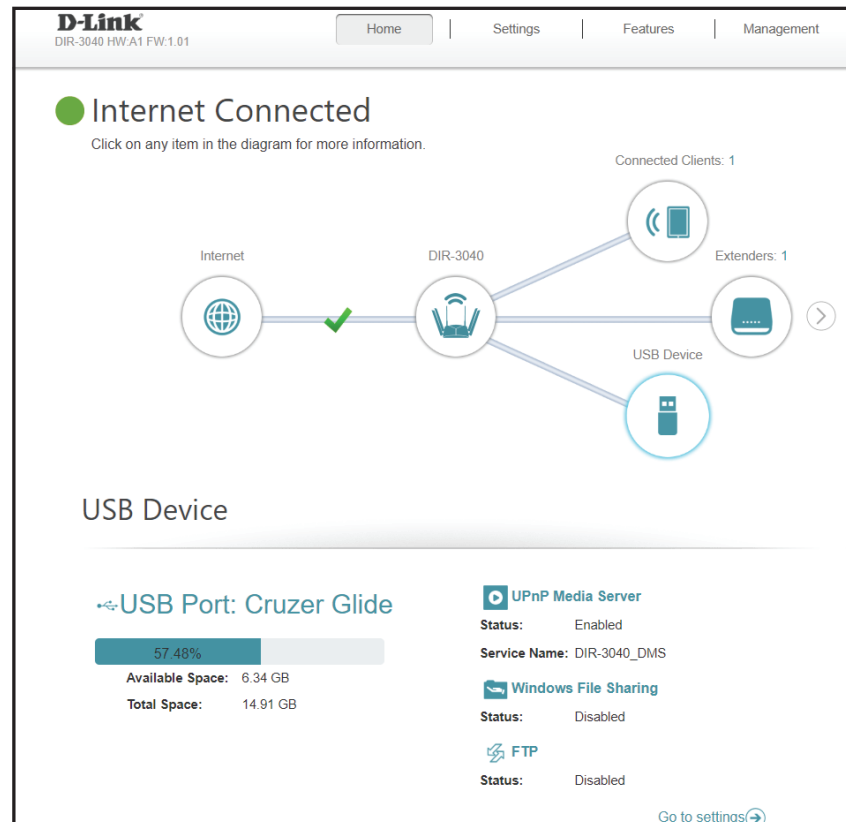

Settings Wizard

In the Settings menu on the bar at the top of the page, click **Wizard** to open the setup wizard. This is the same wizard that appears when you start the router for the first time. Refer to **Setup Wizard** on page **15** for details.

Note: *When the Wizard is opened, the router will disconnect from the internet.*

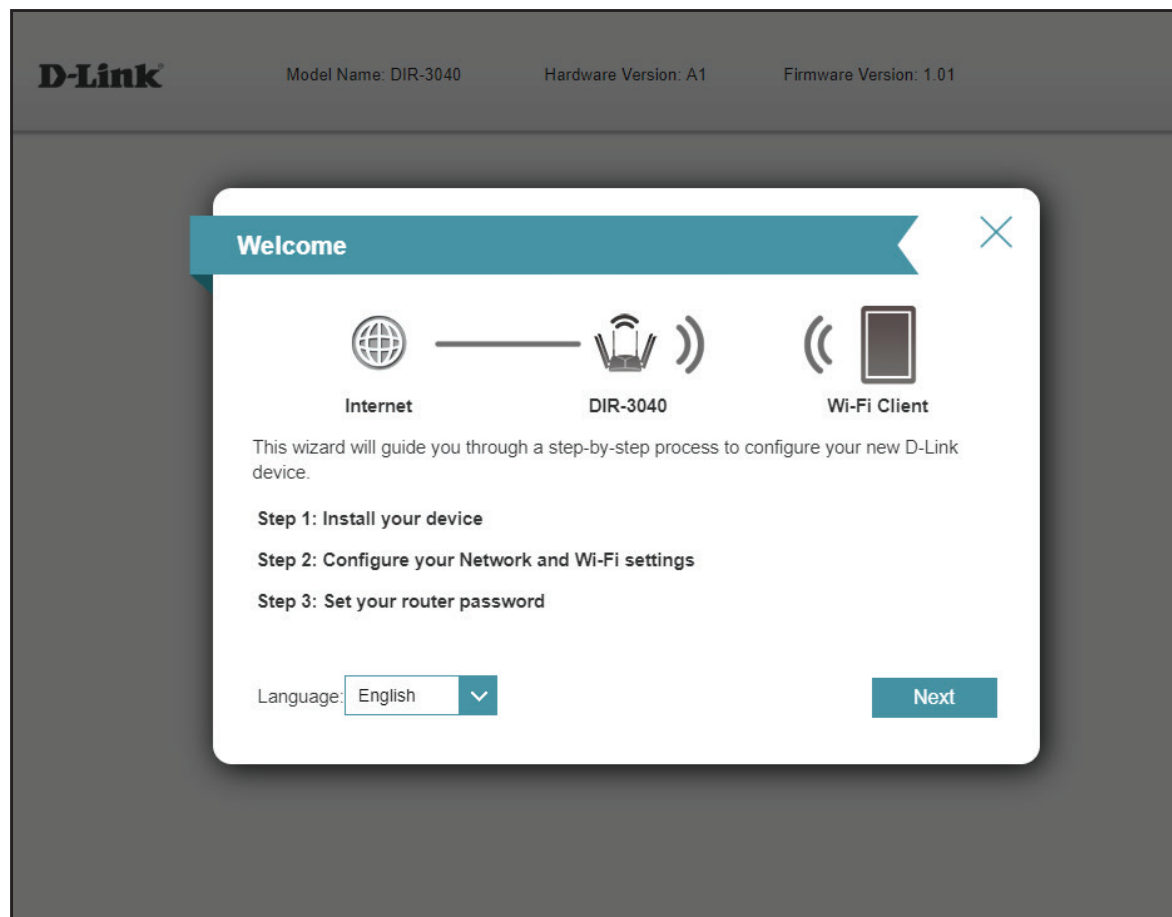

Internet - IPv4

In the Settings menu on the bar at the top of the page, click **Internet** to see the Internet configuration options for the IPv4 connection details.

To configure the IPv6 Internet and network connection details, click the **IPv6** link. Refer to **Internet - IPv6** on page **43**

To configure the VLAN connection details, click the **VLAN** link. Refer to **Internet - VLAN** on page **58**

Click **Save** at any time to save the changes you have made on this page.

My Internet Connection is

Choose your Internet connection type from the drop-down menu. You will be presented with the appropriate options for your connection type.

For **IPv4 - Dynamic IP (DHCP)** refer to page **34**


For **IPv4 - Static IP** refer to page **35**

For **IPv4 - PPPoE** refer to page **36**

For **IPv4 - PPTP** refer to page **38**

For **IPv4 - L2TP** refer to page **40**

For **IPv4 - DS-Lite** refer to page **42**

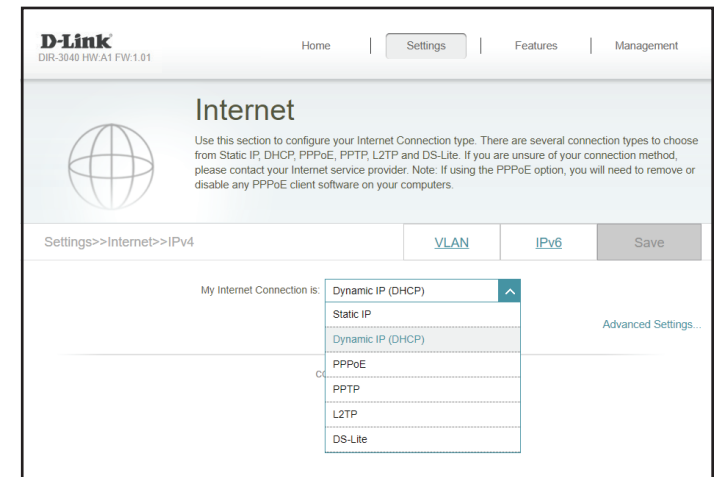

IPv4 - Dynamic IP (DHCP)

Select **Dynamic IP (DHCP)** to obtain IP address information automatically from your Internet Service Provider (ISP). Select this option if your ISP does not specify an IP address to use. Click **Save** at any time to save the changes you have made on this page.

Advanced Settings...

Host Name	The host name is optional but may be required by some ISPs. Leave it blank if you are not sure.
Primary DNS Server	Enter the primary DNS server IP address assigned by your ISP. This address is usually obtained automatically from your ISP.
Secondary DNS Server	Enter the secondary DNS server IP address assigned by your ISP. This address is usually obtained automatically from your ISP.
MTU	Maximum Transmission Unit - you may need to change the MTU for optimal performance with your ISP.
MAC Address Clone	The default MAC address is set to the Internet port's physical interface MAC address on the router. You can use the drop-down menu to replace the Internet port's MAC address with the MAC address of a connected client.

The screenshot shows the D-Link DIR-3040 Internet Settings page. The breadcrumb trail is Settings > Internet > IPv4. The 'My Internet Connection is:' dropdown is set to 'Dynamic IP (DHCP)'. Below this, there are input fields for 'Host Name', 'Primary DNS Server', 'Secondary DNS Server', and 'MTU' (set to 1500). The 'MAC Address Clone' dropdown is set to '<< MAC Address'. The page includes a 'Save' button and a copyright notice at the bottom: COPYRIGHT © 2016 D-Link.

IPv4 - Static IP

Select **Static IP** if your IP information is provided by your Internet Service Provider (ISP). Click **Save** at any time to save the changes you have made on this page.

- IP Address

Enter the IP address provided by your ISP.
- Subnet Mask

Enter the subnet mask provided by your ISP.
- Default Gateway

Enter the default gateway address provided by your ISP.
- Primary DNS Server

Enter the primary DNS server IP address assigned by your ISP.

D-Link

DIR-3040 HW:V1 FW:1.01

Home

Settings

Features

Management

Internet

Use this section to configure your Internet Connection type. There are several connection types to choose from Static IP, DHCP, PPPoE, PPTP, L2TP and DS-Lite. If you are unsure of your connection method, please contact your Internet service provider. Note: If using the PPPoE option, you will need to remove or disable any PPPoE client software on your computers.

Settings>>Internet>>IPv4

VLAN

IPv6

Save

My Internet Connection is:

Static IP

IP Address:

Subnet Mask:

Default Gateway:

Primary DNS Server:

Advanced Settings...

COPYRIGHT © 2016 D-Link

- Advanced Settings...

Secondary DNS Server

Enter the secondary DNS server IP address assigned by your ISP.
- MTU

Maximum Transmission Unit - you may need to change the MTU for optimal performance with your ISP.
- MAC Address Clone

The default MAC address is set to the Internet port's physical interface MAC address on the router. You can use the drop-down menu to replace the Internet port's MAC address with the MAC address of a connected client.

Advanced Settings...

Secondary DNS Server:

MTU:

1500

MAC Address Clone:

<< MAC Address

COPYRIGHT © 2016 D-Link

IPv4 - PPPoE

Select **PPPoE** if your ISP provides and requires you to enter a PPPoE username and password in order to connect to the Internet. Click **Save** at any time to save the changes you have made on this page.


- Username

Enter the username provided by your ISP.
- Password

Enter the password provided by your ISP.
- Reconnect Mode

Select either **Always on**, **On Demand**, or **Manual**.
- Maximum Idle Time


Configurable when **On Demand** is selected. Enter a maximum idle time during which the Internet connection is maintained during inactivity. To disable this feature, select **Always on** as the reconnect mode.

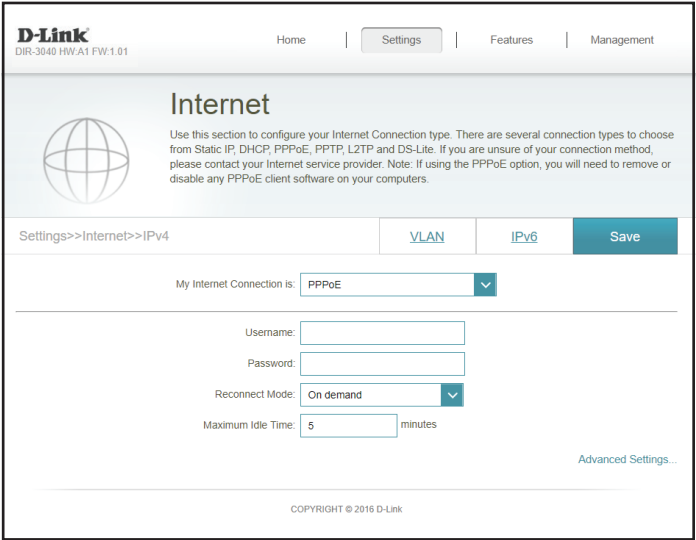

Advanced Settings...

- Address Mode

Select **Static IP** if your ISP assigned you the IP address, subnet mask, gateway, and DNS server addresses. In most cases, select **Dynamic IP**.

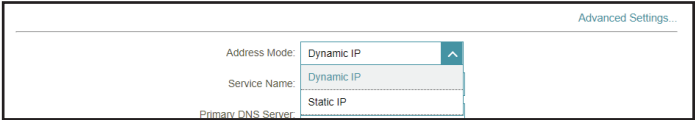

Advanced Settings... - Dynamic IP	
Address Mode	Shows your chosen address mode.
Service Name	Enter the ISP service name (optional)
Primary DNS Server	Enter the primary DNS server IP address assigned by your ISP.
Secondary DNS Server	Enter the secondary DNS server IP address assigned by your ISP.
MTU	Maximum Transmission Unit - you may need to change the MTU for optimal performance with your ISP.
MAC Address Clone	The default MAC address is set to the Internet port's physical interface MAC address on the router. You can use the drop-down menu to replace the Internet port's MAC address with the MAC address of a connected client.

Advanced Settings...

Address Mode: Dynamic IP

Service Name:

Primary DNS Server:

Secondary DNS Server:

MTU: 1492

MAC Address Clone: << MAC Address

COPYRIGHT © 2016 D-Link

Advanced Settings... - Static IP	
Address Mode	Displays your chosen address mode.
IP Address	Enter the IP address provided by your ISP.
Service Name	Enter the ISP service name (optional)
Primary DNS Server	Enter the primary DNS server IP address assigned by your ISP.
Secondary DNS Server	Enter the secondary DNS server IP address assigned by your ISP.
MTU	Maximum Transmission Unit - you may need to change the MTU for optimal performance with your ISP.
MAC Address Clone	The default MAC address is set to the Internet port's physical interface MAC address on the router. You can use the drop-down menu to replace the Internet port's MAC address with the MAC address of a connected client.

Advanced Settings...

Address Mode: Static IP

IP Address:

Service Name:

Primary DNS Server:

Secondary DNS Server:

MTU: 1492

MAC Address Clone: << MAC Address

COPYRIGHT © 2016 D-Link

IPv4 - PPTP

Choose **PPTP** (Point-to-Point-Tunneling Protocol) if your Internet Service Provider (ISP) uses a PPTP connection. Your ISP will provide you with a username and password. Click **Save** at any time to save the changes you have made on this page.

PPTP Server Enter the PPTP server IP address provided by your ISP.

Username Enter the username provided by your ISP.

Password Enter the password provided by your ISP.

Reconnect Mode Select either **Always on**, **On Demand**, or **Manual**.

Maximum Idle Time Configurable when **On Demand** is selected. Enter a maximum idle time during which the Internet connection is maintained during inactivity. To disable this feature, select **Always on** as the reconnect mode.

The screenshot shows the 'Internet' configuration page for a D-Link DIR-3040 router. The breadcrumb trail is 'Settings > Internet > IPv4'. There are tabs for 'VLAN' and 'IPv6', and a 'Save' button. The 'My Internet Connection is:' dropdown is set to 'PPTP'. Below this, there are input fields for 'PPTP Server' (with a hint 'IP or Domain name'), 'Username', and 'Password'. The 'Reconnect Mode' dropdown is set to 'On demand', and the 'Maximum Idle Time' is set to '5 minutes'. An 'Advanced Settings...' link is at the bottom right. The footer says 'COPYRIGHT © 2016 D-Link'.

Advanced Settings...

Address Mode Select **Static IP** if your ISP assigned you the IP address, subnet mask, gateway, and DNS server addresses. In most cases, select **Dynamic IP**.

This screenshot shows the 'Advanced Settings...' section for IPv4. It contains three dropdown menus: 'Address Mode' (set to 'Dynamic IP'), 'Primary DNS Server' (set to 'Dynamic IP'), and 'Secondary DNS Server' (set to 'Static IP').

Advanced Settings... - Dynamic IP

Address Mode

Shows your chosen address mode.

Primary DNS Server

Enter the primary DNS server IP address assigned by your ISP.

Secondary DNS Server

Enter the secondary DNS server IP address assigned by your ISP.

MTU

Maximum Transmission Unit - you may need to change the MTU for optimal performance with your ISP.

Advanced Settings...

Address Mode:Dynamic IP

Primary DNS Server:

Secondary DNS Server:

MTU:1400

Advanced Settings... - Static IP

Address Mode

Displays your chosen address mode.

PPTP IP Address

Enter the IP address provided by your ISP.

PPTP Subnet Mask

Enter the subnet mask provided by your ISP.

PPTP Gateway IP Address

Enter the gateway IP address provided by your ISP.

Primary DNS Server

Enter the primary DNS server IP address assigned by your ISP.

Secondary DNS Server

Enter the secondary DNS server IP address assigned by your ISP.

MTU

Maximum Transmission Unit - you may need to change the MTU for optimal performance with your ISP.

Advanced Settings...

Address Mode:Static IP

PPTP IP Address:

PPTP Subnet Mask:

PPTP Gateway IP Address:

Primary DNS Server:

Secondary DNS Server:

MTU:1400

IPv4 - L2TP

Choose **L2TP** (Layer 2 Tunneling Protocol) if your Internet Service Provider (ISP) uses a L2TP connection. Your ISP will provide you with a username and password. Click **Save** at any time to save the changes you have made on this page.

L2TP Server Enter the L2TP server IP address provided by your ISP.

Username Enter the username provided by your ISP.

Password Enter the password provided by your ISP.

Reconnect Mode Select either **Always on**, **On Demand**, or **Manual**.

Maximum Idle Time Configurable when **On Demand** is selected. Enter a maximum idle time during which the Internet connection is maintained during inactivity. To disable this feature, select **Always on** as the reconnect mode.

D-Link
DIR-3040 HW: A1 FW: 1.01

Home | Settings | Features | Management

Internet

Use this section to configure your Internet Connection type. There are several connection types to choose from Static IP, DHCP, PPPoE, PPTP, L2TP and DS-Lite. If you are unsure of your connection method, please contact your Internet service provider. Note: If using the PPPoE option, you will need to remove or disable any PPPoE client software on your computers.

Settings>>Internet>>IPv4

VLAN | IPv6 | Save

My Internet Connection is: L2TP

L2TP Server: IP or Domain name

Username:

Password:

Reconnect Mode: On demand

Maximum Idle Time: 5 minutes

Advanced Settings...

Advanced Settings...

Address Mode Select **Static IP** if your ISP assigned you the IP address, subnet mask, gateway, and DNS server addresses. In most cases, select **Dynamic IP**.

Advanced Settings...

Address Mode: Dynamic IP

Primary DNS Server: Dynamic IP

Secondary DNS Server: Static IP

Advanced Settings... - Dynamic IP

Address Mode

Shows your chosen address mode.

Primary DNS Server

Enter the primary DNS server IP address assigned by your ISP.

Secondary DNS Server

Enter the secondary DNS server IP address assigned by your ISP.

MTU

Maximum Transmission Unit - you may need to change the MTU for optimal performance with your ISP.

Advanced Settings...

Address Mode:Dynamic IP

Primary DNS Server:

Secondary DNS Server:

MTU:1400

Advanced Settings... - Static IP

Address Mode

Shows your chosen address mode.

L2TP IP Address

Enter the IP address provided by your ISP.

L2TP Subnet Mask

Enter the subnet mask provided by your ISP.

L2TP Gateway IP Address

Enter the gateway IP address provided by your ISP.

Primary DNS Server

Enter the primary DNS server IP address assigned by your ISP.

Secondary DNS Server

Enter the secondary DNS server IP address assigned by your ISP.

MTU

Maximum Transmission Unit - you may need to change the MTU for optimal performance with your ISP.

Advanced Settings...

Address Mode:Static IP

L2TP IP Address:

L2TP Subnet Mask:

L2TP Gateway IP Address:

Primary DNS Server:

Secondary DNS Server:

MTU:1400

IPv4 - DS-Lite

DS-Lite is an IPv6 connection type. After selecting DS-Lite, the following parameters will be available for configuration. Click **Save** at any time to save the changes you have made on this page.

Advanced Settings...

DS-Lite Configuration

Select **DS-Lite DHCPv6 Option** to let the router allocate the AFTR IPv6 address automatically. Select **Manual Configuration** to enter the AFTR IPv6 address manually.

D-Link
DIR-3040 HW:A1 FW:1.01

Home | Settings | Features | Management

Internet

Use this section to configure your Internet Connection type. There are several connection types to choose from Static IP, DHCP, PPPoE, PPTP, L2TP and DS-Lite. If you are unsure of your connection method, please contact your Internet service provider. Note: If using the PPPoE option, you will need to remove or disable any PPPoE client software on your computers.

Settings>>Internet>>IPv4

VLAN | IPv6 | Save

My Internet Connection is:

DS-Lite

Please choose one IPv6 connection type besides Link-Local Only and 6rd.

Advanced Settings...

DS-Lite Configuration:

DS-Lite DHCPv6 Option

B4 IPv4 Address:

DS-Lite DHCPv6 Option

WAN IPv6 Address:

Manual Configuration

Advanced Settings... - DS-Lite DHCPv6 Option

B4 IPv4 Address Enter the B4 IPv4 address value used here.

WAN IPv6 Address Once connected, the WAN IPv6 address will be displayed here.

IPv6 Default WAN Gateway Once connected, the IPv6 WAN default gateway address will be displayed here.

Advanced Settings...

DS-Lite Configuration:

DS-Lite DHCPv6 Option

B4 IPv4 Address:

192.0.0.

WAN IPv6 Address:

Not Available

IPv6 WAN Default Gateway:

Not Available

Advanced Settings... - Manual Configuration Option

AFTR IPv6 Address Enter the AFTR IPv6 address used here.

B4 IPv4 Address Enter the B4 IPv4 address value used here.

WAN IPv6 Address Once connected, the WAN IPv6 address will be displayed here.

IPv6 WAN Default Gateway Once connected, the IPv6 WAN default gateway address will be displayed here.

Advanced Settings...

DS-Lite Configuration:

Manual Configuration

AFTR IPv6 Address:

B4 IPv4 Address:

192.0.0.

WAN IPv6 Address:

Not Available

IPv6 WAN Default Gateway:

Not Available

Internet - IPv6

In the Settings menu on the bar at the top of the page, click **Internet** to see the Internet configuration options for the IPv4 connection details, then click the **IPv6** link to access the configuration options for the IPv6 connection details.

To configure the IPv4 Internet and network connection details, click the **IPv4** link. Refer to **Internet - IPv4** on page **33**

To configure the VLAN connection details, click the **VLAN** link. Refer to **Internet - VLAN** on page **58**

Click **Save** at any time to save the changes you have made on this page.

My Internet Connection is

Choose your Internet connection type from the drop-down menu. You will be presented with the appropriate options for your connection type.

For **IPv6 - Auto Detection** refer to page **44**


For **IPv6 - Static IPv6** refer to page **46**

For **IPv6 - Auto Configuration (SLAAC/DHCPv6)** refer to page **48**

For **IPv6 - PPPoE** refer to page **51**

For **IPv6 - 6rd** refer to page **55**

For **IPv6 - Local Connectivity Only** refer to page **57**


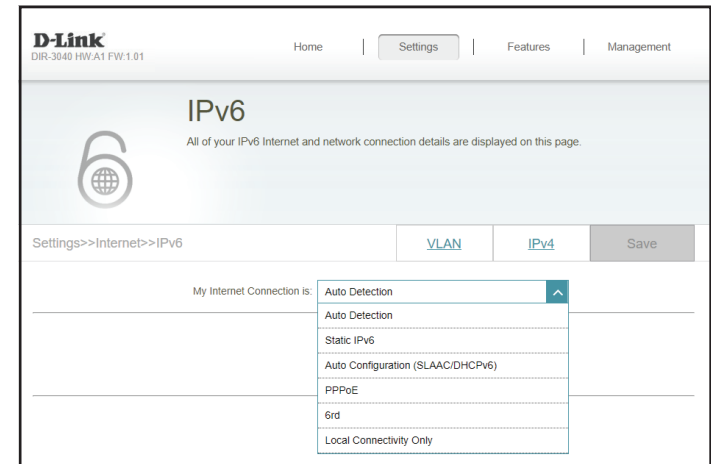


IPv6 - Auto Detection



Select **Auto Detection** to automatically detect the IPv6 connection method used by your Internet Service Provider (ISP). If Auto Detection fails, you can manually select another IPv6 connection type. Click **Save** at any time to save the changes you have made on this page.



IPv6 DNS Settings	
DNS Type	Select either Obtain DNS server address automatically or Use the following DNS address .
Primary DNS Server	If you selected Use the following DNS address , enter the primary DNS server address.
Secondary DNS Server	If you selected Use the following DNS address , enter the secondary DNS server address.

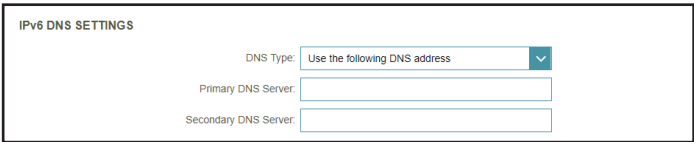 

LAN IPv6 Address Settings	
Enable DHCP-PD	Enable or disable DHCP Prefix Delegation.
LAN IPv6 Link-Local Address	Displays the router's LAN link-local address.
If Enable DHCP-PD is disabled, these additional parameters are available for configuration:	
LAN IPv6 Address	Enter a valid LAN IPv6 address.
LAN IPv6 Link-Local Address	Displays the router's LAN link-local address.

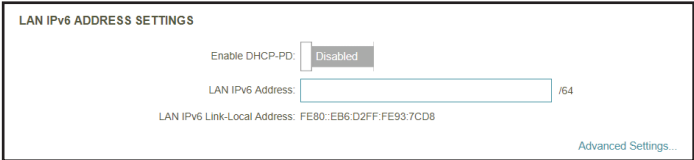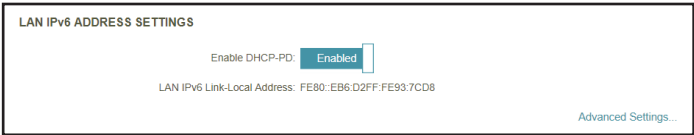

Advanced Settings... - Address Autoconfiguration Settings

- Enable Automatic IPv6 Address Assignment

Enable or disable the Automatic IPv6 Address Assignment feature.
- Enable Automatic DHCP-PD in LAN

Enable or disable DHCP-PD for other IPv6 routers connected to the LAN interface.
- Autoconfiguration Type

Select **SLAAC+RDNSS**, **SLAAC+Stateless DHCP**, or **Stateful DHCPv6**.

If you selected **SLAAC+RDNSS** or **SLAAC+Stateless DHCP** as the Autoconfiguration Type:

- Router Advertisement Lifetime

Enter the router advertisement lifetime (in minutes).

If you selected **Stateful DHCPv6** as the Autoconfiguration Type:

- IPv6 Address Range (Start)

Enter the starting IPv6 address for the DHCP server's IPv6 assignment.
- IPv6 Address Range (End)

Enter the ending IPv6 address for the DHCP server's IPv6 assignment.

Advanced Settings...

ADDRESS AUTOCONFIGURATION SETTINGS

Enable Automatic IPv6 Address Assignment: Enabled

Enable Automatic DHCP-PD in LAN: Enabled

Autoconfiguration Type: SLAAC+Stateless DHCP

Router Advertisement Lifetime: 60 minutes

Advanced Settings...

ADDRESS AUTOCONFIGURATION SETTINGS

Enable Automatic IPv6 Address Assignment: Enabled

Enable Automatic DHCP-PD in LAN: Enabled

Autoconfiguration Type: SLAAC+RDNSS

Router Advertisement Lifetime: 60 minutes

Advanced Settings...

ADDRESS AUTOCONFIGURATION SETTINGS

Enable Automatic IPv6 Address Assignment: Enabled

Enable Automatic DHCP-PD in LAN: Enabled

Autoconfiguration Type: Stateful DHCPv6

IPv6 Address Range (Start): 1

IPv6 Address Range (End): 99

IPv6 - Static IPv6

Select **Static IP** if your IPv6 information is provided by your Internet Service Provider (ISP). Click **Save** at any time to save the changes you have made on this page.

- Use Link-Local Address

Enable or disable link-local address use.
- IPv6 Address

Configurable when **Use Link-Local Address** is disabled. Enter the address supplied by your ISP.
- Subnet Prefix Length

Configurable when **Use Link-Local Address** is disabled. Enter the subnet prefix length supplied by your ISP.
- Default Gateway

Enter the default gateway for your IPv6 connection.
- Primary DNS Server

Enter the primary DNS server address.
- Secondary DNS Server

Enter the secondary DNS server address.

LAN IPv6 Address Settings

- LAN IPv6 Address

Enter the LAN (local) IPv6 address for the router.
- LAN IPv6 Link-Local Address

Displays the router's LAN link-local address.

D-Link

DIR-3040 HW:V1 FW:1.01

Home

Settings

Features

Management

IPv6

All of your IPv6 Internet and network connection details are displayed on this page.

Settings>>Internet>>IPv6

VLAN

IPv4

Save

My Internet Connection is:

Static IPv6

Use Link-Local Address:

Disabled

IPv6 Address:

Subnet Prefix Length:

Default Gateway:

Primary DNS Server:

Secondary DNS Server:

LAN IPv6 ADDRESS SETTINGS

LAN IPv6 Address:

/64

LAN IPv6 Link-Local Address:

FE80::EB6:D2FF:FE93:7CDB

Advanced Settings

Advanced Settings... - Address Autoconfiguration Settings

- Enable Automatic IPv6 Address Assignment

Autoconfiguration Type
- Enable or disable the Automatic IPv6 Address Assignment feature.

Select **SLAAC+RDNSS**, **SLAAC+Stateless DHCP**, or **Stateful DHCPv6**.

If you selected **SLAAC+RDNSS** or **SLAAC+Stateless DHCP** as the Autoconfiguration Type:

- Router Advertisement Lifetime

Enter the router advertisement lifetime (in minutes).

If you selected **Stateful DHCPv6** as the Autoconfiguration Type:

- IPv6 Address Range (Start)

IPv6 Address Range (End)

IPv6 Address Lifetime
- Enter the starting IPv6 address for the DHCP server's IPv6 assignment.

Enter the ending IPv6 address for the DHCP server's IPv6 assignment.

Enter the IPv6 address lifetime (in minutes).

Advanced Settings...

ADDRESS AUTOCONFIGURATION SETTINGS

Enable Automatic IPv6 Address Assignment:

Enabled

Autoconfiguration Type:

SLAAC+Stateless DHCP

Router Advertisement Lifetime:

30

 minutes

Advanced Settings...

ADDRESS AUTOCONFIGURATION SETTINGS

Enable Automatic IPv6 Address Assignment:

Enabled

Autoconfiguration Type:

SLAAC+RDNSS

Router Advertisement Lifetime:

30

 minutes

Advanced Settings...

ADDRESS AUTOCONFIGURATION SETTINGS

Enable Automatic IPv6 Address Assignment:

Enabled

Autoconfiguration Type:

Stateful DHCPv6

IPv6 Address Range (Start):

fff::00

IPv6 Address Range (End):

fff::00

IPv6 Address Lifetime:

10080

 minutes

IPv6 - Auto Configuration (SLAAC/DHCPv6)

Select **Auto Configuration** if your ISP assigns your IPv6 address when your router requests one from the ISP's server. Some ISPs require you to adjust settings on your side before your router can connect to the IPv6 Internet. Click **Save** at any time to save the changes you have made on this page.

IPv6 DNS Settings

DNS Type Select either **Obtain DNS server address automatically** or **Use the following DNS address**.

Primary DNS Server If you selected **Use the following DNS address**, enter the primary DNS server address.

Secondary DNS Server If you selected **Use the following DNS address**, enter the secondary DNS server address.

LAN IPv6 Address Settings

Enable DHCP-PD Enable or disable prefix delegation services.

LAN IPv6 Link-Local Address Displays the router's LAN link-local address.

*If **Enable DHCP-PD** is disabled, these additional parameters are available for configuration:*

LAN IPv6 Address Enter a valid LAN IPv6 address.

LAN IPv6 Link-Local Address Displays the router's LAN link-local address.

Advanced Settings... - Address Autoconfiguration Settings

Enable Automatic IPv6 Address Assignment Enable or disable the Automatic IPv6 Address Assignment feature.

If **Enable DHCP-PD** is enabled in the previous LAN IPv6 Address Settings:

Enable Automatic DHCP-PD in LAN Enable or disable DHCP-PD for other IPv6 routers connected to the LAN interface.

Autoconfiguration Type Select **SLAAC+RDNSS**, **SLAAC+Stateless DHCP**, or **Stateful DHCPv6**.

If you selected **SLAAC+RDNSS** or **SLAAC+Stateless DHCP** as the Autoconfiguration Type:

Router Advertisement Lifetime Enter the router advertisement lifetime (in minutes).

If you selected **Stateful DHCPv6** as the Autoconfiguration Type:

IPv6 Address Range (Start) Enter the starting IPv6 address for the DHCP server's IPv6 assignment.

IPv6 Address Range (End) Enter the ending IPv6 address for the DHCP server's IPv6 assignment.

Advanced Settings...

ADDRESS AUTOCONFIGURATION SETTINGS

Enable Automatic IPv6 Address Assignment: ☒ Enabled

Enable Automatic DHCP-PD in LAN: ☒ Enabled

Autoconfiguration Type: SLAAC+Stateless DHCP

Router Advertisement Lifetime: 30 minutes

Advanced Settings...

ADDRESS AUTOCONFIGURATION SETTINGS

Enable Automatic IPv6 Address Assignment: ☒ Enabled

Enable Automatic DHCP-PD in LAN: ☒ Enabled

Autoconfiguration Type: SLAAC+RDNSS

Router Advertisement Lifetime: 30 minutes

Advanced Settings...

ADDRESS AUTOCONFIGURATION SETTINGS

Enable Automatic IPv6 Address Assignment: ☒ Enabled

Enable Automatic DHCP-PD in LAN: ☒ Enabled

Autoconfiguration Type: Stateful DHCPv6

IPv6 Address Range (Start): :::: 00

IPv6 Address Range (End): :::: 00

Advanced Settings... - Address Autoconfiguration Settings

Enable Automatic IPv6 Address Assignment Enable or disable the Automatic IPv6 Address Assignment feature.

If **Enable DHCP-PD** is disabled in the previous LAN IPv6 Address Settings:

Autoconfiguration Type Select **SLAAC+RDNSS**, **SLAAC+Stateless DHCP**, or **Stateful DHCPv6**.

If you selected **SLAAC+RDNSS** or **SLAAC+Stateless DHCP** as the Autoconfiguration Type:

Router Advertisement Lifetime Enter the router advertisement lifetime (in minutes).

If you selected **Stateful DHCPv6** as the Autoconfiguration Type:

IPv6 Address Range (Start) Enter the starting IPv6 address for the DHCP server's IPv6 assignment.

IPv6 Address Range (End) Enter the ending IPv6 address for the DHCP server's IPv6 assignment.

IPv6 Address Lifetime Enter the IPv6 address lifetime (in minutes).

Advanced Settings...

ADDRESS AUTOCONFIGURATION SETTINGS

Enable Automatic IPv6 Address Assignment: ☒ Enabled

Autoconfiguration Type: SLAAC+Stateless DHCP

Router Advertisement Lifetime: 30 minutes

Advanced Settings...

ADDRESS AUTOCONFIGURATION SETTINGS

Enable Automatic IPv6 Address Assignment: ☒ Enabled

Autoconfiguration Type: SLAAC+RDNSS

Router Advertisement Lifetime: 30 minutes

Advanced Settings...

ADDRESS AUTOCONFIGURATION SETTINGS

Enable Automatic IPv6 Address Assignment: ☒ Enabled

Autoconfiguration Type: Stateful DHCPv6

IPv6 Address Range (Start): ff::00

IPv6 Address Range (End): ff::00

IPv6 Address Lifetime: 10080 minutes

IPv6 - PPPoE

Select **PPPoE** if your ISP provides and requires you to enter a PPPoE username and password in order to connect to the Internet. Click **Save** at any time to save the changes you have made on this page.

- | | |
|-----------------------|---|
| PPPoE Session | Create a new PPPoE session. |
| Username | Enter the username provided by your ISP. |
| Password | Enter the password provided by your ISP. |
| Address Mode | Select either Dynamic IP or Static IP . |
| IP Address | Configurable if Static IP is chosen. Enter the IP address provided by your ISP. |
| Service Name | Enter the ISP service name (optional). |
| Reconnect Mode | Select either Always On or Manual . |
| MTU | Maximum Transmission Unit - you may need to change the MTU for optimal performance with your ISP. |

The screenshot shows the D-Link DIR-3040 web interface. At the top, there's a navigation bar with 'Home', 'Settings', 'Features', and 'Management'. Below this, the 'IPv6' section is active, displaying a large '6' icon and the text 'All of your IPv6 Internet and network connection details are displayed on this page.' The breadcrumb trail is 'Settings > Internet > IPv6'. There are tabs for 'VLAN', 'IPv4', and 'Save'. The configuration form includes: 'My Internet Connection is:' set to 'PPPoE'; 'PPPoE Session:' set to 'Create a new session'; 'Username:' and 'Password:' input fields; 'Address Mode:' set to 'Static IP'; 'IP Address:' input field; 'Service Name:' input field; 'Reconnect Mode:' set to 'Always on'; and 'MTU:' set to '1492' bytes.

IPv6 DNS Settings	
DNS Type	Select either Obtain DNS server address automatically or Use the following DNS address .
Primary DNS Server	If you selected Use the following DNS address , enter the primary DNS server address.
Secondary DNS Server	If you selected Use the following DNS address , enter the secondary DNS server address.

IPv6 DNS SETTINGS

DNS Type: Obtain a DNS server address automatically

IPv6 DNS SETTINGS

DNS Type: Use the following DNS address

Primary DNS Server:

Secondary DNS Server:

LAN IPv6 Address Settings	
Enable DHCP-PD	Enable or disable prefix delegation services.
LAN IPv6 Link-Local Address	Displays the router's LAN link-local address.
If Enable DHCP-PD is disabled, these additional parameters are available for configuration:	
LAN IPv6 Address	Enter a valid LAN IPv6 address.
LAN IPv6 Link-Local Address	Displays the router's LAN link-local address.

LAN IPv6 ADDRESS SETTINGS

Enable DHCP-PD: Enabled

LAN IPv6 Link-Local Address: FE80::EB6:D2FF:FE93:7CD8

Advanced Settings...

LAN IPv6 ADDRESS SETTINGS

Enable DHCP-PD: Disabled

LAN IPv6 Address: /64

LAN IPv6 Link-Local Address: FE80::EB6:D2FF:FE93:7CD8

Advanced Settings...

Advanced Settings... - Address Autoconfiguration Settings

Enable Automatic IPv6 Address Assignment Enable or disable the Automatic IPv6 Address Assignment feature.

If **Enable DHCP-PD** is enabled in the previous LAN IPv6 Address Settings:

Enable Automatic DHCP-PD in LAN Enable or disable DHCP-PD for other IPv6 routers connected to the LAN interface.

Autoconfiguration Type Select **SLAAC+RDNSS**, **SLAAC+Stateless DHCP**, or **Stateful DHCPv6**.

If you selected **SLAAC+RDNSS** or **SLAAC+Stateless DHCP** as the Autoconfiguration Type:

Router Advertisement Lifetime Enter the router advertisement lifetime (in minutes).

If you selected **Stateful DHCPv6** as the Autoconfiguration Type:

IPv6 Address Range (Start) Enter the starting IPv6 address for the DHCP server's IPv6 assignment.

IPv6 Address Range (End) Enter the ending IPv6 address for the DHCP server's IPv6 assignment.

Advanced Settings...

ADDRESS AUTOCONFIGURATION SETTINGS

Enable Automatic IPv6 Address Assignment: ☒ Enabled

Enable Automatic DHCP-PD in LAN: ☒ Enabled

Autoconfiguration Type: SLAAC+Stateless DHCP

Router Advertisement Lifetime: 30 minutes

Advanced Settings...

ADDRESS AUTOCONFIGURATION SETTINGS

Enable Automatic IPv6 Address Assignment: ☒ Enabled

Enable Automatic DHCP-PD in LAN: ☒ Enabled

Autoconfiguration Type: SLAAC+RDNSS

Router Advertisement Lifetime: 30 minutes

Advanced Settings...

ADDRESS AUTOCONFIGURATION SETTINGS

Enable Automatic IPv6 Address Assignment: ☒ Enabled

Enable Automatic DHCP-PD in LAN: ☒ Enabled

Autoconfiguration Type: Stateful DHCPv6

IPv6 Address Range (Start): ::::: 00

IPv6 Address Range (End): ::::: 00

Advanced Settings... - Address Autoconfiguration Settings

- Enable Automatic IPv6 Address Assignment

Enable or disable the Automatic IPv6 Address Assignment feature.
- If **Enable DHCP-PD** is disabled in the previous LAN IPv6 Address Settings:

Autoconfiguration Type

Select **SLAAC+RDNSS**, **SLAAC+Stateless DHCP**, or **Stateful DHCPv6**.
- If you selected **SLAAC+RDNSS** or **SLAAC+Stateless DHCP** as the Autoconfiguration Type:

Router Advertisement Lifetime

Enter the router advertisement lifetime (in minutes).
- If you selected **Stateful DHCPv6** as the Autoconfiguration Type:

IPv6 Address Range (Start)

Enter the starting IPv6 address for the DHCP server's IPv6 assignment.

IPv6 Address Range (End)

Enter the ending IPv6 address for the DHCP server's IPv6 assignment.

IPv6 Address Lifetime

Enter the IPv6 address lifetime (in minutes).

Advanced Settings...

ADDRESS AUTOCONFIGURATION SETTINGS

Enable Automatic IPv6 Address Assignment: ☒ Enabled

Autoconfiguration Type: SLAAC+Stateless DHCP

Router Advertisement Lifetime: 30 minutes

Advanced Settings...

ADDRESS AUTOCONFIGURATION SETTINGS

Enable Automatic IPv6 Address Assignment: ☒ Enabled

Autoconfiguration Type: SLAAC+RDNSS

Router Advertisement Lifetime: 30 minutes

Advanced Settings...

ADDRESS AUTOCONFIGURATION SETTINGS

Enable Automatic IPv6 Address Assignment: ☒ Enabled

Autoconfiguration Type: Stateful DHCPv6

IPv6 Address Range (Start): ffff: 00

IPv6 Address Range (End): ffff: 00

IPv6 Address Lifetime: 10080 minutes

IPv6 - 6rd


In this section the user can configure the IPv6 **6rd** connection settings. Click **Save** at any time to save the changes you have made on this page.

- Assign IPv6 Prefix

Currently unsupported.
- Primary DNS Server

Enter the primary DNS server address.
- Secondary DNS Server

Enter the secondary DNS server address.

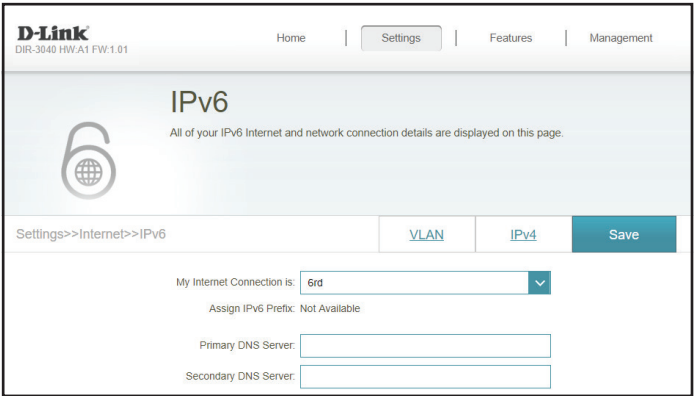


- 6rd Manual Configuration

Enable Hub and Spoke Mode

Enable this option if you want to minimize the number of routes to the destination by using a hub and spoke method of networking.

6rd Configuration

 Choose the **6rd DHCPv4 Option** to automatically discover and populate the data values, or **Manual Configuration** to enter the settings yourself.




If you selected **Manual Configuration** as the 6rd Configuration:

- 6rd IPv6 Prefix

Enter the 6rd IPv6 prefix and mask length supplied by your ISP.
- WAN IPv4 Address

Displays the router's IPv4 address.
- 6rd Border Relay IPv4 Address

Enter the 6rd border relay IPv4 address settings supplied by your ISP.

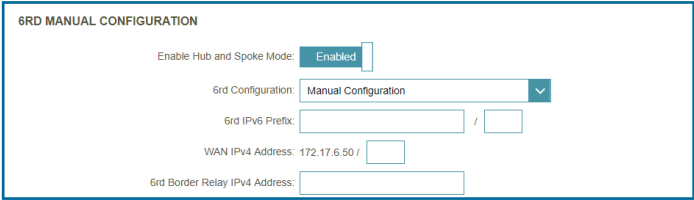


LAN IPv6 Address Settings

LAN IPv6 Address	Displays the router’s LAN IPv6 Address link-local address.
LAN IPv6 Link-Local Address	Displays the router’s LAN link-local address.




Advanced Settings... - Address Autoconfiguration Settings

Enable Automatic IPv6 Address Assignment	Enable or disable the Automatic IPv6 Address Assignment feature.
Autoconfiguration Type	Select SLAAC+RDNSS , SLAAC+Stateless DHCP , or Stateful DHCPv6 .

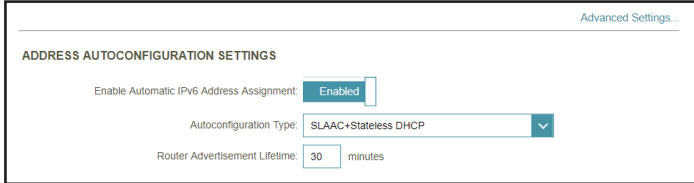


If you selected **SLAAC+RDNSS** or **SLAAC+Stateless DHCP** as the Autoconfiguration Type:

Router Advertisement Lifetime	Enter the router advertisement lifetime (in minutes).
-------------------------------	---

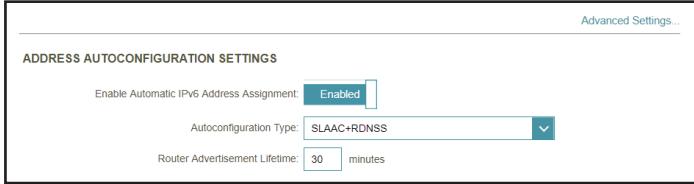


If you selected **Stateful DHCPv6** as the Autoconfiguration Type:

IPv6 Address Range (Start)	Enter the starting IPv6 address for the DHCP server’s IPv6 assignment.
IPv6 Address Range (End)	Enter the ending IPv6 address for the DHCP server’s IPv6 assignment.
IPv6 Address Lifetime	Enter the IPv6 address lifetime (in minutes).

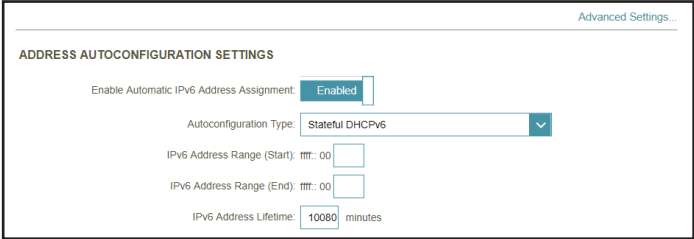


IPv6 - Local Connectivity Only

Local Connectivity Only allows you to set up an IPv6 connection that will not connect to the Internet. Click **Save** at any time to save the changes you have made on this page.

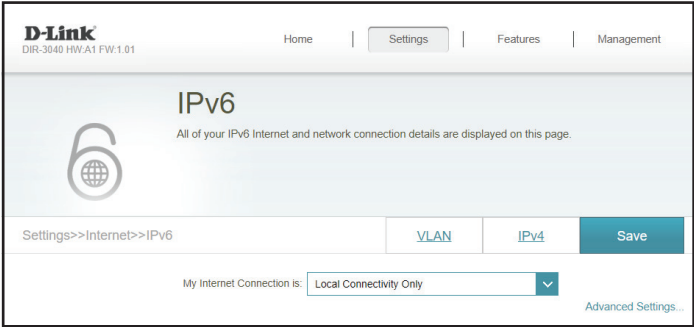


Advanced Settings... - IPv6 ULA Settings

- Enable ULA** Click here to enable Unique Local IPv6 Unicast Addresses settings.
- Use Default ULA Prefix** Enable this option to use the default ULA prefix.
- ULA Prefix** Configurable if you disable Use Default ULA Prefix. Enter your own ULA prefix.

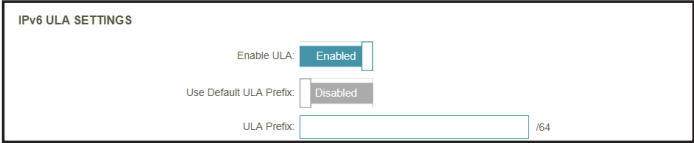

Advanced Settings... - Current IPv6 ULA Settings

 - Current ULA Prefix** Displays the current ULA prefix.
- LAN IPv6 ULA** Displays the LAN's IPv6 ULA.



Internet - VLAN


In the Settings menu on the bar at the top of the page, click **Internet** to see the Internet configuration options for the IPv4 connection details, then click the **VLAN** link to access the configuration options for the VLAN connection details.

VLAN allows for services such as Triple-Play to be used, and divides a network into segments that can only be accessed by other devices in the same VLAN.

To configure the IPv4 Internet and network connection details, click the **IPv4** link. Refer to **Internet - IPv4** on page 33
To configure the IPv6 Internet and network connection details, click the **IPv6** link. Refer to **Internet - IPv6** on page 43

Click **Save** at any time to save the changes you have made on this page.

Status Click to enable or disable the Triple-Play VLAN feature. More configuration options will be available if the Status is enabled.

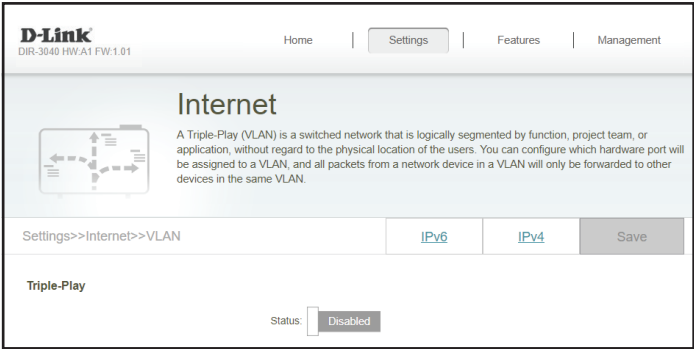

If Triple-Play Status is **Enabled**:

Priority ID Enable or disable traffic priority ID for the Internet, IPTV, and VoIP VLANs. If Priority ID is enabled, Priority ID options are available for configuration. Select a priority ID from the drop-down menus to assign to the corresponding VLAN. Higher priority ID traffic takes precedence over traffic with a low priority ID tag.


Internet VLAN ID Enter the VLAN ID for your Internet connection, as provided by your ISP.

IPTV VLAN ID Enter the VLAN ID for your IPTV service, as provided by your ISP.

VOIP VLAN ID Enter the VLAN ID for your VoIP network, as provided by your ISP.

Interface Traffic Type Setting

LAN Port 1-4 From the drop-down menu, you can select the type of connection (Internet, IPTV, or Voice over IP) coming from the WAN connection to each interface on the router.

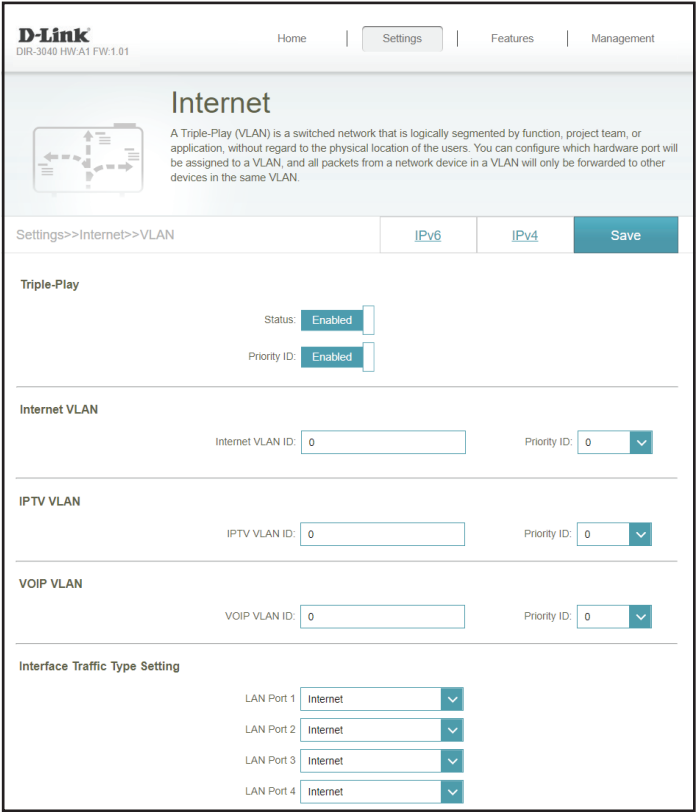

Wireless


In the Settings menu on the bar at the top of the page, click **Wireless** to see your wireless network settings for your DIR-3040.

Click **Save** at any time to save the changes you have made on this page.

Wi-Fi Mesh

Status

Enable or disable the Wi-Fi Mesh feature. Refer to **Mesh Network** on page 30 for more information.

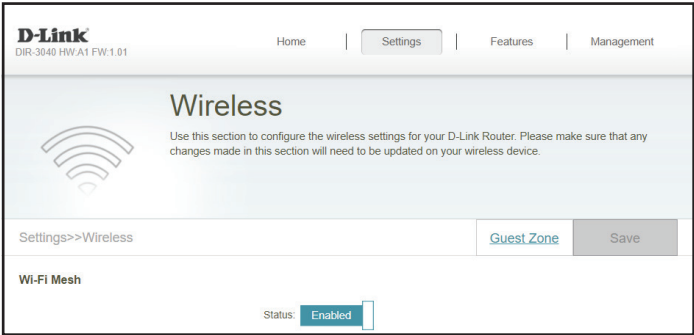

Smart Connect

Status Enable or disable the Smart Connect Feature. When enabled, only a few configuration options are available to simplify configuration.

If Smart Connect is Status is **Enabled**:

Wireless

Wi-Fi Name (SSID) Create a name for your wireless network using up to 32 characters.

Password Create a WiFi password. Wireless clients will need to enter this password to successfully connect to the network.

Wireless - Advanced Settings...

Security Mode Choose **None** or **WPA/WPA2-Personal** (recommended).

Transmission Power Select the desired wireless transmission power.

Schedule Use the drop-down menu to select the time schedule that the rule will be enabled for. The schedule may be set to Always Enable, or you can create your own schedules in the Schedules section. Refer to **Time & Schedule - Schedule** on page 89 for more information.

Smart Connect

Status:

Enabled

Wireless

Wi-Fi Name (SSID): RouterName

Password: AStrongPassword

Advanced Settings...

Security Mode: WPA/WPA2-Personal

Transmission Power: High

Schedule: Always Enable

Smart Connect

Status Enable or disable the Smart Connect Feature. When disabled, 2.4GHz and 5GHz configuration options become available.

If Smart Connect is Status is **Disabled**:

2.4GHz / Primary 5GHz / Secondary 5GHz

Status Enable or disable the 2.4GHz / 5GHz wireless network.

Wi-Fi Name (SSID) Create a name for your wireless network using up to 32 characters.

Password Create a WiFi password. Wireless clients will need to enter this password to successfully connect to the network.

Smart Connect

Status: ☐ Disabled

2.4GHz

Status: ☒ Enabled

Wi-Fi Name (SSID):

Password:

Primary 5GHz

Status: ☒ Enabled

Wi-Fi Name (SSID):

Password:

[Advanced Settings...](#)

Secondary 5GHz

Status: ☒ Enabled

Wi-Fi Name (SSID):

Password:

[Advanced Settings...](#)

2.4GHz / Primary 5GHz / Secondary 5GHz - Advanced Settings...

Security Mode

Choose **None** or **WPA/WPA2-Personal** (recommended).

802.11 Mode (2.4GHz)

Select the desired wireless networking standards to use. The available options for the 2.4 GHz wireless network are **Mixed 802.11b/g/n**, **Mixed 802.11g/n**, or **802.11n only**.

802.11 Mode (5GHz)

Select the desired wireless networking standards to use. The available options for the 5 GHz wireless network are **Mixed 802.11a/n/ac**, **Mixed 802.11n/ac**, **Mixed 802.11a/n**, **802.11ac only**, **Mixed 802.11a only**, or **802.11n only**.

Wi-Fi Channel

Select the desired channel. The default is **Auto** (recommended).

Transmission Power

Select the desired wireless transmission power.

Channel Width (2.4GHz)

Select **Auto 20/40** if you are using both 802.11n and non-802.11n devices, or select **20 MHz** if you are not using any 802.11n devices.

Channel Width (5GHz)

Select **Auto 20/40/80** if you are using 802.11ac, 802.11n, and 802.11a devices, select **Auto 20/40** if you are using 802.11n and 802.11a devices, or select **20 MHz** if you are using 802.11a devices.

HT20/40 Coexistence (2.4GHz)

Enable or disable HT20/40 Coexistence.

Visibility Status

The default setting is **Visible**. Select **Invisible** if you do not want to broadcast the SSID of your wireless network.

Schedule

Use the drop-down menu to select the time schedule that the rule will be enabled for. The schedule may be set to **Always Enable**, or you can create your own schedules in the **Schedules** section. Refer to **Time & Schedule - Schedule** on page **89** for more information.

2.4GHz

Status: ☒ Enabled

Wi-Fi Name (SSID): RouterName

Password: AStrongPassword

[Advanced Settings...](#)

Security Mode: WPA/WPA2-Personal

802.11 Mode: Mixed 802.11b/g/n

Wi-Fi Channel: Auto

Transmission Power: High

Channel Width: Auto 20/40 MHz

HT20/40 Coexistence: ☒ Enabled

Visibility Status: Visible

[Schedule:](#) Always Enable

Primary 5GHz

Status: ☒ Enabled

Wi-Fi Name (SSID): RouterName

Password: AStrongPassword

[Advanced Settings...](#)

Security Mode: WPA/WPA2-Personal

802.11 Mode: Mixed 802.11a/n/ac

Wi-Fi Channel: Auto

Transmission Power: High

Channel Width: Auto 20/40/80 MHz

Visibility Status: Visible

[Schedule:](#) Always Enable

Secondary 5GHz

Status: ☒ Enabled

Wi-Fi Name (SSID): RouterName

Password: AStrongPassword

[Advanced Settings...](#)

Security Mode: WPA/WPA2-Personal

802.11 Mode: Mixed 802.11a/n/ac

Wi-Fi Channel: Auto

Transmission Power: High

Channel Width: Auto 20/40/80 MHz

Visibility Status: Visible

[Schedule:](#) Always Enable

Wi-Fi Protected Setup

The easiest way to connect your wireless devices to the router is with Wi-Fi Protected Setup (WPS).

WPS-PBC Status Enable or disable WPS-PBC (Push Button Configuration) functionality.



Guest Zone

In the Settings menu on the bar at the top of the page, click **Wireless** to see your wireless network settings for your DIR-3040. Then click the link to **Guest Zone** to configure your guest zone settings.


The **Guest Zone** feature will allow you to create temporary zones that can be used by guests to access the Internet. These zones will be separate from your main wireless network. You may configure different zones for the 2.4 GHz and 5 GHz wireless bands.

Click **Save** at any time to save the changes you have made on this page.

If Smart Connect is Status is **Enabled** in the previous Wireless settings:

Wireless	
Status	Enable or disable the Guest Zone feature. The status is disabled by default.
Wireless Name (SSID)	Create a name for your wireless network using up to 32 characters.
Password	Create a WiFi password.
Schedule	Use the drop-down menu to select the time schedule that the rule will be enabled for. The schedule may be set to Always Enable , or you can create your own schedules in the Schedules section. Refer to Time & Schedule - Schedule on page 89 for more information.

Home Network Access	
Internet Access Only	Enabling this option will confine connectivity to the Internet, preventing guests from accessing other local network devices.

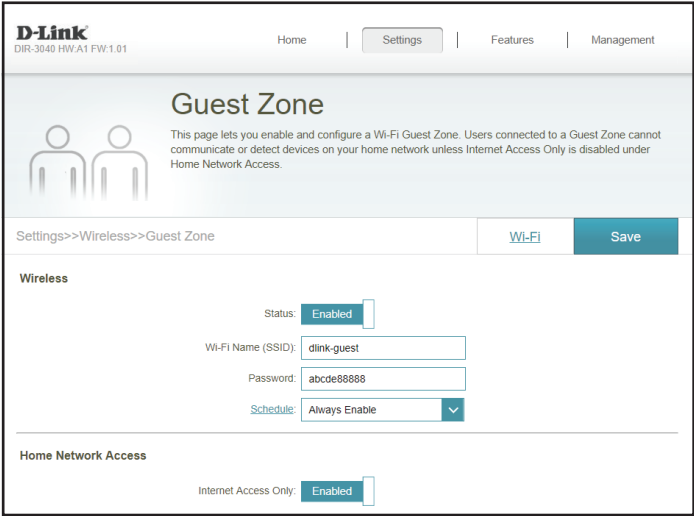

If Smart Connect is Status is **Disabled** in the previous Wireless settings:

2.4 GHz / Primary 5GHz / Secondary 5GHz	
Status	Enable or disable the Guest Zone feature. The status is disabled by default.
Wireless Name (SSID)	Create a name for your wireless network using up to 32 characters.
Password	Create a WiFi password.
Schedule	Use the drop-down menu to select the time schedule that the rule will be enabled for. The schedule may be set to Always Enable , or you can create your own schedules in the Schedules section. Refer to Time & Schedule - Schedule on page 89 for more information.

Home Network Access	
Internet Access Only	Enabling this option will confine connectivity to the Internet, preventing guests from accessing other local network devices.

D-Link

DIR-3040 HW:V1 FW:1.01

Home

Settings

Features

Management

Guest Zone

This page lets you enable and configure a Wi-Fi Guest Zone. Users connected to a Guest Zone cannot communicate or detect devices on your home network unless Internet Access Only is disabled under Home Network Access.

Settings>>Wireless>>Guest Zone

Wi-Fi

Save

2.4GHz

Status

Enabled

Wi-Fi Name (SSID)

dlink-guest

Password

mtpvv69367

Schedule

Always Enable

+

Primary 5GHz

Status

Enabled

Wi-Fi Name (SSID)

dlink-guest

Password

mtpvv69367

Schedule

Always Enable

+

Secondary 5GHz

Status

Enabled

Wi-Fi Name (SSID)

dlink-guest

Password

mtpvv69367

Schedule

Always Enable

+

Home Network Access

Internet Access Only

Enabled


COPYRIGHT © 2016 D-Link

Network

In the Settings menu on the bar at the top of the page, click **Network** to change the local network settings of the router and to configure the DHCP settings.

Click **Save** at any time to save the changes you have made on this page.

Network Settings	
LAN IP Address	Enter the IP address of the router. The default IP address is 192.168.0.1 . If you change the IP address, once you click Save , you will need to enter the new IP address in your browser to get back into the configuration utility.
Subnet Mask	Enter the subnet mask of the router. The default subnet mask is 255.255.255.0 .
Management Link	The default address to access the router’s configuration is http://dlinkrouter.local/ . You can replace dlinkrouter with a name of your choice.
Local Domain Name	Enter the domain name (optional).
Enable DNS Relay	Disable to transfer the DNS server information from your ISP to your computers. If enabled, your computers will use the router for a DNS server.

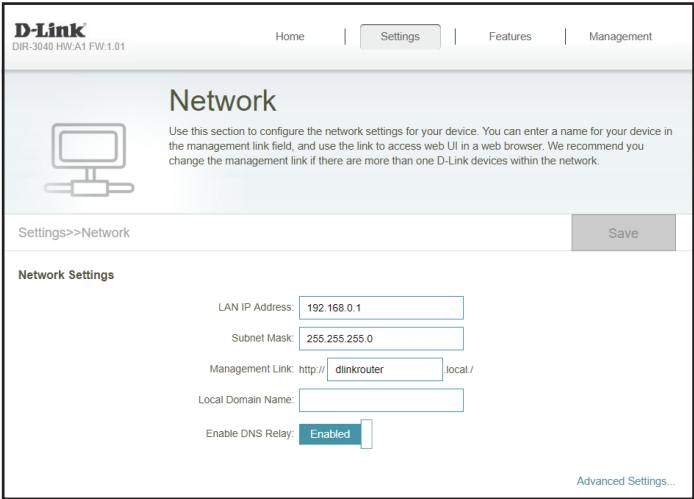

DHCP Server	
Status	Enable or disable the DHCP server.
DHCP IP Address Range	Enter the starting and ending IP addresses for the DHCP server's IP assignment. Note: <i>If you statically assign IP addresses to your computers or devices, make sure the IP addresses are outside of this range or you may have an IP conflict.</i>
DHCP Lease Time	Enter the length of time for the IP address lease in minutes.
Always Broadcast	Enable this feature to broadcast your network's DHCP server to LAN/WLAN clients.

Advanced Settings...

DHCP Server

Status: ☒ Enabled

DHCP IP Address Range: 192.168.0. to 192.168.0.

DHCP Lease Time: minutes

Always Broadcast: ☐ Disabled
(compatibility for some DHCP Clients)

Advanced Settings	
WAN Port Speed	You may set the port speed of the Internet port to 10 Mbps , 100 Mbps , 1000 Mbps , or Auto (recommended).
UPnP	Enable or disable Universal Plug and Play (UPnP). UPnP provides compatibility with networking equipment, software, and peripherals.
IPv4 Multicast Streams	Enable to allow IPv4 multicast traffic to pass through the router from the Internet. This is enabled by default.
IPv6 Multicast Streams	Enable to allow IPv6 multicast traffic to pass through the router from the Internet. This is enabled by default.

Advanced Settings

WAN Port Speed: ▼

UPnP: ☒ Enabled

IPv4 Multicast Streams: ☒ Enabled

IPv6 Multicast Streams: ☒ Enabled


USB Sharing

In the Settings menu on the bar at the top of the page, click **USB Sharing** to set up access to files on an external USB drive plugged into the router. You can access shared files such as photos, music, and movies through your local network or from the Internet using FTP. Access your files on your local network using SAMBA or UPnP media sharing, or access them over the web using FTP.

You can also click on the User tab which will redirect you to create and configure user accounts. For more details, refer to **User** on page 94

Click **Save** at any time to save the changes you have made on this page.

UPnP Media Server	
Status	Enable or disable the UPnP media server function, allowing connected clients access to media files over the network.
UPnP Media Server	Choose a name for your UPnP media server so that it can be found.
Windows File Sharing (SAMBA)	
Status	Enable or disable the Windows file sharing function, allowing connected clients access to shared files over the network.

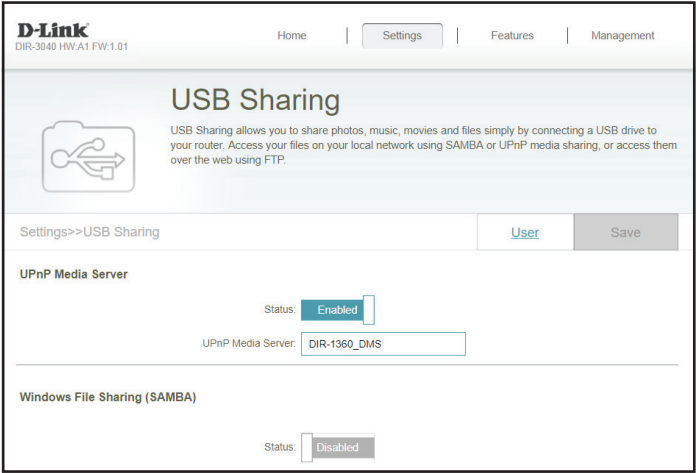

FTP Server

Status

Enable or disable the FTP server function, allowing connected clients access to media files through FTP.

FTP Server - Advanced Settings...

Enable Remote Sharing

If **FTP server** is enabled, enable or disable remote access to files stored on a USB device plugged into the router through a web browser.

FTP Server Port

Enter the port number of FTP server.

Idle Time

Enter the time (in minutes) before connected clients will be considered idle.

FTP Server

Status:

Enabled

Advanced Settings...

Enable Remote Sharing:

Enabled

FTP Server Port:

21

Idle Time:

5

 minutes

D-Link Cloud

In the Settings menu on the bar at the top of the page, click **D-Link Cloud** to see your D-Link Cloud Service details. This page lists whether you are registered with D-Link Cloud Service and email address associated with the account. Use the D-Link Wi-Fi app to find out more about D-Link Cloud's features.


DIR-3040 HW:A1 FW:1.01

Home | **Settings** | Features | Management



D-Link Cloud

D-Link Cloud Service enables third-party service integration for your device through the cloud. Please view your account information that is currently associated with your device's D-Link Cloud account. To find out more about D-Link Cloud's features, simply download the D-Link Wi-Fi App from the App Store or Google Play™ to your mobile device.

Settings>>D-Link Cloud

D-Link Cloud Registration

D-Link Cloud Service: Registered

D-Link Cloud Account: youremailaddress@email.com

Features

QoS Engine

In the Features menu on the bar at the top of the page, click **QoS Engine** to configure connected clients Internet access priority.

Click **Save** at any time to save the changes you have made on this page.

Internet Speed Checkup

Click on the **Check Speed** button to launch the Internet Speedtest. A window will pop up to show you the results of the speedtest. When the test is complete, you can either choose **Detect Again** to run the speedtest again, or you can choose **Apply to QoS** to apply the results to the download and upload speeds.

Management Type

Use the drop-down menu to select the Management Type that the rule will be enabled for. This may be set to **Off** or **Manage By Device**.

Download Speed (Mbps)

Set the download speed based on your ISP subscription plan in order to adjust the QoS engine. Alternatively, you can input the values from the speedtest through the **Check Speed** button above and apply the results by clicking **Apply to QoS** after the speedtest is complete.

Upload Speed (Mbps)

Set the upload speed based on your ISP subscription plan in order to adjust the QoS engine. Alternatively, you can input the values from the speedtest through the **Check Speed** button above and apply the results by clicking **Apply to QoS** after the speedtest is complete.

D-Link DIR-3040 HW:V1 FW:1.01

Home | Settings | Features | Management

QoS Engine

Connected clients can be assigned Internet access priority. Click and drag client cards into open slots.

Advanced >> QoS Engine

Internet Speed Checkup: **Check Speed**

Management Type: **Off**

Download Speed (Mbps): **300**

Upload Speed (Mbps): **300**

Set the download and upload speed based on your ISP subscription plan in order to adjust the QoS engine to provide precise client priorities.

Save

Your Internet Speed

66.37 Mbps

99.44 Mbps

Detect Again

Apply to QoS

SPEEDTEST powered™

This **Quality of Service (QoS) Engine** will allow you to prioritize particular clients over others, so that those clients receive higher bandwidth. For example, if one client is streaming a movie and another is downloading a non-urgent file, you might wish to assign the former device a higher priority than the latter so that the movie streaming is not disrupted by the traffic of the other devices on the network.

Under **Connected Clients**, you will see device cards representing each connected client. If some are off-screen, you can use the < and > buttons to scroll through the cards.


A maximum of **one** device can be assigned **Highest** priority.

A maximum of **two** devices can be assigned **High** priority.

A maximum of **eight** devices can be assigned **Medium** priority.

If no devices are explicitly assigned a priority, they will all be treated with equal priority. If some devices are not assigned a priority and others are, the unassigned devices will be treated with the lowest priority.

To assign a priority level to a device, drag the device card from the All Devices list over an empty slot and release the mouse button. The card will remain in the slot. If you want to remove a priority assignment from a device and return it to the All Devices list, click the cross icon in the top right of the device card.

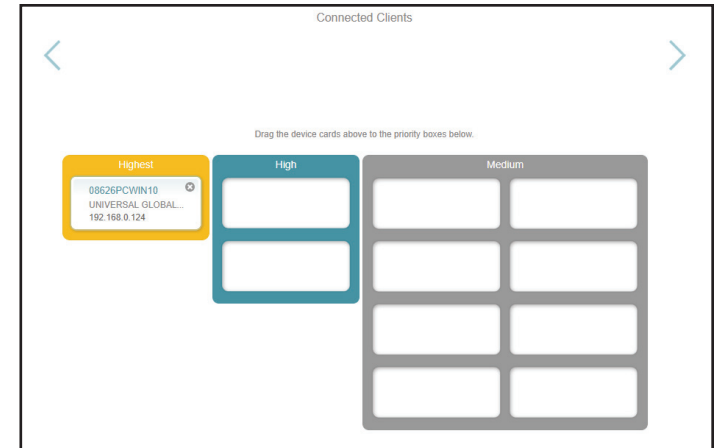

Firewall Settings - Advanced

In the Features menu on the bar at the top of the page, click **Firewall** to configure the router's firewall settings. The firewall feature better protects your network from malicious attacks over the Internet.

To configure the IPv4 firewall rules, click the **IPv4 Rules** link. Refer to **Firewall Settings - IPv4/IPv6 Rules** on page 76

To configure the IPv6 firewall rules, click the **IPv6 Rules** link. Refer to **Firewall Settings - IPv4/IPv6 Rules** on page 76

Click **Save** at any time to save the changes you have made on this page.

Enable DMZ Enable or disable Demilitarized Zone (DMZ). This completely exposes the client to threats over the Internet, and is not recommended in ordinary situations.

DMZ IP Address If you enabled DMZ, enter the IP address of the client you wish to expose, or use the drop-down menu to quickly select it.

Enable SPI IPv4 Enabling Stateful Packet Inspection (SPI) better protects against cyber attacks by validating that the traffic passing through the session conforms to the protocol.

Enable Anti-spoof Checking Enable this feature to help protect your network from certain kinds of "spoofing" attacks.

IPv6 Simple Security Enable or disable IPv6 simple security.

IPv6 Ingress Filtering Enable or disable IPv6 ingress filtering.


The screenshot displays the 'Firewall Settings' page for a D-Link DIR-3040 HW v1 FW 1.01 router. The page is titled 'Firewall Settings' and includes a description: 'Your router's high-performance firewall feature continuously monitors Internet traffic, protecting your network and connected devices from malicious Internet attacks.' The page is divided into sections for 'Advanced' settings, 'IPv4 Rules', and 'IPv6 Rules'. The 'Advanced' section is currently selected, showing the following settings:

- Enable DMZ:** Enabled (toggle switch)
- DMZ IP Address:** A text input field with a dropdown menu showing '<< Computer Name'.
- Enable SPI IPv4:** Enabled (toggle switch)
- Enable Anti-spoof Checking:** Enabled (toggle switch)
- IPv6 Simple Security:** Enabled (toggle switch)
- IPv6 Ingress Filtering:** Enabled (toggle switch)

At the bottom right of the page, there is a link for 'Advanced Settings...'.

Advanced Settings... - Application Level Gateway (ALG) Configuration

- PPTP** Allows multiple machines on the LAN to connect to their corporate network using the PPTP protocol.
- IPSec (VPN)** Allows multiple VPN clients to connect to their corporate network using IPSec. Some VPN clients support traversal of IPSec through NAT. This Application Level Gateway (ALG) may interfere with the operation of such VPN clients. If you are having trouble connecting with your corporate network, try turning this ALG off. Please check with the system administrator of your corporate network whether your VPN client supports NAT traversal.
- RTSP** Allows applications that uses Real Time Streaming Protocol (RTSP) to receive streaming media from the Internet.
- SIP** Allows devices and applications using VoIP (Voice over IP) to communicate across NAT. Some VoIP applications and devices have the ability to discover NAT devices and work around them. This ALG may interfere with the operation of such devices. If you are having trouble making VoIP calls, try turning this ALG off.

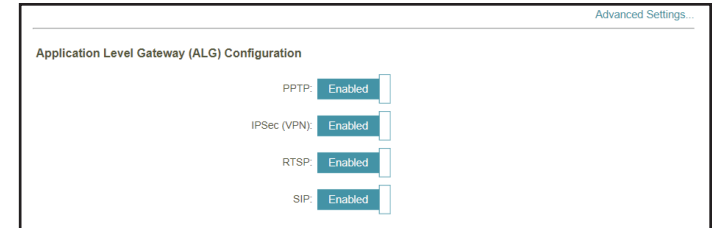

Firewall Settings - IPv4/IPv6 Rules


In the Features menu on the bar at the top of the page, click **Firewall** to configure the router’s firewall settings, then click the **IPv4 Rules** link or the **IPv6 Rules** link to configure what kind of traffic is allowed to pass through the network.

To configure the Firewall Advanced settings, click the **Advanced** link. Refer to **Firewall Settings - Advanced** on page 74

Click **Save** at any time to save the changes you have made on this page.

To begin, use the drop-down menu to select whether you want to **ALLOW** or **DENY** the rules you create. You can also choose to turn filtering **OFF**.

If you wish to remove a rule, click on the trash can icon in the Delete column. If you wish to edit a rule, click on the pencil icon in the Edit column. If you wish to create a new rule, click the **Add Rule** button.

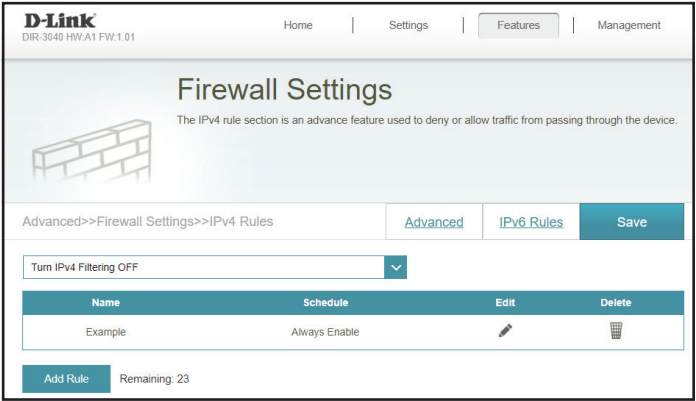

If you clicked on **Edit** or **Add Rule**, the following options will appear:

- Name**

Enter a name for the rule.
- Source IP Address Range**

Enter the source IP address range that the rule will apply to. Using the drop-down menu, specify whether it is a **WAN** or **LAN** IP address.
- Destination IP Address Range**

Enter the destination IP address range that the rule will apply to. Using the drop-down menu, specify whether it is a **WAN** or **LAN** IP address.
- Protocol & Port Range**

Select the protocol of the traffic to allow or deny (**Any, TCP, or UDP**) and then enter the range of ports that the rule will apply to.
- Schedule**

Use the drop-down menu to select the time schedule that the rule will be enabled for. The schedule may be set to **Always Enable**, or you can create your own schedules in the **Schedules** section. Refer to **Time & Schedule - Schedule** on page **89** for more information.

Create New Rule

Name:

Source IP Address Range:

WAN

Destination IP Address Range:

LAN

Protocol & Port Range:

TCP

Schedule:

Always Enable

Apply


Port Forwarding

In the Features menu on the bar at the top of the page, click **Port Forwarding** to specify a port or range of ports to open for specific devices on the network. This might be necessary for certain applications to connect through the router.

To configure the Virtual Server settings, click the **Virtual Server** link. Refer to **Port Forwarding - Virtual Server** on page 80


Click **Save** at any time to save the changes you have made on this page.

If you wish to remove a rule, click on the trash can icon in the Delete column. If you wish to edit a rule, click on the pencil icon in the Edit column. If you wish to create a new rule, click the **Add Rule** button.

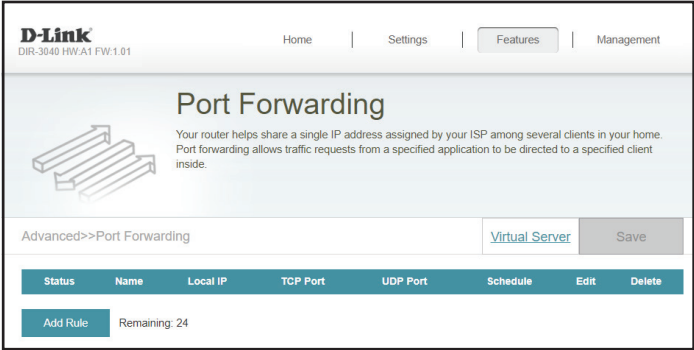

If you clicked on **Edit** or **Add Rule**, the following options will appear:

- Name** Enter a name for the rule.
- Local IP** Enter the IP address of the computer on your local network that you want to allow the incoming service to. Alternatively, select the device from the drop-down menu.
- TCP Port** Enter the TCP ports that you want to open. You can enter a single port or a range of ports. Separate ports with a comma (for example: 24,1009,3000-4000).
- UDP Port** Enter the UDP ports that you want to open. You can enter a single port or a range of ports. Separate ports with a comma (for example: 24,1009,3000-4000).
- Schedule** Use the drop-down menu to select the time schedule that the rule will be enabled for. The schedule may be set to **Always Enable**, or you can create your own schedules in the **Schedules** section. Refer to **Time & Schedule - Schedule** on page **89** for more information.

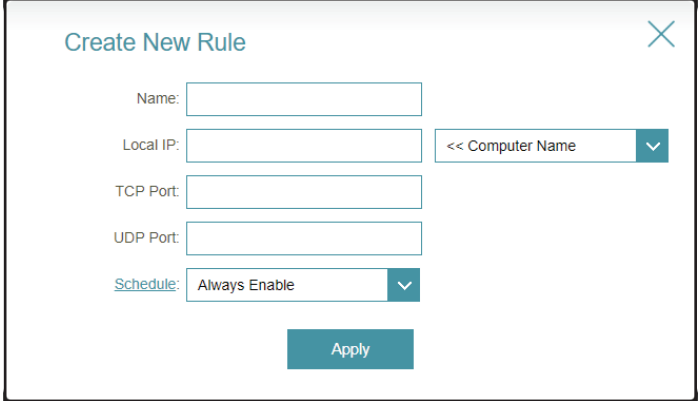

The screenshot shows a 'Create New Rule' dialog box with a close button (X) in the top right corner. It contains the following fields and controls:

- Name:** A text input field.
- Local IP:** A text input field next to a dropdown menu showing '<< Computer Name'.
- TCP Port:** A text input field.
- UDP Port:** A text input field.
- Schedule:** A dropdown menu currently set to 'Always Enable'.
- Apply:** A blue button at the bottom right.


Port Forwarding - Virtual Server

In the Features menu on the bar at the top of the page, click **Port Forwarding** then click the **Virtual Server** link to configure its settings and specify a single public port on your router for redirection to an internal LAN IP address and Private LAN port. This might be necessary for certain applications to connect through the router.

To configure the Port Forwarding settings, click the **Port Forwarding** link. Refer to **Port Forwarding** on page 78

Click **Save** at any time to save the changes you have made on this page.

If you wish to remove a rule, click on the trash can icon in the Delete column. If you wish to edit a rule, click on the pencil icon in the Edit column. If you wish to create a new rule, click the **Add Rule** button.

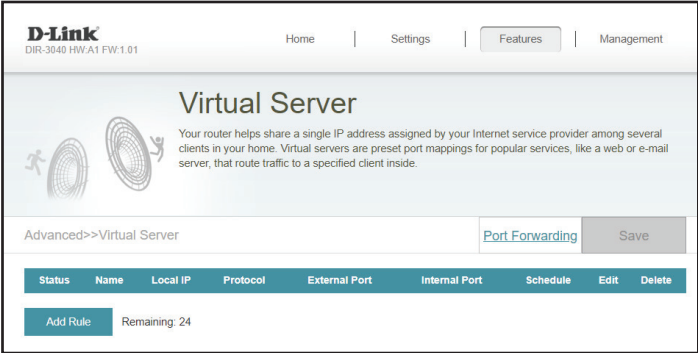

If you clicked on **Edit** or **Add Rule**, the following options will appear:

- Name** Enter a name for the rule. Alternatively, select the protocol/ Application Name from the drop-down menu.
- Local IP** Enter the IP address of the computer on your local network that you want to allow the incoming service to. Alternatively, select the device from the drop-down menu.
- Protocol** Select the protocol of the traffic to allow or deny (**TCP, UDP, Both, or Other**).
- Protocol Number** If you entered **Other** above, enter the protocol number.
- External Port** Enter the public port you want to open.
- Internal Port** Enter the private port you want to open.
- Schedule** Use the drop-down menu to select the time schedule that the rule will be enabled for. The schedule may be set to **Always Enable**, or you can create your own schedules in the **Schedules** section. Refer to **Time & Schedule - Schedule** on page **89** for more information.

The screenshot shows a 'Create New Rule' window with the following fields and options:

- Name:** A text input field followed by a dropdown menu currently showing '<< Application Name'.
- Local IP:** A text input field followed by a dropdown menu currently showing '<< Computer Name'.
- Protocol:** A dropdown menu currently showing 'TCP'.
- External Port:** A text input field.
- Internal Port:** A text input field.
- Schedule:** A dropdown menu currently showing 'Always Enable'.
- Apply:** A button at the bottom right of the dialog.


Website Filter

In the Features menu on the bar at the top of the page, click **Website Filter**. The website filters feature allows rules to be set that restrict access to a specified web address (URL) or blocks specified keywords in the URL. You can use Website Filter to restrict access to potentially harmful and inappropriate websites.

Click **Save** at any time to save the changes you have made on this page.

To begin, use the drop-down menu to select whether you want to **ALLOW** or **DENY** the access to the listed sites.

If you wish to remove a Website URL/Domain, click on the trash can icon in the Delete column. If you wish to list a new site to allow or deny access to, click the **Add Rule** button.

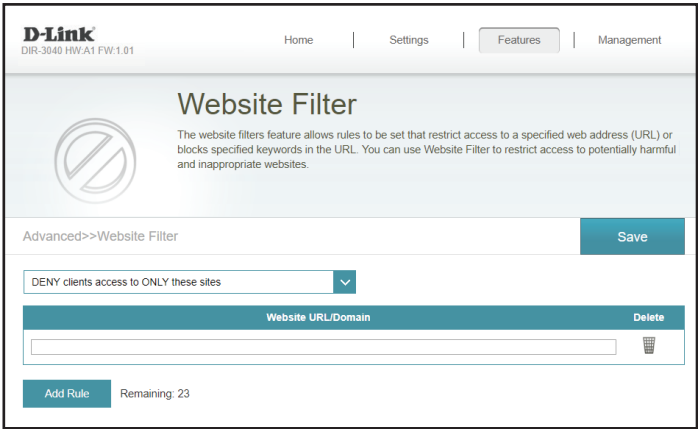


Static Route - IPv4

In the Features menu on the bar at the top of the page, click **Static Route** to define custom routes, controlling how data traffic is moved around your network.

To configure the Static Route IPv6 settings, click the **IPv6** link. Refer to **Static Route - IPv6** on page 84

Click **Save** at any time to save the changes you have made on this page.

If you wish to remove a route, click on the trash can icon in the Delete column. If you wish to edit a route, click on the pencil icon in the Edit column. If you wish to create a new route, click the **Add Route** button.

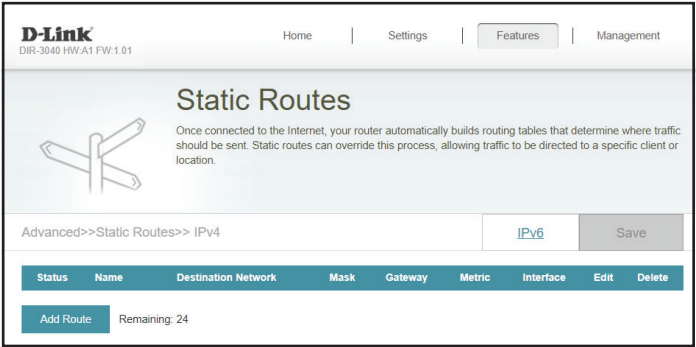

If you clicked on **Edit** or **Add Rule**, the following options will appear:

- Name** Enter a name for the rule.
- Destination Network** Enter the IP address of packets that will take this route.
- Mask** Enter the subnet mask of the route.
- Gateway** Enter your next hop gateway to be taken when this route is used.
- Metric** Enter a route metric value ranging from **0** to **15**. This value indicates the cost of using this route.
- Interface** Select the interface that the IP packet must use to transit out of the router when this route is used.

A screenshot of the 'Create New Route' form in the D-Link web interface. The form has a title bar with 'Create New Route' and a close button (X). The fields are: 'Name' (text input), 'Destination Network' (text input), 'Mask' (text input), 'Gateway' (text input), 'Metric' (text input), and 'Interface' (dropdown menu with 'WAN' selected). An 'Apply' button is at the bottom right.


Static Route - IPv6

In the Features menu on the bar at the top of the page, click **Static Route** to access the IPv4 Static Route settings, then click **IPv6** to configure the IPv6 Static Routes.

To configure the Static Route IPv4 settings, click the **IPv4** link. Refer to **Static Route - IPv4** on page 83

Click **Save** at any time to save the changes you have made on this page.

If you wish to remove a route, click on the trash can icon in the Delete column. If you wish to edit a route, click on the pencil icon in the Edit column. If you wish to create a new route, click the **Add Route** button.

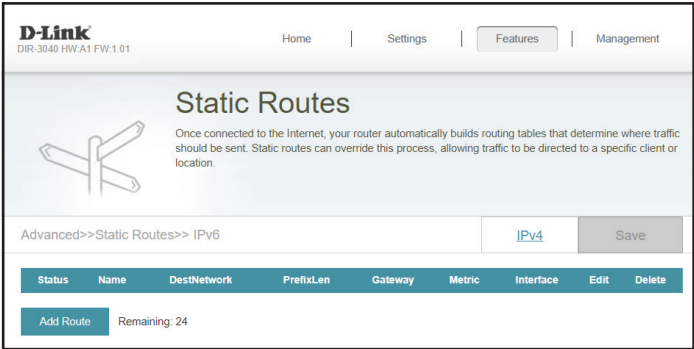

If you clicked on **Edit** or **Add Rule**, the following options will appear:

- Name** Enter a name for the rule.
- DestNetwork** This is the IP address of the router used to reach the specified destination.
- PrefixLen** Enter the IPv6 address prefix length of the packets that will take this route.
- Gateway** Enter your next hop gateway to be taken when this route is used.
- Metric** Enter a route metric value ranging from **0** to **15**. This value indicates the cost of using this route.
- Interface** Select the interface that the IP packet must use to transit out of the router when this route is used.

Create New Route

Name:

DestNetwork:

PrefixLen:

Gateway:

Metric:

Interface:

WAN

Apply

Dynamic DNS

In the Features menu on the bar at the top of the page, click **Dynamic DNS**. This setting allows your router to associate an easy-to-remember domain name such as [YourDomainName].com with the regularly changing IP address assigned by your Internet Service provider. This feature is helpful when running a virtual server.

Click **Save** at any time to save the changes you have made on this page.

- Enable Dynamic DNS

Enable or disable dynamic DNS. Enabling this feature will reveal further configuration options.
- Status

Displays the current dynamic DNS connection status.
- Server Address


Enter the address of your dynamic DNS server, or select one from the drop-down menu.
- Host Name

Enter the host name that you registered with your dynamic DNS service provider.
- User Name

Enter your dynamic DNS username.
- Password

Enter your dynamic DNS password.
- Time Out

Enter a time out time (in hours).

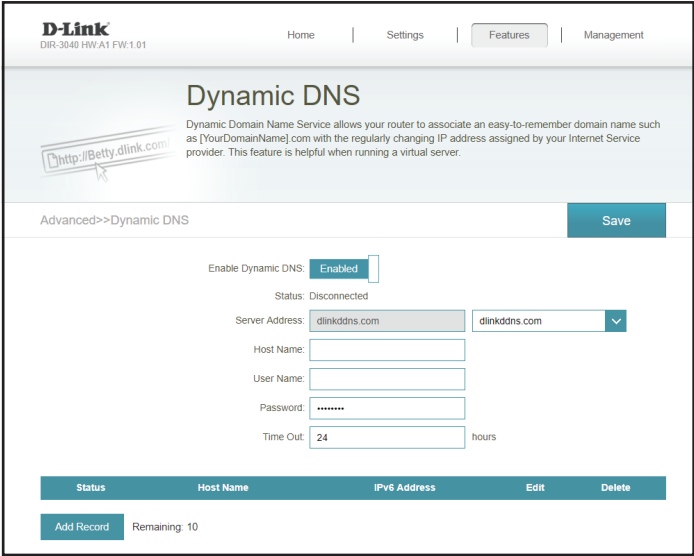

At the bottom of the page are the IPv6 host settings.

If you wish to remove a record, click on the trash can icon in the Delete column. If you wish to edit a record, click on the pencil icon in the Edit column. If you wish to create a new record, click the **Add Record** button.

Host Name Enter the host name that you registered with your dynamic DNS service provider.

IPv6 Address Enter the IPv6 address of the dynamic DNS server. Alternatively, select the server device in the drop-down menu.

Status	Host Name	IPv6 Address	Edit	Delete
Add Record	Remaining: 10			

Create New Record

Host Name:

IPv6 Address:

<< Computer Name

Apply

Quick VPN

In the Features menu on the bar at the top of the page, click **Quick VPN**. This page will help you configure the Quick VPN feature of your router. For more information, refer to **Quick VPN** on page **114**. Before proceeding, ensure that your Internet connection is working properly. We recommend configuring Dynamic DNS before proceeding with Quick VPN setup. If your router is assigned an IP address from your ISP using DHCP, it may frequently change, requiring clients credentials to be set up again and a simple DDNS address will be easier than an IP address.

To configure the User settings and create, manage, and delete user accounts with user-defined access to certain router services, click the **User** link. Refer to **User** on page **94**

Click **Save** at any time to save the changes you have made on this page.

L2TP over IPSec

Enable or disable the Quick VPN server.

Username

Enter a username between 1 and 20 characters.

Password

Enter a password between 1 and 20 characters.

PSK

Enter a passkey between 6 and 64 characters.

VPN Profile for iOS Device and MAC OS X

Click export to save the VPN profile settings file for iOS devices or Mac OS X.

Advanced Settings...

Authentication Protocol

Choose the authentication protocol type: **MSCHAPv2**, **PAP**, or **CHAP**. **MSCHAPv2** is the default.

MPPE

Select the encryption cipher strength: **None**, **RC4-40**, or **RC4-128**. **RC4-128** is the default.

D-Link
DIR-3040 HWA1 FW:1.01

Home | Settings | **Features** | Management

Quick VPN

Quickly and easily create a profile for secure remote access to a Local Area Network (LAN). This profile can be used to configure other devices to connect to your LAN via a secure VPN tunnel.

Features>>Quick VPN User Save

General

L2TP over IPSec: ☒ Enabled

Username:

Password:

PSK:

VPN Profile for iOS Device and Mac OS X: Export

[Advanced Settings...](#)

Advanced

Authentication Protocol:

MPPE:

COPYRIGHT © 2015 D-Link

Management

Time & Schedule - Time

In the Management menu on the bar at the top of the page, click **Time & Schedule**. The **Time** page allows you to configure, update, and maintain the correct time on the internal system clock. From here you can set the time zone and the Network Time Protocol (NTP) server.

To configure the Schedule settings, click the **Schedule** link. Refer to **Time & Schedule - Schedule** on page 89

Click **Save** at any time to save the changes you have made on this page.

Time Configuration

Time Zone Select your time zone from the drop-down menu.

Time Displays the current date and time of the router.

D-Link
DIR-3040 HW:A1 FW:1.01

Home | Settings | Features | Management

Time

Your device's internal clock is used for time sensitive applications, such as firmware online checking, data logging and schedules for features. The date and time can be synchronized with a public time server through the Internet, or it can be configured manually here.

Management>>Time Schedule Save

Time Configuration

Time Zone: Asia/Taipei

Time: 2018/11/02 10:48:14 AM

Automatic Time Configuration

NTP Server: D-Link NTP Server ▼

Automatic Time Configuration

NTP Server Select from the drop-down menu to either use the D-Link NTP Server to synchronize the time and date for your router, or choose Manual to set the NTP server's IP address.

Automatic Time Configuration

NTP Server: Manual ▼

Please enter an IP address.


Time & Schedule - Schedule

In the Management menu on the bar at the top of the page, click **Time & Schedule** to access the Time page, then click the **Schedule** link. The **Schedule** page allows you to control some of the router functions through a pre-configured schedule.

To configure the Time settings, click the **Time** link. Refer to **Time & Schedule - Time** on page 88

Click **Save** at any time to save the changes you have made on this page.

If you wish to remove a schedule, click on the trash can icon in the Delete column. If you wish to edit a schedule, click on the pencil icon in the Edit column. If you wish to create a new schedule, click the **Add a Schedule** button.


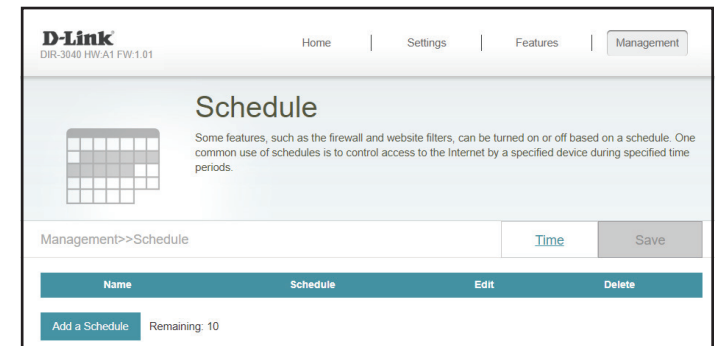


First, enter the name of your schedule in the **Name** field.

Each box represents one hour, with the time at the top of each column. To add a time period to the schedule, simply click on the starting hour and drag to the ending hour. You can add multiple days to the schedule, but only one period per day.

To remove a time period from the schedule, click on the cross icon.

Click **Apply** when you are done.

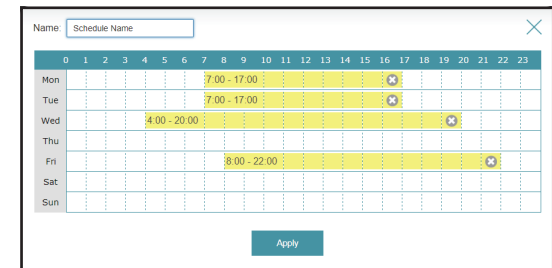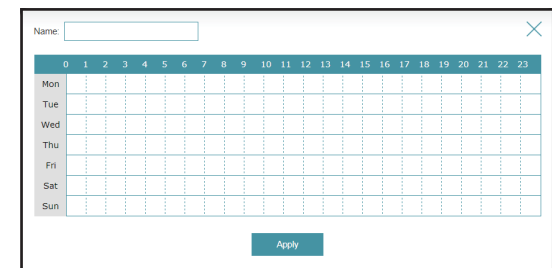

System Log


In the Management menu on the bar at the top of the page, click **System Log**. The router keeps a running log of events. This log can be sent to a Syslog server, or sent to your email address.

Click **Save** at any time to save the changes you have made on this page.

Log Settings

System Log

Click the **Check System Log** button to download a text file containing the system log.

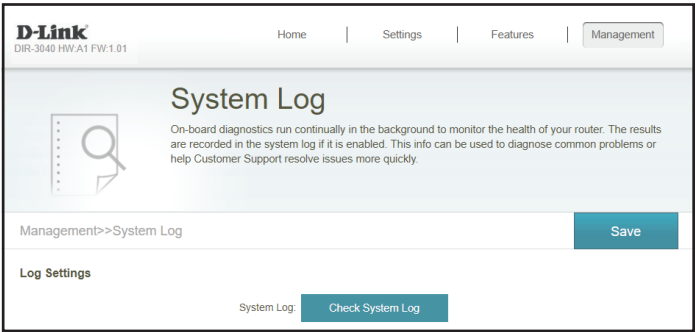


SysLog Settings

Enable Logging to Syslog Server

Check this box to send the router logs to a SysLog Server.

SysLog Server IP Address

 Configurable if **Enable Logging to Syslog Server** is enabled. Enter the IP address for the Syslog server. If the Syslog server is connected to the router, select it from the drop-down menu to automatically populate the field.



Email Settings

Enable E-mail Notification

Enable this option if you want the logs to be automatically sent to an email address.

If you enabled **Enable E-mail Notification**, the following options will appear:

From E-mail Address

Enter the email address your SysLog messages will be sent from.

To E-mail Address

Enter the email address your SysLog messages will be sent to.

SMTP Server Address

Enter your SMTP server address.

SMTP Server Port

Enter your SMTP server port.

Enable Authentication

Check this box if your SMTP server requires authentication.

Account Name

Enter your SMTP account name.

Password

Enter your SMTP account's password.

E-mail Log When Full or On Schedule

Send When Log Full

If enabled, this option will set the router to send the log when it is full.

Send on Schedule

If enabled, this option will set the router to send according to a set schedule.

Schedule

If you enable Send On Schedule, use the drop-down menu to select a schedule to apply. The schedule may be set to Always Enable, or you can create your own schedules in the Schedules section. Refer to **Time & Schedule - Schedule** on page 89 for more information.


System Admin - Admin

In the Management menu on the bar at the top of the page, click **System Admin** to access the Admin page. This page will allow you to change the administrator (Admin) password.

To configure the System settings, click the **System** link. Refer to **System Admin - System** on page 93

Click **Save** at any time to save the changes you have made on this page.

Admin Password	
Password	Enter a new password for the administrator account. You will need to enter this password whenever you configure the router using a web browser or the D-Link Wi-Fi app.
Advanced Settings... - Administration	
Enable Remote Management	Click the toggle to enable remote management for your router.
Remote Admin Port	Specify the port number for accessing the web configuration settings UI.
LED Control	
Status LED	Turn the LED status lights on or off.

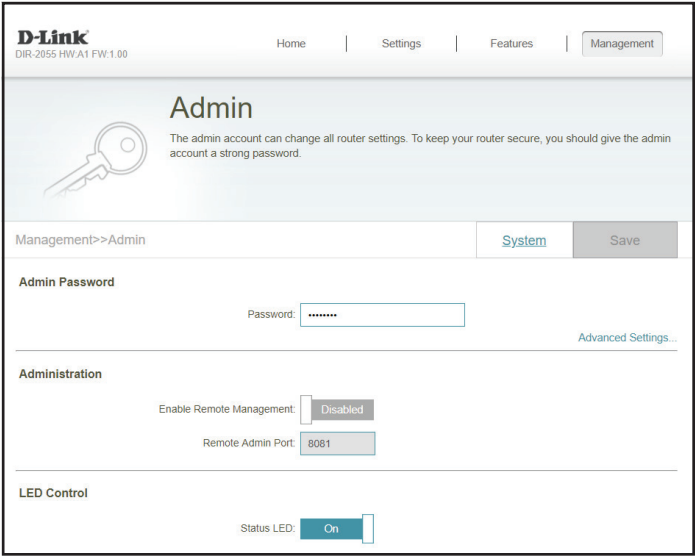

System Admin - System

In the Management menu on the bar at the top of the page, click **System Admin** to access the Admin page, then click **System**. This page allows you to save the router’s current configuration, load a previously saved configuration, reset the router to its factory default settings, or reboot the router.

To configure the Admin settings, click the **Admin** link. Refer to **System Admin - Admin** on page 92

Click **Save** at any time to save the changes you have made on this page.

System

Save Settings to Local Hard Drive

This option will save the current router configuration settings to a file on your computer.

Load Settings from Local Hard Drive

This option will load a previously saved router configuration file. This will overwrite the router’s current configuration.

Restore to Factory Default Settings

This option will restore the router back to the default configurations stored in the firmware. Any settings that have not been saved will be lost, including any rules that you have created. If you want to save the current router configuration settings, use the **Save Settings To Local Hard Drive** button above.


Auto Reboot Configuration

Reboot the Device

Click to reboot the router immediately.

Auto Reboot

You may set the router to automatically reboot at a set time. The options are **Never**, **Daily**, or **Weekly**. You may set the hour, the minute, and the day you wish to have the router automatically reboot at.

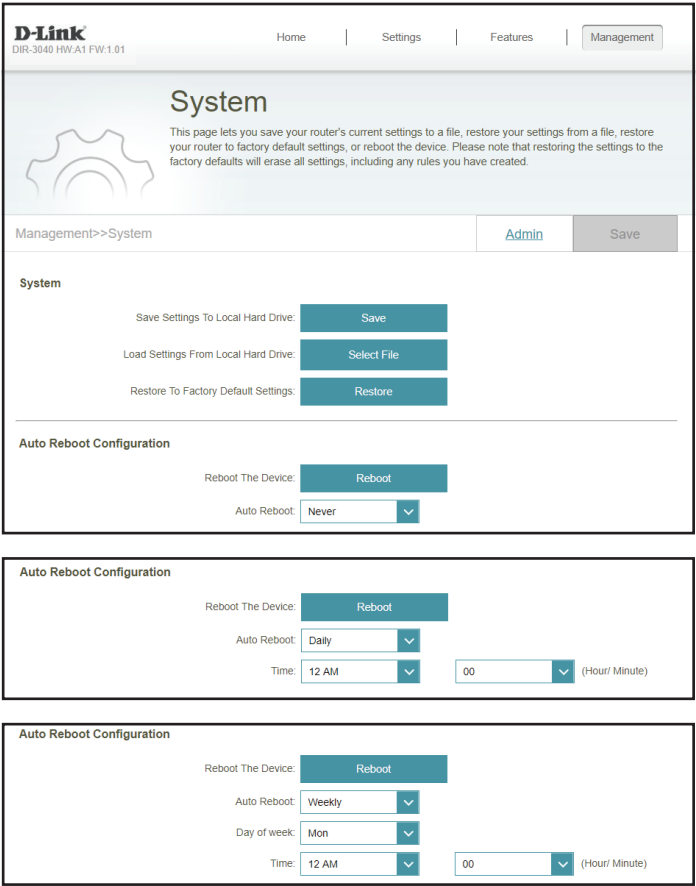


User

In the Management menu on the bar at the top of the page, click **User**. The User section is used to create, manage, and delete user accounts with user-defined access to certain router services.

Click **Save** at any time to save the changes you have made on this page.

If you wish to remove a user, click on the trash can icon in the Delete column. If you wish to edit a user, click on the pencil icon in the Edit column. If you wish to create a new user, click the **Create User** button.

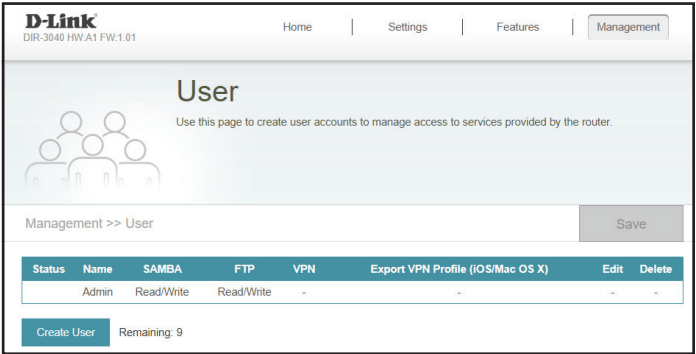

User Name Enter a username for the new user account.

Password Enter a password for the new user account.

SAMBA

Status Enable or disable the Windows file sharing function for this user, allowing connected clients access to media files over the network.

Permission If **SAMBA** is enabled, choose to assign either **Read Only** or **Read/Write** permission.

Folder Click **Browse** to select the folder you want to share.

FTP

Status Enable or disable FTP server access for this user.

Permission If **FTP** is enabled, choose to assign either **Read Only** or **Read/Write** permission.

Folder Click **Browse** to select the folder you want to share.

VPN

Status Enable or disable Virtual Private Network (VPN) functionality for this user.

×

Create New User

User Name:

Password:

SAMBA

Status:

Enabled

Permission:

Read Only

▼

Folder:

root

Browse

FTP

Status:

Disabled

Permission:

Read Only

▼

Folder:

root

Browse

VPN

Status:

Disabled

OK

Upgrade

In the Management menu on the bar at the top of the page, click **Upgrade**. This page will allow you to upgrade the router's firmware, either automatically or manually. To manually upgrade the firmware, you must first download the relevant file from **<http://support.dlink.com>**.

Click **Save** at any time to save the changes you have made on this page.

Firmware

Current Firmware Version

The current firmware's version will be displayed.

Check for New Firmware

Click this button to prompt the router to automatically check for a new firmware version. If a newer version is found, it will prompt you to install it.

Automatic Firmware Upgrade

Automatic Upgrade

If enabled, the router will automatically check for and upgrade to the newest firmware.

Choose Upgrade Time

Enable this function to set the router to automatically upgrade its firmware at a set time.

Upgrade Time

Configurable if **Choose Upgrade Time** is enabled. Set the hour and minute to automatically upgrade by using the drop-down menus.

Upgrade Firmware

Upgrade Firmware

If you wish to upgrade manually, first download the firmware file you wish to upgrade to. Next, click the **Select File** button and browse to the file to install the new firmware.

D-Link
DIR-3040 HW:V1 FW:1.01

Home | Settings | Features | Management

Upgrade

Your device can automatically detect firmware updates, but requires your authorization to install them. You can also check for new firmware manually, and upgrade it from a local file. Firmware may use code that is subject to the GPL licenses. For more information, visit <http://tsd.dlink.com.tw/GPL.asp>.

Management >> Upgrade Save

Firmware

Current Firmware Version: 1.00

Check for New Firmware

Automatic Firmware Upgrade

Automatic Upgrade: Enabled

Update my device automatically every day at 3:30-4:00 AM to always enjoy the latest improvements and features.

Choose Upgrade Time: Disabled

Upgrade Time: 3 AM : 30

Upgrade Manually

Upgrade Firmware: Select File


Statistics

In the Management menu on the bar at the top of the page, click **Statistics**. On the Statistics page you can view the amount of packets that pass through the router on the Internet, LAN, Wi-Fi 2.4 GHz and Wi-Fi 5GHz networks.

To view the Extender statistics, click the **Extender** link. Refer to **Statistics - Extender** on page 98

You can view the **Internet**, **LAN**, **Wi-Fi 2.4 GHz**, **Wi-Fi 5 GHz-1**, or **Wi-Fi 5 GHz-2** by clicking on the respective tabs at the top. The graph will update in real time. To clear the information on the graph, click **Clear** near the top of the page.

The traffic counter will reset if the device is rebooted.

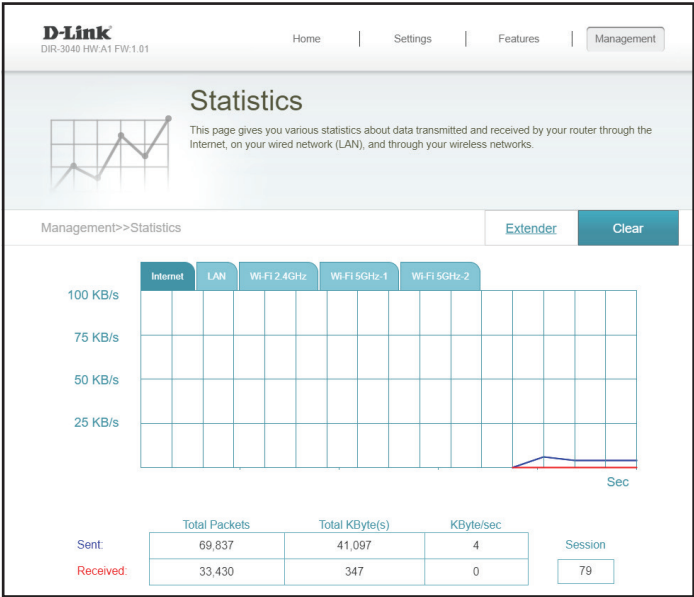


Statistics - Extender

In the Management menu on the bar at the top of the page, click **Statistics** to access the Statistics page, then click **Extender**. This page lets you view the amount of packets that pass through connected extenders.

To view the router's statistics, click the **Router** link. Refer to **Statistics** on page 97


Click the tabs at the top of the graph to view different extenders if you have more than one connected. The graph will update in real time.

The traffic counter will reset if the device is rebooted.

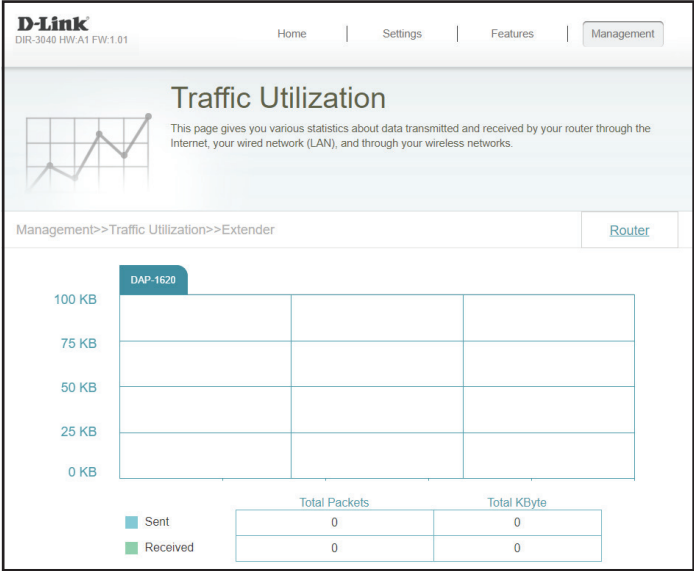

Third Party Services

With the DIR-3040, you can command your router's functionality with your voice through Amazon Alexa and the Google Assistant, enabling you to control your network with voice commands. Features include enabling and disabling your Wi-Fi guest zone without having to go into the UI, rebooting the router and checking your router for firmware upgrades. In order to use third party services to control and manage your device, please register your device with D-Link Cloud Service.

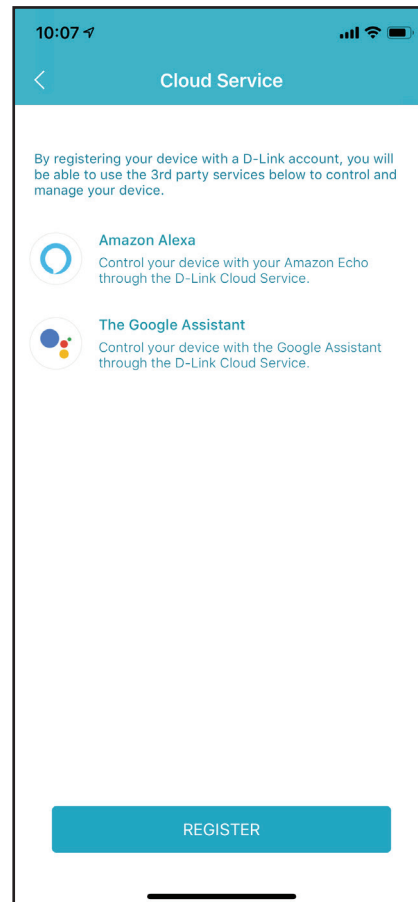

Registering a D-Link Cloud Service Account

In order to use third party services to control and manage your device, you will first need to register your device with D-Link Cloud Service. Follow the steps below if you do not have a D-Link Cloud Service account.

Step 1


Launch the **D-Link Wi-Fi** app.



D-Link Wi-Fi


Step 2

Tap the settings gear icon on the top right corner of the screen.

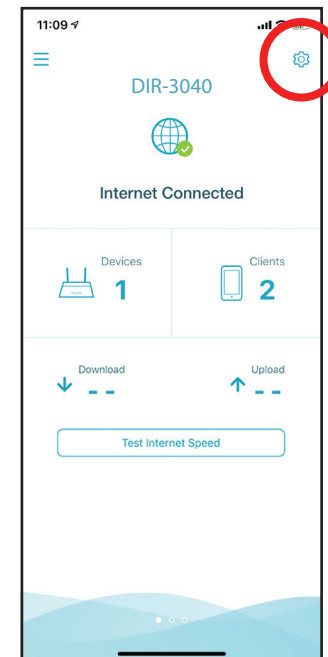


Step 3

Tap the **Cloud Service** icon.

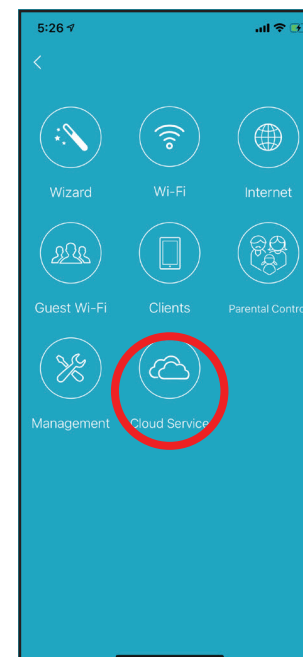


Step 4

Tap the **Register** button.

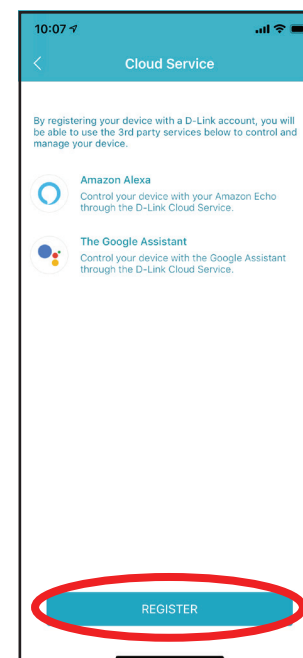

Step 5

In this menu, you can sign up for a D-Link account using Facebook, Google or an Email address. If you already have a D-Link account, you can tap the **Log In** link at the bottom of the screen to be redirected to the login page.

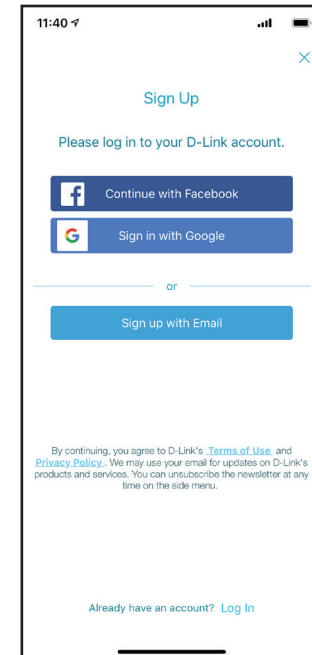

Amazon Alexa Setup

You will need the Amazon Alexa app, an Amazon account, an Amazon Alexa device and a D-Link Cloud Service account to use this feature.

Note: *The screenshots may be different depending on your mobile device's OS version. The following steps show the iOS interface. If you are using an Android device, the appearance may be different from that of the screenshots, but the process is the same.*

Step 1


Launch the **Amazon Alexa** app.



Amazon Alexa


Step 2

Tap the menu icon on the top left-hand corner of the home screen.

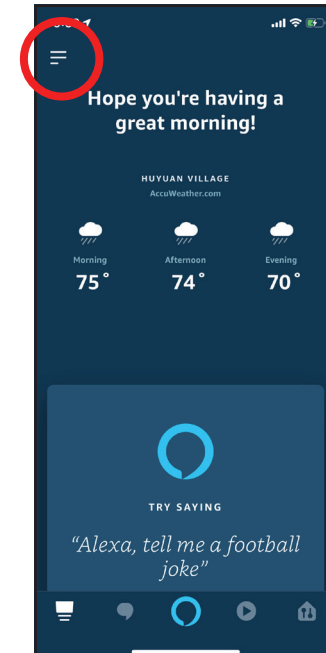


Step 3

Tap on **Skills & Games**.

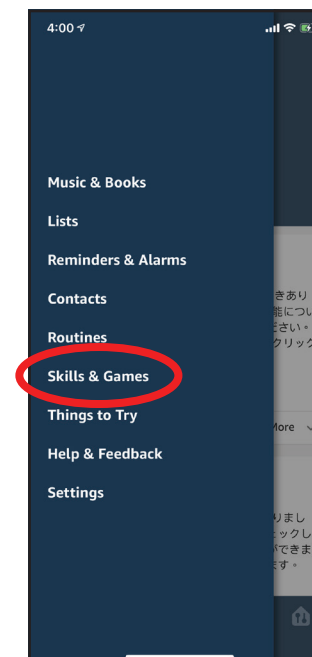


Step 4

Search for "D-Link Wi-Fi". Tap on the search result.

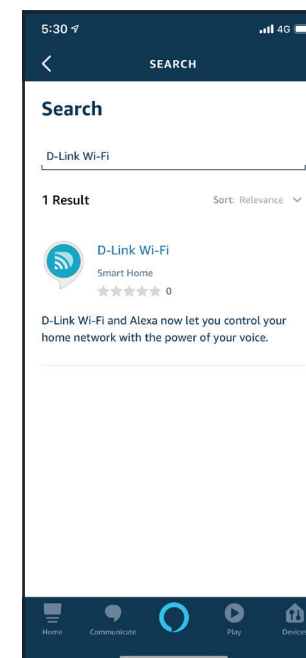

Step 5

Tap **Enable** to link the skill.

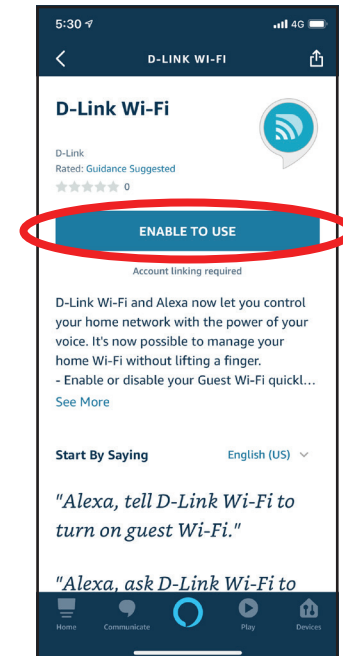

Step 6

Sign in using your D-Link account details.



Step 7

Congratulations! D-Link Wi-Fi has been successfully linked as a skill for your Amazon device. Close the window by tapping **Done** on the top left corner of the screen. Refer to **Amazon Alexa Voice Commands** on page **107** for tasks that you can ask your Amazon Alexa to perform.



Amazon Alexa Voice Commands

With D-Link Wi-Fi enabled as a skill for Alexa, you can ask Alexa to do any of these tasks:

Task	Command
Enable the guest zone.	"Alexa, ask D-Link Wi-Fi to enable my guest zone."
Disable the guest zone.	"Alexa, ask D-Link Wi-Fi to disable my guest zone."
Find out the guest zone credentials.	"Alexa, ask D-Link Wi-Fi what are my guest network credentials."
Reboot the router	"Alexa, ask D-Link Wi-Fi to reboot the router."
Upgrade the router.	"Alexa, ask D-Link Wi-Fi to upgrade my router."

The Google Assistant Setup

You will need the Google Assistant app, a Google account and a D-Link Cloud Service account to use this feature.

Note: The screenshots may be different depending on your mobile device's OS version. The following steps show the iOS interface. If you are using an Android device, the appearance may be different from that of the screenshots, but the process is the same.

Step 1


Launch the **Google Assistant** app.




Assistant

Step 2


Tell your Google Assistant to **"Talk to D-Link Wi-Fi."**

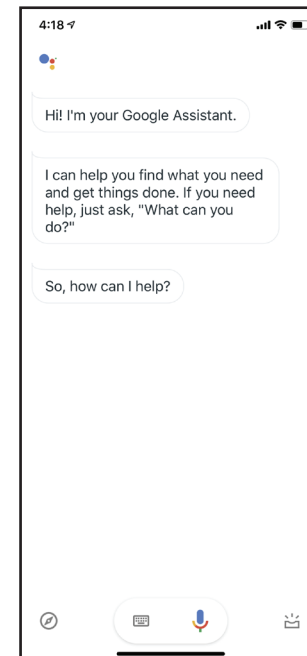

Step 3
Tap **Yes**.

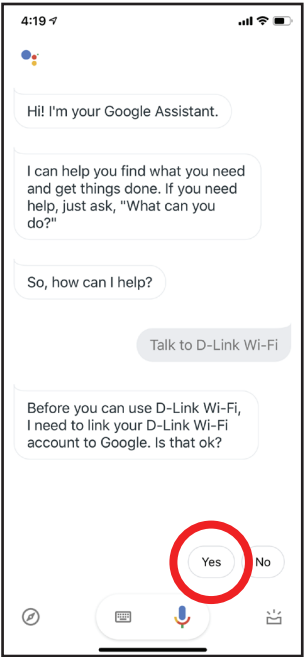


Step 4
Sign in using your D-Link account details.

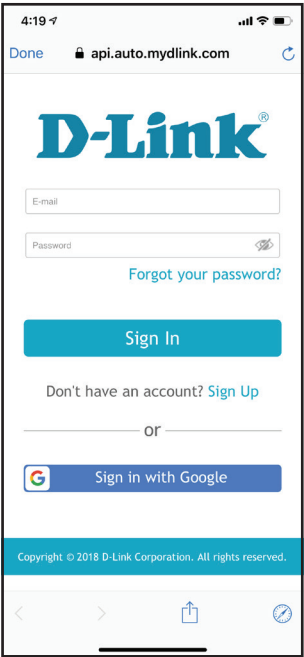


Step 5

Tap **Allow** to continue setup..

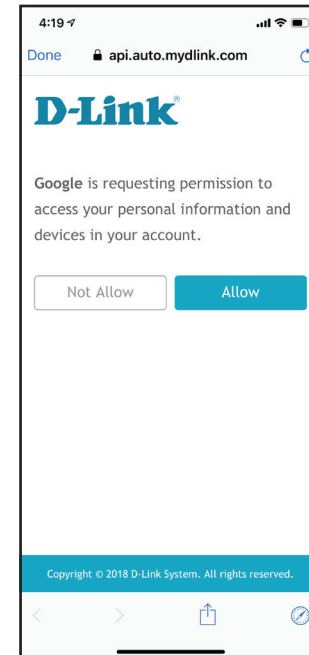

Step 6

Congratulations! D-Link Wi-Fi has been successfully linked to your Google Assistant. Refer to **The Google Assistant Voice Commands** on page 111 for tasks that you can ask your Google Assistant to perform.

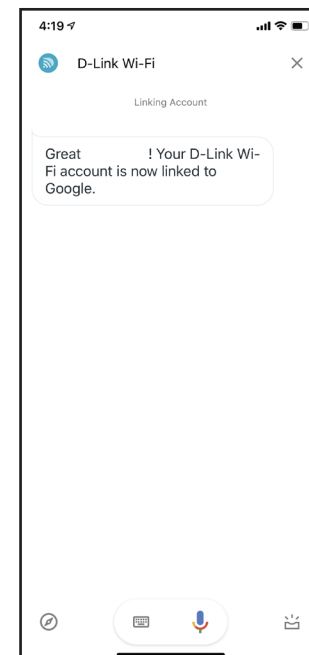

The Google Assistant Voice Commands

With D-Link Wi-Fi enabled as a skill for the Google Assistant, you can ask your Google Assistant to do any of these tasks:


Task	Command
Enable the guest zone.	"OK Google, talk to D-Link Wi-Fi to enable my guest zone."
Disable the guest zone.	"OK Google, talk to D-Link Wi-Fi to disable my guest zone."
Find out the guest zone credentials.	"OK Google, talk to D-Link Wi-Fi to tell me my guest zone credentials."
Reboot the router	"OK Google, talk to D-Link Wi-Fi to reboot the router."
Upgrade the router.	"OK Google, talk to D-Link Wi-Fi to upgrade my router."

Wi-Fi Mesh Setup

D-Link's Wi-Fi Mesh is a scalable solution that allows you to easily increase the coverage of your home or office wireless AC network. Expand your Wi-Fi coverage by adding compatible D-Link access points. Mix and match suitable D-Link devices according to your budget and preferences to fit any floorplan. Setup is effortless; configuration of multiple access points can be done in minutes as settings can be passed on to other access points once the first access point is configured.

Wi-Fi Mesh intelligently finds the shortest/fastest path to your router. So even if you have eight mesh nodes, you can count on Wi-Fi Mesh to push your 4K streaming movies and intense VR games to your device at lightning speeds. Wi-Fi Mesh can also automatically detect malfunctioning nodes and reroute the connection to your working mesh devices.


Please refer to the **Wi-Fi Mesh** on page **60** for Wi-Fi Mesh configuration options.

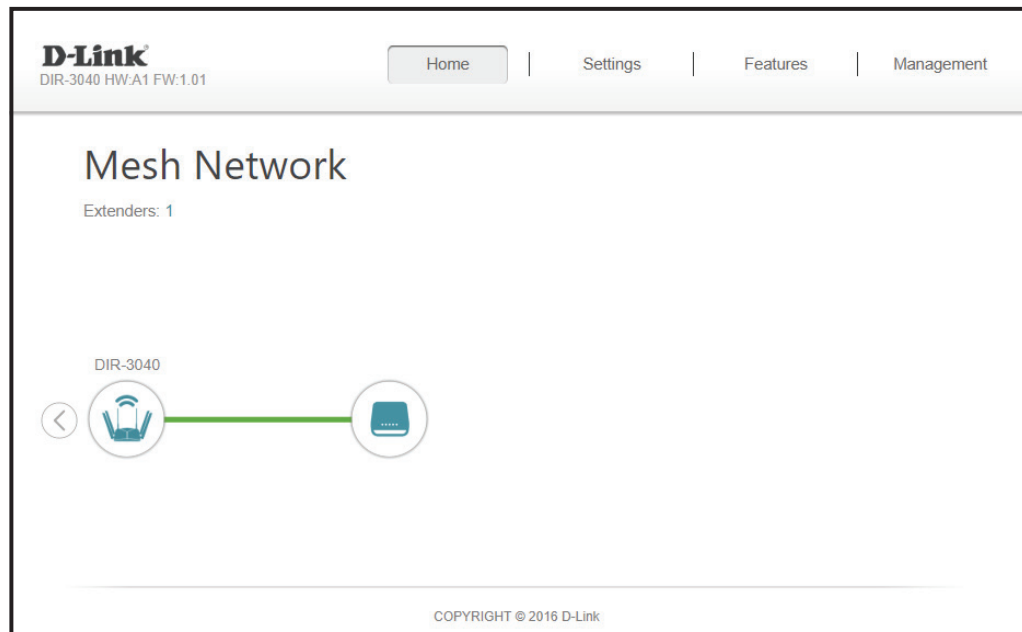

Setup Using an Ethernet Cable

Step 1


Connect and plug in the Wi-Fi Mesh compatible device close to your DIR-3040 and wait for the device to be ready. Refer to the device's manual for behavioural indications.

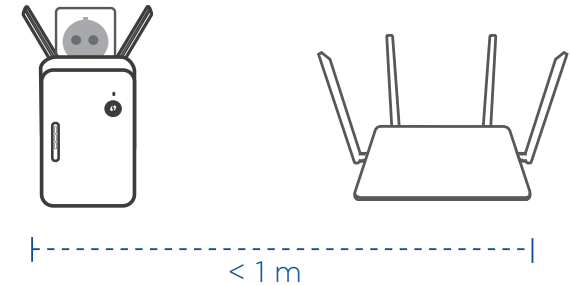

Step 2


Use the Ethernet cable to connect the Wi-Fi Mesh compatible device to one of the LAN ports on the DIR-3040. Refer to the device's manual for behavioural indications signifying that your device has finished being paired.

Note: Please make sure that the device you are pairing to is in factory default settings prior to initiating the mesh pairing process.

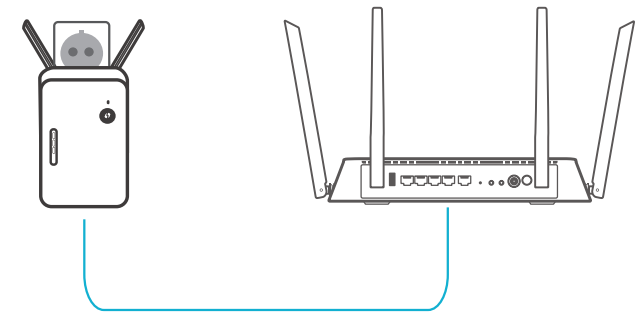


Step 3

Disconnect the Ethernet cable and place the Wi-Fi Mesh compatible device anywhere in your home to extend your whole home Wi-Fi.

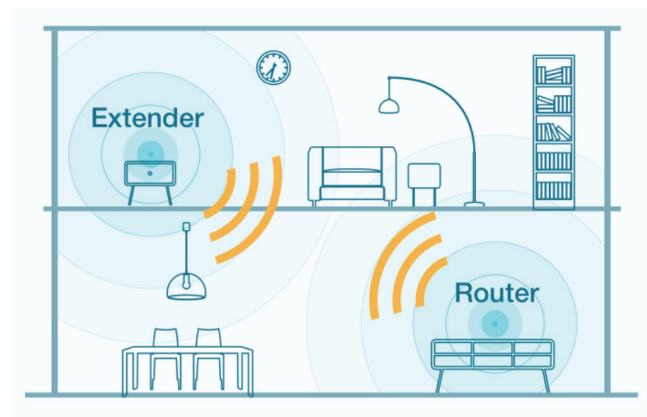

Quick VPN

This router is equipped with D-Link's Quick VPN technology. Virtual Private Networking (VPN) creates a connection between devices across the Internet. Using Quick VPN allows you to more securely connect your computer or mobile device to places with free, untrusted Wi-Fi hotspots in places like coffee shops and hotels by encrypting and relaying it through your home Internet connection. This extra 'hop' reduces the chances of hackers stealing your information, such as logins, passwords, and credit card numbers. When traveling, Quick VPN lets you watch sports and use video streaming services without experiencing blackouts or filtering. You can surf the whole Internet unfiltered and unblocked, just as you would at home.

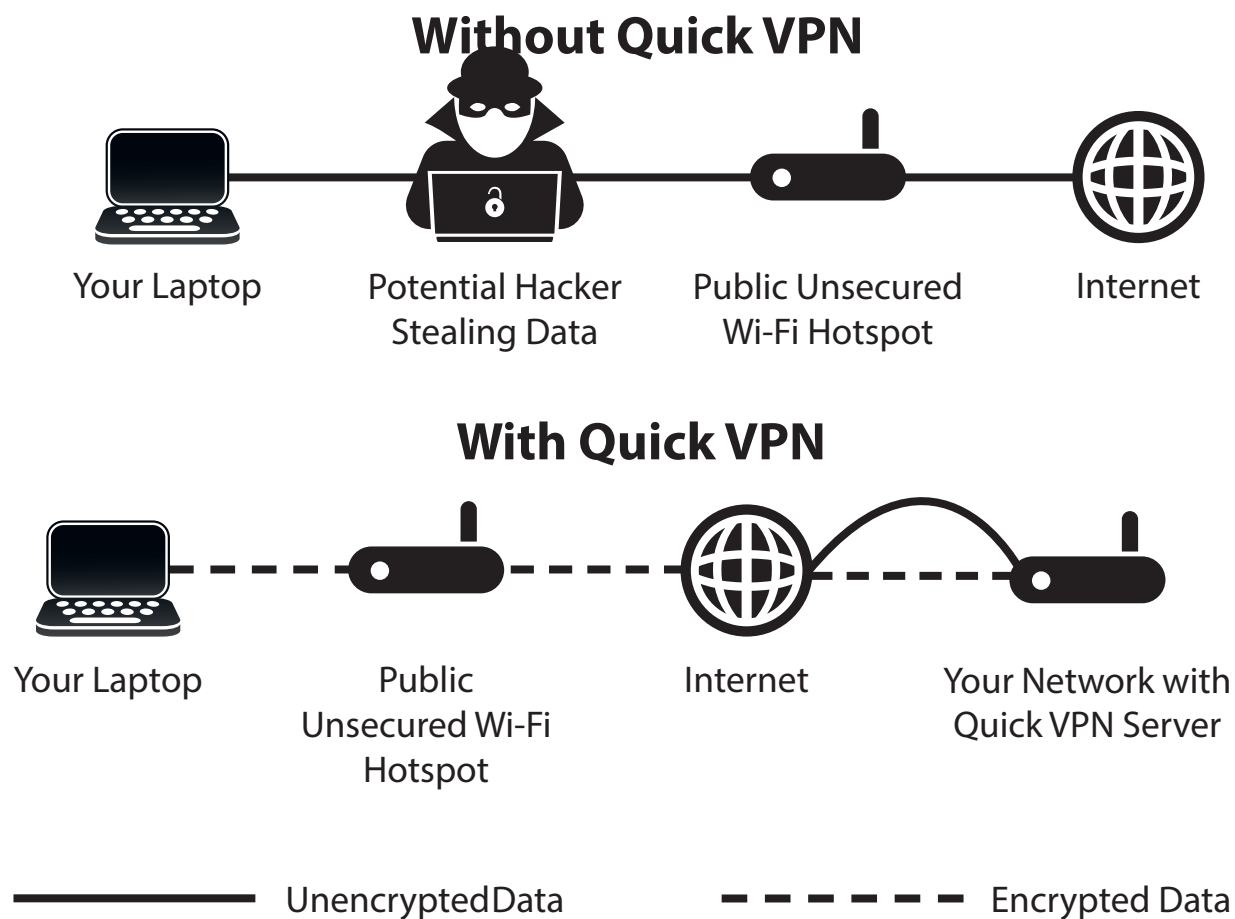

Important Information

The following instructions explain and help you to configure your D-Link Quick VPN enabled router and devices to create a Virtual Private Network (VPN). This feature is provided for advanced users who wish to connect remotely and use their router's Internet connection to add a layer of security while using untrusted networks. Configure the Quick VPN Server on your router first and then set up client devices to connect through your router's WAN connection.


- Quick VPN only provides an added layer of security against specific types of snooping attacks and does not guarantee complete data integrity or protection. Only traffic in the tunnel between your router and device will be encrypted, WAN traffic will leave your D-Link Quick VPN enabled router unencrypted.
- Keep your Quick VPN Username, Password, and Passkey safe. Keep your Quick VPN Username, Password, and Passkey safe. It is recommended that you change these credentials periodically.
- A device connected via Quick VPN tunnel may experience lower data throughput and higher latency due to a number of factors including: Internet conditions, local and remote network Wi-Fi and WAN bandwidth limitations, and increased latency. This may negatively impact real time voice and video communication.
- Quick VPN supports up to five concurrent VPN client sessions using the same login and password are supported. Quick VPN uses L2TP/IPsec with MSCHAPv2, PAP, or CHAP authentication.
- Your device may warn you that your information may be intercepted, since you control the Quick VPN server, you may ignore this.
- UDP Ports 500, 4500, 1701 and IP Port 50 must be open in order for Quick VPN to work.
- L2TP/IPsec VPN usage may be restricted in some countries and on some networks. If you have trouble using Quick VPN on some networks, but not others and are not violating network access rules, try contacting your ISP or network administrator.
- Devices connected via Quick VPN are assigned addresses on a separate subnet (ex. 192.168.1.x). Some network resources may be unavailable when connecting via Quick VPN.
- If your Internet connection uses DHCP, it is strongly recommended that you first set up Dynamic DNS (DDNS), such as D-Link DDNS, to eliminate the need to reconfigure client devices in the event your ISP assigns you a new WAN IP address.

iOS Devices


VPN Setup Instructions

This section provides Quick VPN setup instructions for iOS devices. Refer to **Quick VPN** on page **87** for your router setup instructions.

Go into **Settings** on your compatible iOS device.
Scroll to and tap **General**.
Scroll to and tap **VPN**.

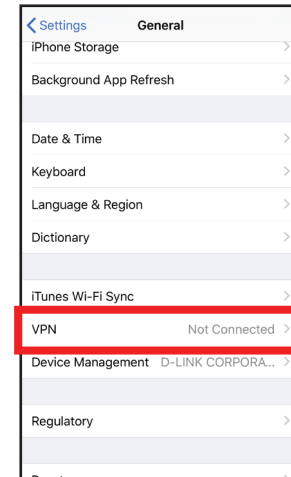

Tap **Add VPN Configuration...**

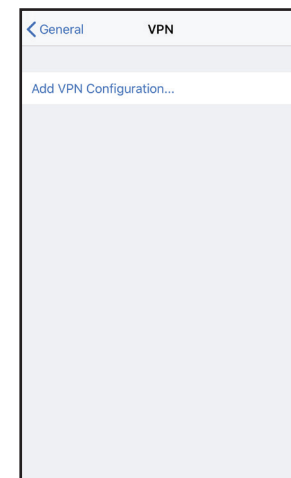

You should see a pop up window asking you to fill out the details of your VPN connection.

Type: Choose **IPSec**. Tap **Back** to return to the Add Configuration page.

Description: For reference purposes only, used to differentiate between multiple VPN connections.

Server: Enter the IP/DDNS address of your Quick VPN server.

Account: Enter the Username used to authenticate login to VPN server

Password: Enter Password used to authenticate login to VPN server

Secret: Enter your Passkey (PSK).

Tap **Done** at the top right corner of the page to finish adding the configuration.

Your iOS device is now configured to connect to your Quick VPN server.

CancelQuick VPNDone

TypeIPsec

DescriptionQuick VPN

ServerIP/DDNS_address_of_QuickVPN

Accountvpn

Password●●●

Use Certificate☐

Group Name



Secret●●●●●●

PROXY


OffManualAuto

Connect or Disconnect

To connect or disconnect from to your Quick VPN server, open **Settings** and tap the button next to **VPN**.

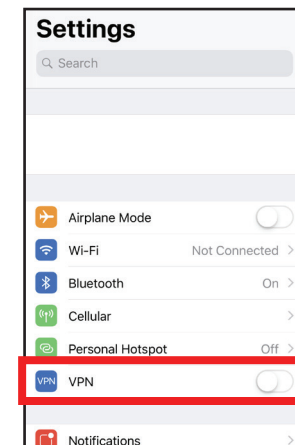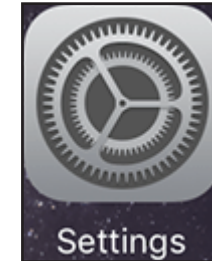

The VPN icon will appear in the notification area at the top of your screen indicating that your device is currently connected to the Quick VPN server.

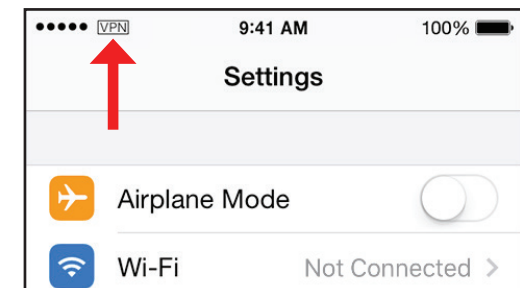

Mac OS X



VPN Setup Instructions

This section provides Quick VPN setup instructions for OS X using the **Export** Profile function. Refer to **Quick VPN** on page **87** for your router setup instructions.


Open the exported profile. The Install Profile dialogue will appear; click **Continue** and **Install**.

Enter your user account password when prompted. Close the **Profiles** dialogue.

Go to **Apple > System Preferences... > Network** and select the Quick VPN connection and click **Authentication Settings**.

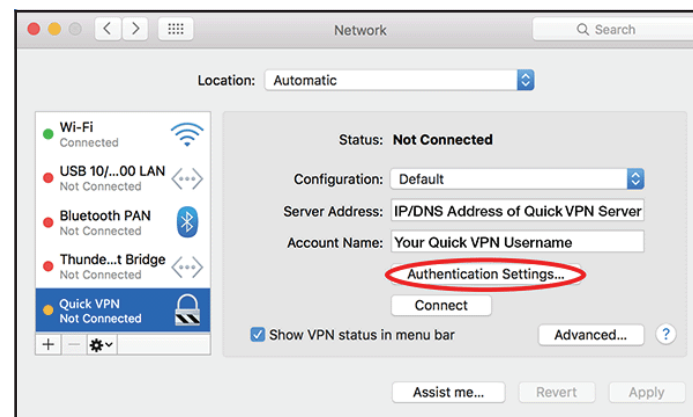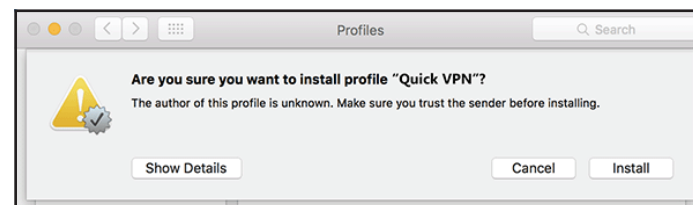

Enter your **Passkey** in the **Shared Secret** text box and click **OK, Apply**, then **OK**.

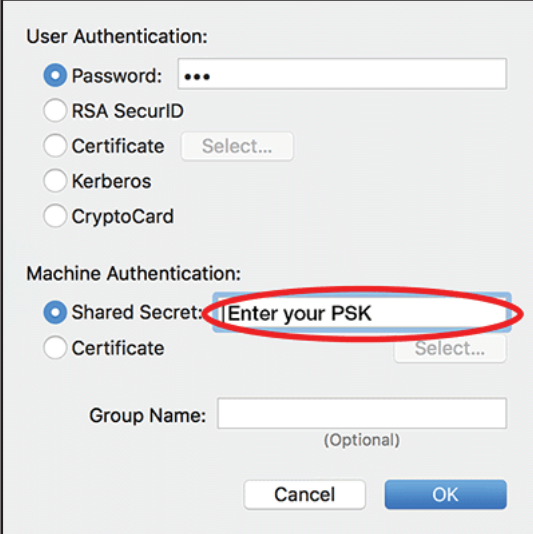

The screenshot shows a configuration window with two main sections: "User Authentication" and "Machine Authentication".



- User Authentication:** Includes radio buttons for "Password", "RSA SecurID", "Certificate", "Kerberos", and "CryptoCard". The "Password" option is selected, with a corresponding text box containing three dots.
- Machine Authentication:** Includes radio buttons for "Shared Secret" and "Certificate". The "Shared Secret" option is selected. The text box next to it contains the placeholder text "Enter your PSK" and is circled in red.
- Group Name:** A text box with the label "Group Name:" and the note "(Optional)" below it.
- Buttons:** "Cancel" and "OK" buttons at the bottom right.

Your Mac is now configured to connect to your Quick VPN server.

Connect or Disconnect

To connect to or disconnect from your Quick VPN server, go to **Apple > System Preferences... > Network**.

Select the Quick VPN connection and click on the **Connect** or **Disconnect** button.

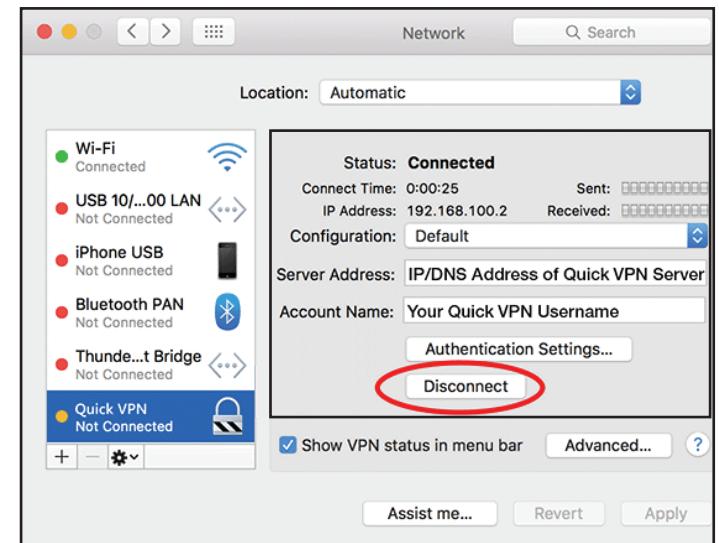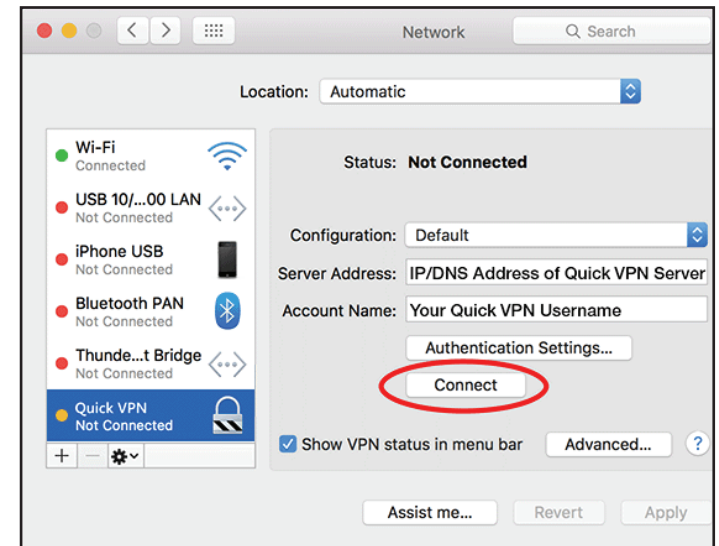


Windows 7

VPN Setup Instructions


This section provides Quick VPN setup instructions for Windows 7. Refer to **Quick VPN** on page **87** for your router setup instructions.

Click the **Start** button and type **vpn** into the **Search programs and files** box.


Select **Set up a virtual private network (VPN) connection**.

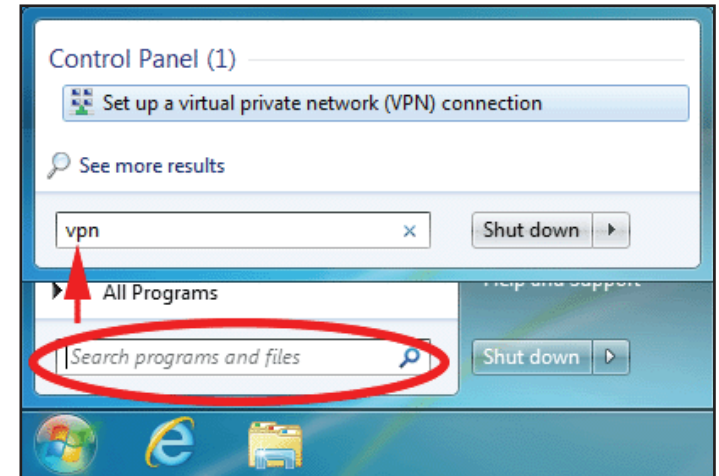

Enter the **IP/DDNS address** of your Quick VPN server in the **Internet address** box, create a name for your connection in the **Destination Name**, check **Don't Connect now; just set it up so I can connect later**, and click **Next**.

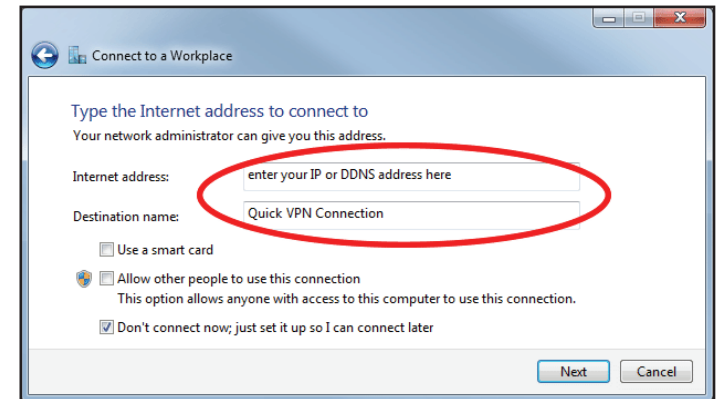


Enter your **Username**. If you would like windows to save your password, enter your **Password** and check **Remember this password**. Click **Create** to continue.

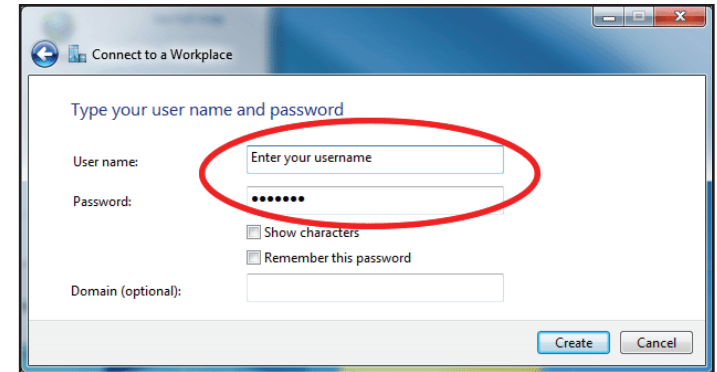


Do not click **Connect Now**.

Click **Close**. Click the **Start** button and type **view network connections** into the **Search programs and files** text box. Select **View network connections**.

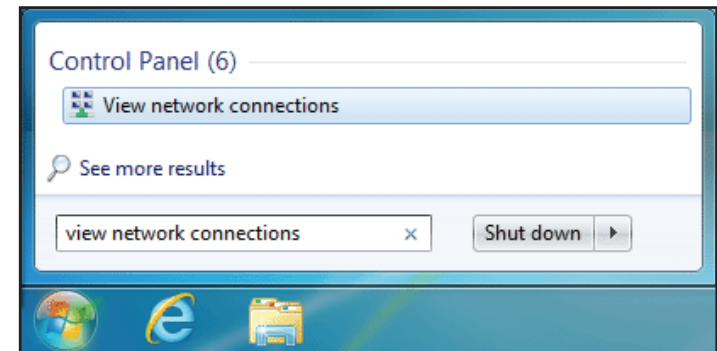


Click **Advanced settings**. Enter your **Passkey** in the **Key** text box under **Use preshared key for authentication**. Click **OK** to close **Advanced Properties** and click **OK** to close **Quick VPN Connection Properties**.

Your Windows 7 system is now configured to connect to your Quick VPN server.

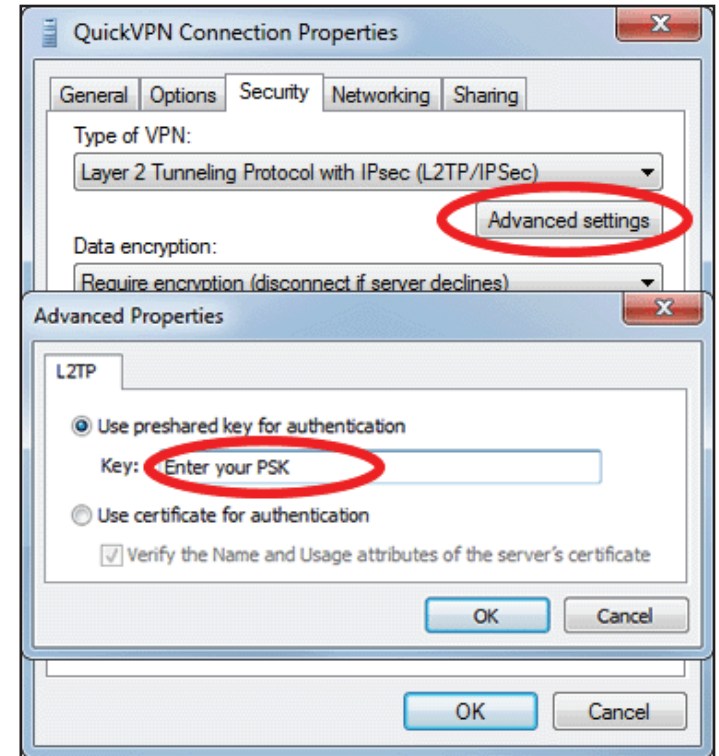

Connect or Disconnect

To connect to or disconnect from your Quick VPN server, click on the **Network Settings** icon in the notification area of the Windows taskbar and from the **Dial Up and VPN** section click on your Quick VPN connection and click on the **Connect** or **Disconnect** button.

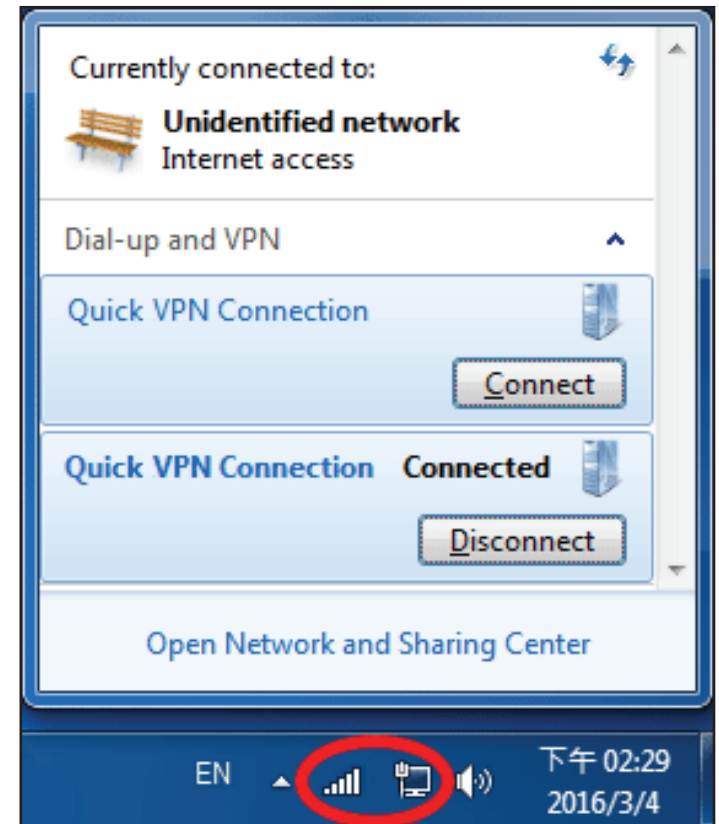

Windows 8.1/8


VPN Setup Instructions

This section provides Quick VPN setup instructions for Windows 8.1/8. Refer to **Quick VPN** on page **87** for your router setup instructions.


This section provides Quick VPN setup instructions for Windows 8.1/8.

Click the **Start** button and type **vpn**.

Select **Manage virtual private networks**.

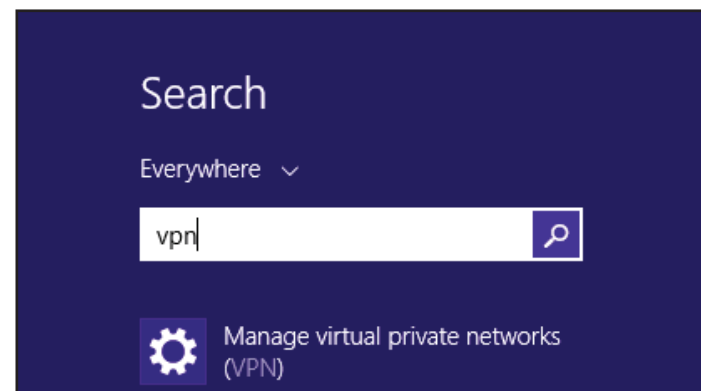

From the Network Settings page, click **Add a VPN Connection**.

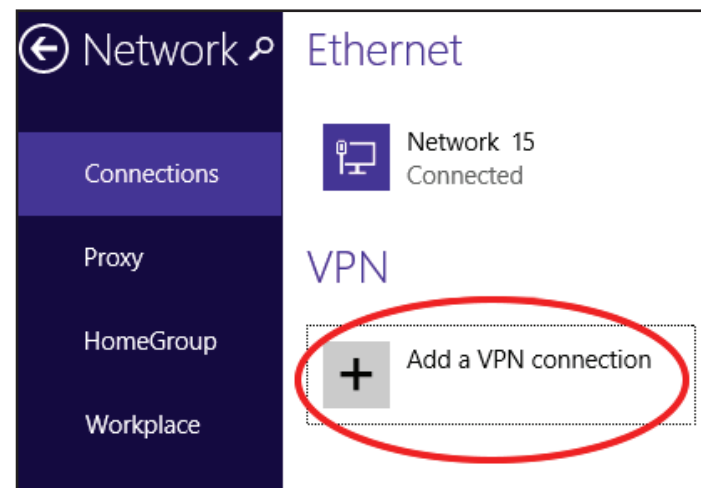


- 1 Select **Microsoft** from **VPN Provider**.
- 2 Create a name for your VPN connection.
- 3 Enter your **IP/DDNS address** of your Quick VPN server.
- 4 Select **User name and password** from **Type of sign-in info**.
- 5 If you would like windows to remember your sign-in information, enter your **User name, Password**, and select **Remember my sign-in info**
- 6 Choose **Save**.


The screenshot shows the 'Add a VPN connection' dialog box with the following fields and steps:

- Step 1:** VPN provider dropdown menu set to 'Microsoft'.
- Step 2:** Connection name text box containing 'Quick VPN'.
- Step 3:** Server name or address text box containing 'IP/DDNS Address of Quick VPN Server'.
- Step 4:** Type of sign-in info dropdown menu set to 'User name and password'.
- Step 5:** A group of fields including 'User name (optional)' with 'Username', 'Password (optional)' with masked characters, and a checked 'Remember my sign-in info' checkbox.
- Step 6:** The 'Save' button.

Right-click on the Quick VPN Connection you just created and left-click on **Properties**.

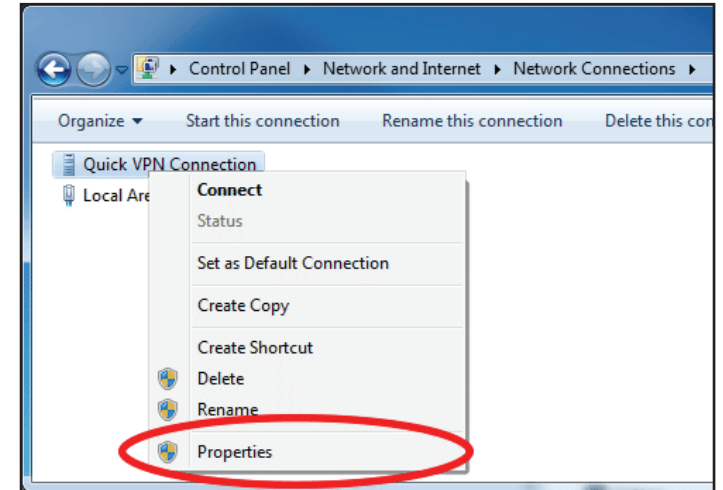


Select the **Security** tab. For the **Type of VPN**, select **Layer 2 Tunneling with IPsec (L2TP/IPSec)**.

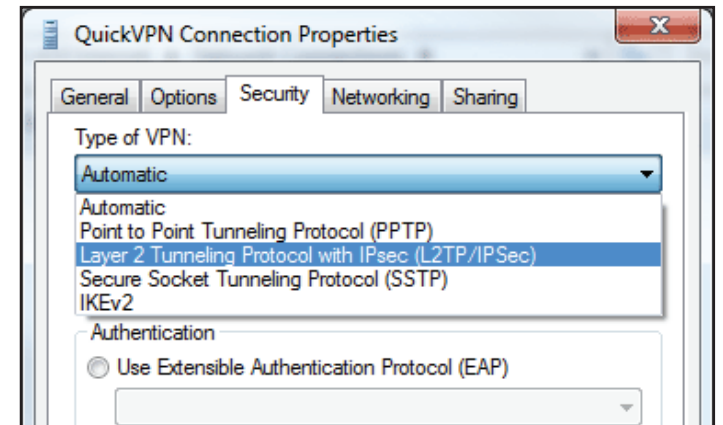


Click the **Start** button and type **view network connections**.

Select **View network connections**.

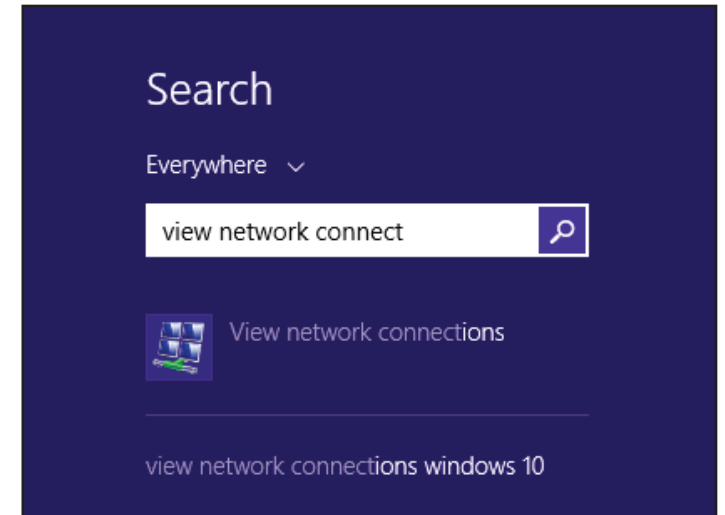

Right-click your **Quick VPN Connection** and left-click **Properties**.
Select the **Security** tab.


For the **Type of VPN**, select **Layer 2 Tunneling with IPsec (L2TP/IPSec)**.

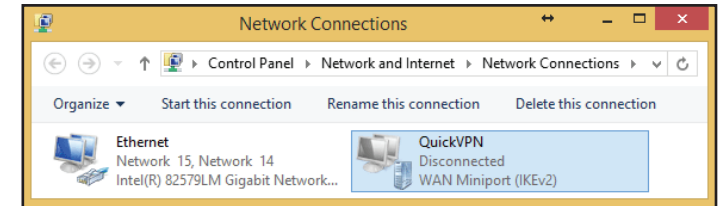

Click **Advanced settings**. Enter your **Passkey** in the **Key** text box under **Use preshared key for authentication**.



Click **OK** to close **Advanced Properties** and click **OK** to close **Quick VPN Properties**.

Your Windows 8.1/8 system is now configured to connect to your Quick VPN server.

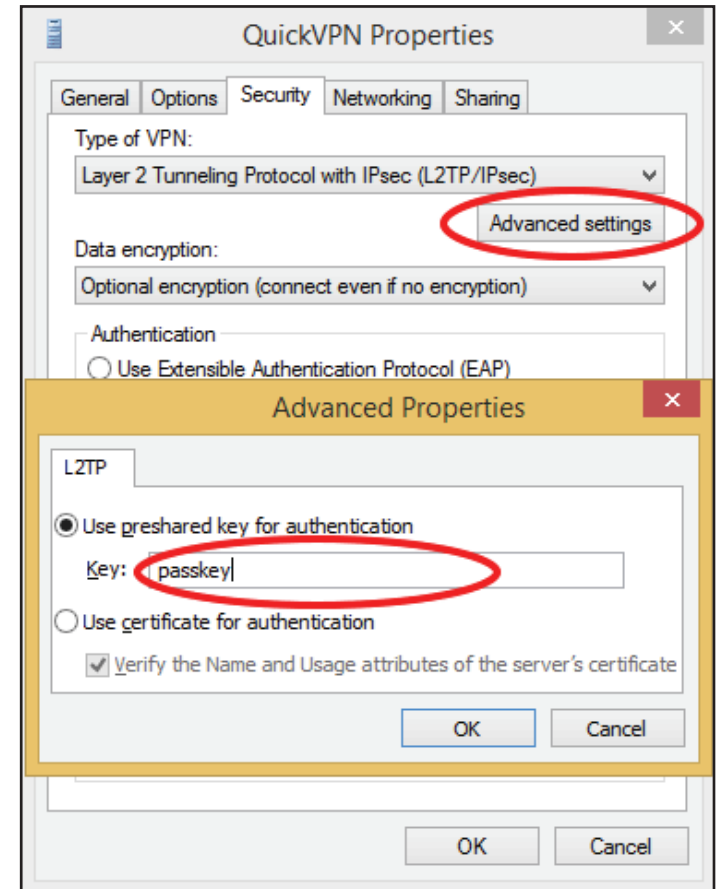

Connect or Disconnect

 To connect to or disconnect from your Quick VPN server, click on the **Network Settings** icon in the notification area of the Windows taskbar. Click on your Quick VPN connection and click on the **Connect** or **Disconnect** button.

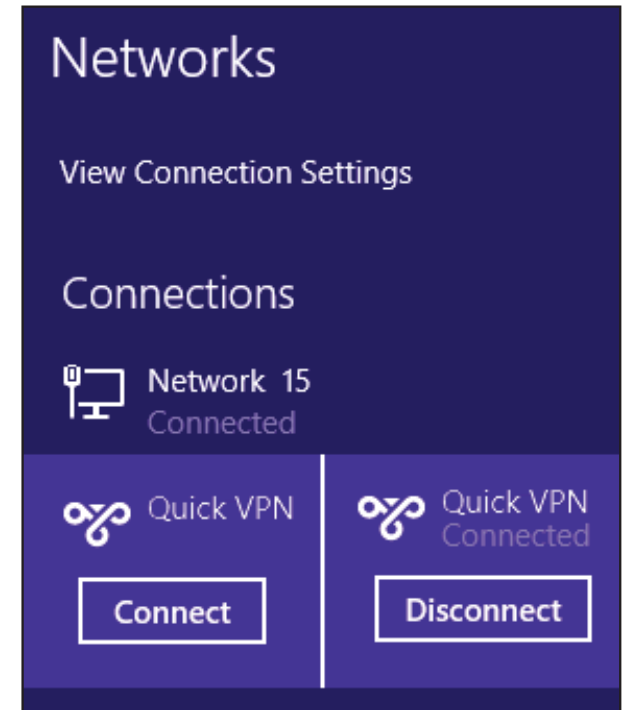


Windows 10

VPN Setup Instructions

This section provides Quick VPN setup instructions for Windows 7. Refer to **Quick VPN** on page **87** for your router setup instructions.

This section provides Quick VPN setup instructions for Windows 10.

Click **Start > Settings > Network & Internet > Network and Sharing Center > VPN > Add a VPN Connection.**

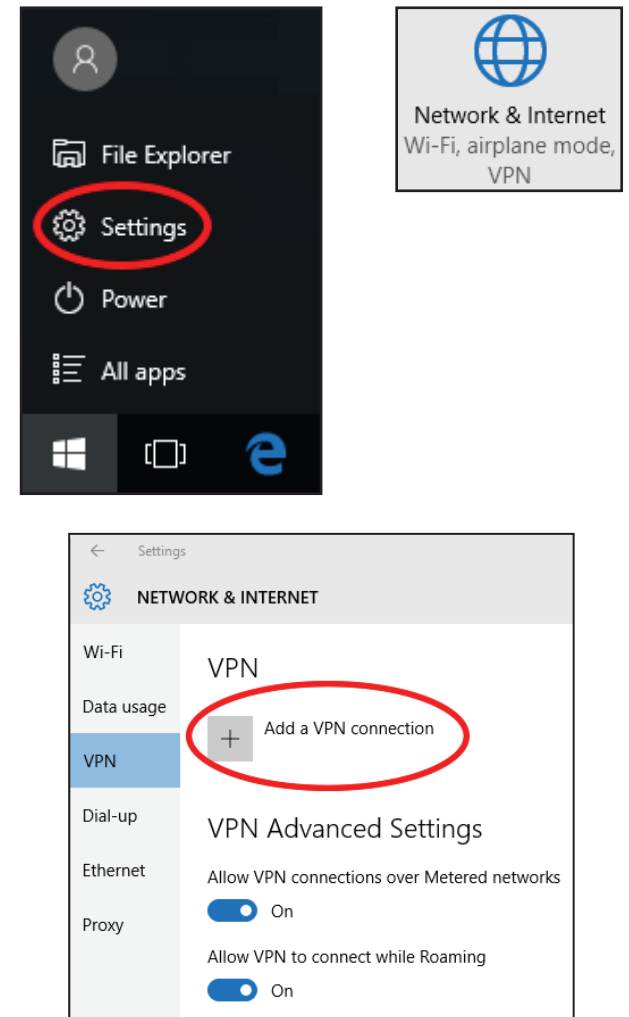

- 1 Select **Windows (built-in)** from the **VPN Provider** drop down menu.
- 2 Create a name for your VPN connection.
- 3 Enter your **IP/DDNS address** of your Quick VPN server.
- 4 Select **L2TP/IPSec with pre-shared key** from **VPN type**.
- 5 Enter the **Passkey**.
- 6 Select **User name and password** from **Type of sign-in info**.
If you would like windows to remember your sign-in information, enter your **User name, Password**, and select **Remember my sign-in info**
- 7 Choose **Save**.

Your Windows 10 system is now configured to connect to your Quick VPN server.

The screenshot shows the 'Add a VPN connection' window in Windows 10. The window has a blue header and a white body. The steps are numbered 1 through 7, corresponding to the instructions in the text. Step 1: 'VPN provider' dropdown menu is set to 'Windows (built-in)'. Step 2: 'Connection name' text box contains 'Quick VPN'. Step 3: 'Server name or address' text box contains 'IP/DDNS Address of Quick VPN Server'. Step 4: 'VPN type' dropdown menu is set to 'L2TP/IPsec with pre-shared key'. Step 5: 'Pre-shared key' text box contains 'Passkey'. Step 6: 'Type of sign-in info' dropdown menu is set to 'User name and password'. Below this, the 'User name (optional)' text box contains 'Username' and the 'Password (optional)' text box contains a series of dots. Step 7: The 'Remember my sign-in info' checkbox is checked. At the bottom right, there are 'Save' and 'Cancel' buttons.

Add a VPN connection

VPN provider

1 Windows (built-in)

Connection name

2 Quick VPN

Server name or address

3 IP/DDNS Address of Quick VPN Server

VPN type

4 L2TP/IPsec with pre-shared key

Pre-shared key

5 Passkey

Type of sign-in info

User name and password

User name (optional)

6 Username

Password (optional)



.....

☒ Remember my sign-in info

7 Save Cancel

Connect or Disconnect

To connect to or disconnect from your Quick VPN server, click on the **Network Settings** icon in the notification area of the Windows taskbar and click on your Quick VPN connection. The **Network & Internet** Settings page will open. Click on the **Connect** or **Disconnect** button.

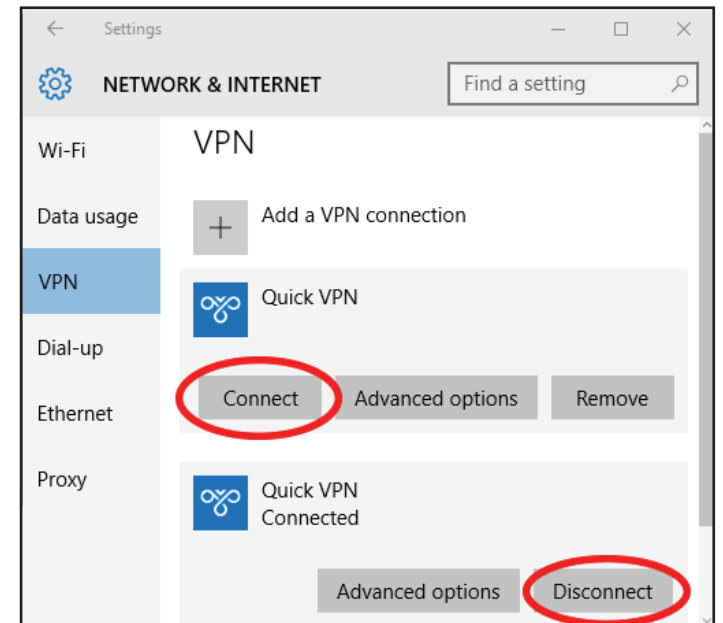
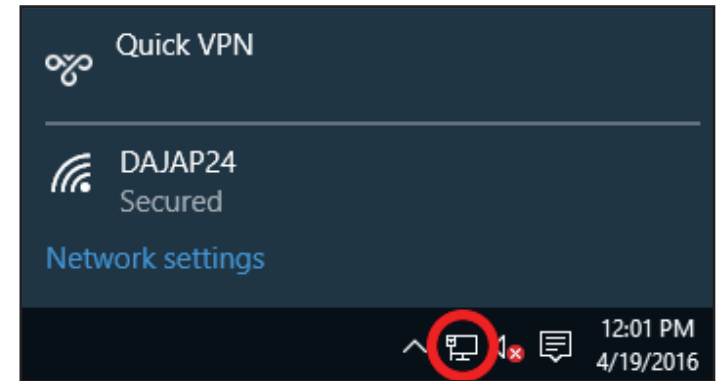


Android

VPN Setup Instructions

This section provides Quick VPN setup instructions for Android devices. Your device's screens may vary. Refer to **Quick VPN** on page **87** for your router setup instructions.

Go to **Settings** > **More** from the **Wireless & networks** > **VPN** > +

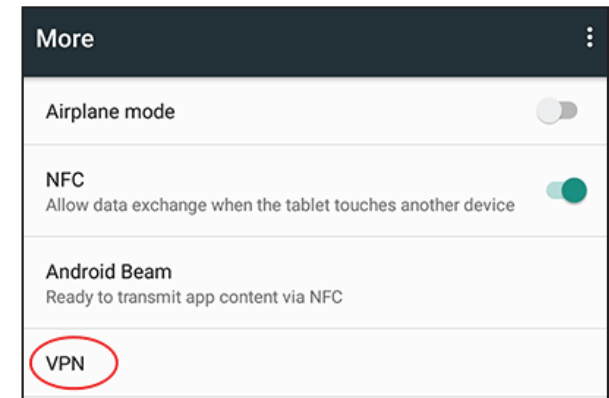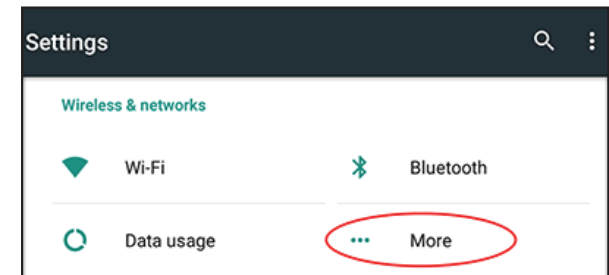

- 1 Enter a name for your VPN connection.
- 2 Select **L2TP/IPSec** PSK for **Type**.
- 3 Enter the **IP/DDNS address** of your Quick VPN server.
- 4 Enter your **Passkey** in **IPSec pre-shared key** field.
- 5 Choose **Save**.

Your Android device is now configured to connect to your Quick VPN server.

VPN

Edit VPN profile

Name
1 Quick VPN

Type
2 L2TP/IPSec PSK

Server address
3 Quick VPN IP/DDNS address

L2TP secret
(not used)

IPSec identifier
(not used)

IPSec pre-shared key
4




☐ Show advanced options

5

CANCEL SAVE

Connect or Disconnect

To connect to or disconnect from your Quick VPN server, go to **Settings** > **More** from the **Wireless & networks** > **VPN** and select the **Quick VPN** connection you created.

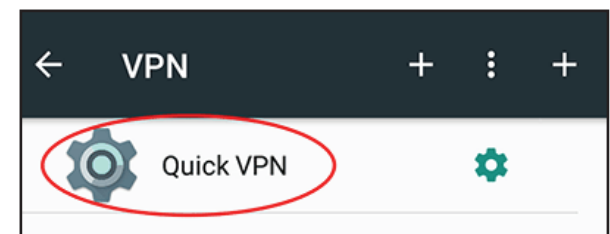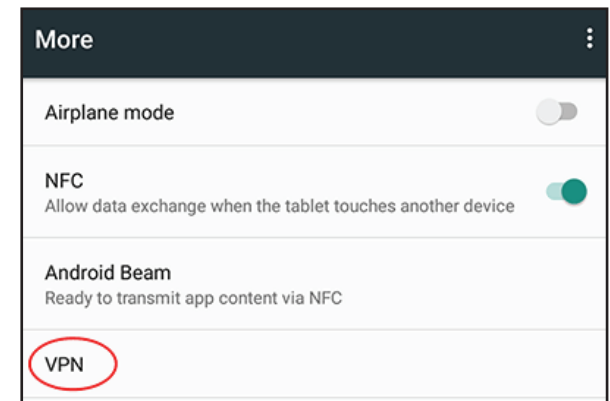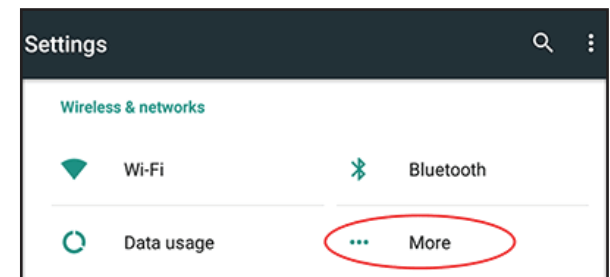

To connect, enter your **Username** and **Password** and select **CONNECT**.

Connect to Quick VPN

Username

Your Quick VPN Username

Password

.....

☐ Save account information

CANCELCONNECT

To disconnect, select **DISCONNECT**.

VPN is connected

Session: Quick VPN

Duration: 00:00:09

Sent: 97 bytes / 5 packets

Received: 64 bytes / 4 packets

DISCONNECTCANCEL

Connect a Wireless Client to your Router

WPS Button

The easiest way to connect your wireless devices to the router is with WPS (Wi-Fi Protected Setup). Most wireless devices such as wireless adapters, media players, Blu-ray DVD players, wireless printers and cameras will have a WPS button (or a software utility with WPS) that you can press to connect to the router. Please refer to your user manual for the wireless device you want to connect to make sure you understand how to enable WPS. Once you know, follow the steps below:

Step 1 - Press the WPS button on the router for about 1 second. The wireless LEDs will start to blink.



Step 2 - Within 2 minutes, press the WPS button on your wireless device (or launch the software utility and start the WPS process).

Step 3 - Allow up to 1 minute for your connection to be configured. Once the Internet light stops blinking, you will be connected and your wireless connection.

Windows® 10

To join an existing network, locate the wireless network icon in the taskbar, next to the time display and click on it.

Clicking on this icon will display a list of wireless networks which are within range of your computer. Select the desired network by clicking on the SSID.




To connect to the SSID, click **Connect**.

To automatically connect with the router when your device next detects the SSID, check the **Connect Automatically** check box.

You will then be prompted to enter the Wi-Fi password (network security key) for the wireless network. Enter the password into the box and click **Next** to connect to the network. Your computer will now automatically connect to this wireless network when it is detected.




Wireless Icon

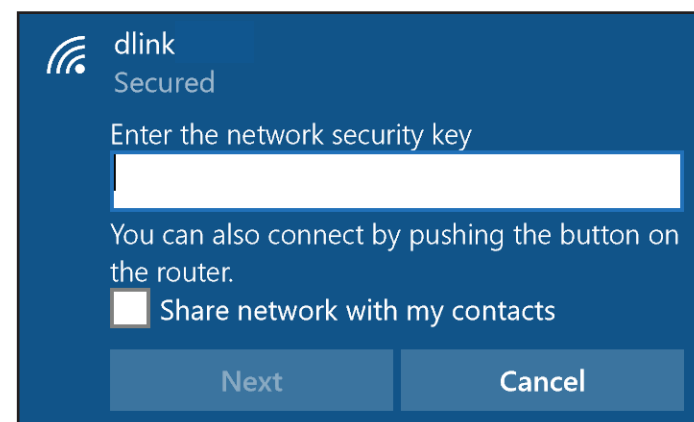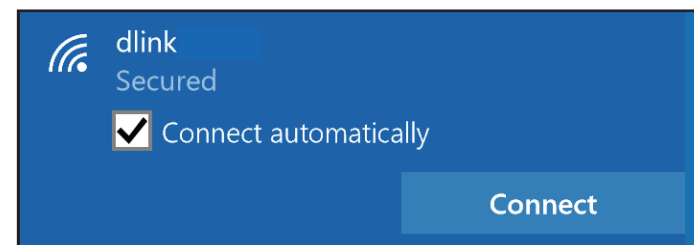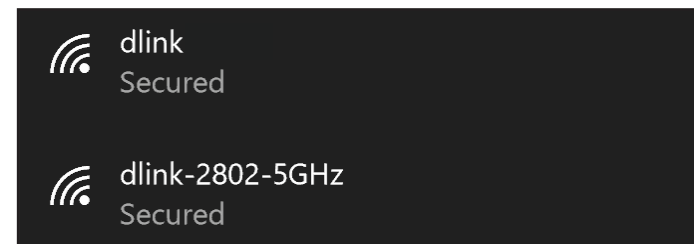


Windows® 8 - WPA/WPA2

 To join an existing network, locate the wireless network icon in the taskbar, next to the time display.




Wireless Icon

Clicking on this icon will display a list of wireless networks which are within connecting proximity of your computer. Select the extender's network by clicking on the network name.

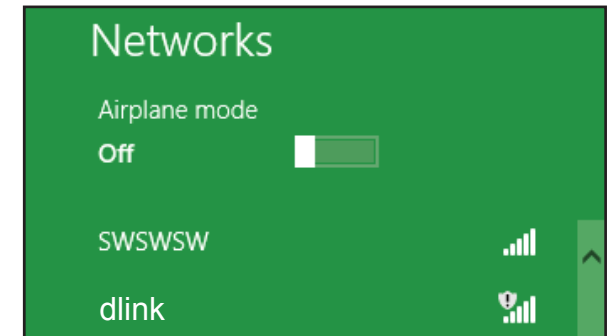


You will then be prompted to enter the network security key (Wi-Fi password) for the wireless network. Enter the password into the box and click **Next**.

If you wish to use Wi-Fi Protected Setup (WPS) to connect to the router, you can also press the WPS button on your router at this point to enable the WPS function.

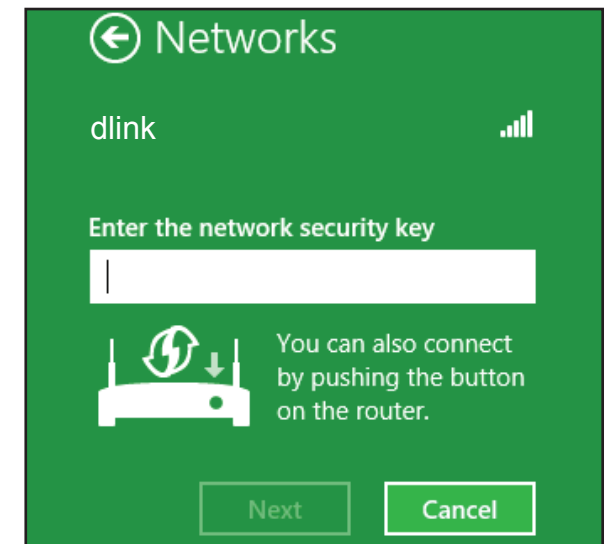

When you have established a successful connection with a wireless network, the word **Connected** will appear next to the name of the network to which you are connected.

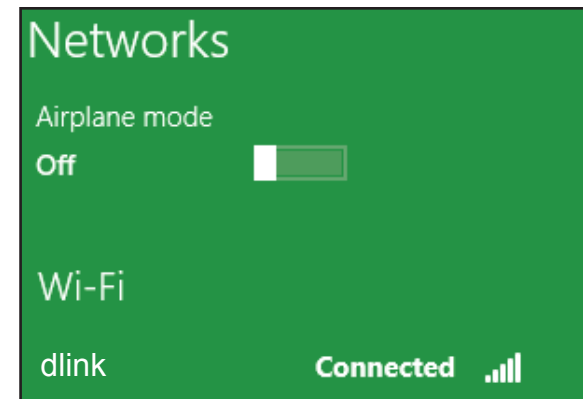


Windows® 7

WPA/WPA2

It is recommended that you enable wireless encryption (WPA/WPA2) on your wireless router or access point before configuring your wireless adapter. If you are joining an existing network, you will need to know the security key or passphrase being used.

 Click on the wireless icon in your system tray (lower-right corner).



Wireless Icon


The utility will display any available wireless networks in your area.

Highlight the wireless connection with Wi-Fi name (SSID) you would like to connect to and click the **Connect** button.

If you get a good signal but cannot access the Internet, check your TCP/IP settings for your wireless adapter. Refer to **Networking Basics** on page 152 for more information.




The following window appears while your computer tries to connect to the router.

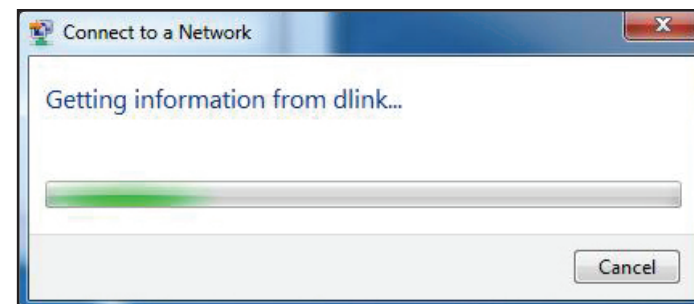

Enter the same security key or passphrase (Wi-Fi password) that is on your router and click **OK**. You can also connect by pushing the WPS button on the router.

It may take 20-30 seconds to connect to the wireless network. If the connection fails, please verify that the security settings are correct. The key or passphrase must be exactly the same as the one on the wireless router.

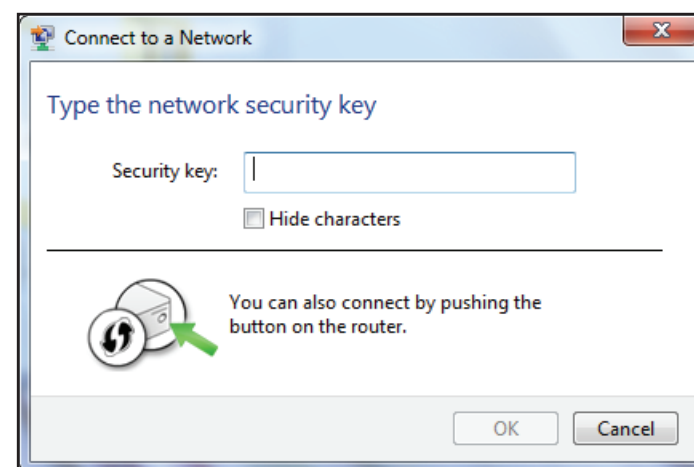

Troubleshooting

This chapter provides solutions to problems that can occur during the installation and operation of the router. Read the following descriptions if you are having problems.

1. Why can't I access the web-based configuration utility?

When entering the IP address of the D-Link router (**192.168.0.1** for example), you are not connecting to a website, nor do you have to be connected to the Internet. The device has the utility built-in to a ROM chip in the device itself. Your computer must be on the same IP subnet to connect to the web-based utility.

- Make sure you have an updated Java-enabled web browser. We recommend the following:
 - Microsoft Internet Explorer® 10 or higher
 - Mozilla Firefox 28 or higher
 - Google™ Chrome 28 or higher
 - Apple Safari 6 or higher
- Verify physical connectivity by checking for solid link lights on the device. If you do not get a solid link light, try using a different cable, or connect to a different port on the device if possible. If the computer is turned off, the link light may not be on.
- Disable any Internet security software running on the computer. Software firewalls such as ZoneAlarm, BlackICE, Sygate and Norton Personal Firewall may block access to the configuration pages. Check the help files included with your firewall software for more information on disabling or configuring it.

- Configure your Internet settings:
 - Go to **Start > Settings > Control Panel**. Double-click the **Internet Options** icon. From the **Security** tab, click the button to restore the settings to their defaults.
 - Click the **Connection** tab and set the dial-up option to Never Dial a Connection. Click the LAN Settings button. Make sure nothing is checked. Click **OK**.
 - Go to the **Advanced** tab and click the button to restore these settings to their defaults. Click **OK** three times.
 - Close your web browser (if open) and open it.
- Access the web management. Open your web browser and enter the IP address of your D-Link router in the address bar. This should open the login page for your web management.
- If you still cannot access the configuration, unplug the power to the router for 10 seconds and plug back in. Wait about 30 seconds and try accessing the configuration. If you have multiple computers, try connecting using a different computer.

2. What can I do if I forgot my password?

If you forgot your password, you must reset your router. This process will change all your settings back to the factory defaults.

To reset the router, locate the reset button (hole) on the rear panel of the unit. With the router powered on, use a paperclip to hold the recessed button down for 10 seconds. Release the button and the router will go through its reboot process. Wait about 30 seconds to access the router. The default IP address is **192.168.0.1**. When logging in, leave the password box empty.

Wireless Basics

D-Link wireless products are based on industry standards to provide easy-to-use and compatible high-speed wireless connectivity within your home, business, or public access wireless networks. Strictly adhering to the IEEE standard, the D-Link wireless family of products will allow you to access the data you want, when, and where you want it. You will be able to enjoy the freedom that wireless networking delivers.

A wireless local area network (WLAN) is a cellular computer network that transmits and receives data with radio signals instead of wires. Wireless LANs are used increasingly in both home and office environments, and public areas such as airports, coffee shops and universities. Innovative ways to utilize WLAN technology are helping people work, and communicate more efficiently. Increased mobility and the absence of cabling and other fixed infrastructure have proven to be beneficial for many users.

Wireless users can use the same applications they use on a wired network. Wireless adapter cards used on laptop and desktop systems support the same protocols as Ethernet adapter cards.

Under many circumstances, it may be desirable for mobile network devices to link to a conventional Ethernet LAN in order to use servers, printers or an Internet connection supplied through the wired LAN. A wireless router is a device used to provide this link.

What is Wireless?

Wireless or Wi-Fi technology is another way of connecting your computer to the network without using wires. Wi-Fi uses radio frequency to connect wirelessly so you have the freedom to connect computers anywhere in your home or office network.

Why D-Link Wireless?

D-Link is the worldwide leader and award winning designer, developer, and manufacturer of networking products. D-Link delivers the performance you need at a price you can afford. D-Link has all the products you need to build your network.

How does wireless work?

Wireless works similarly to how cordless phones work, through radio signals that transmit data from one point A to point B. But wireless technology has restrictions as to how you can access the network. You must be within the wireless network range area to be able to connect your computer. There are two different types of wireless networks: Wireless Local Area Network (WLAN), and Wireless Personal Area Network (WPAN).

Wireless Local Area Network (WLAN)

In a wireless local area network, a device called an Access Point (AP) connects computers to the network. The access point has a small antenna attached to it, which allows it to transmit data back and forth over radio signals. With an indoor access point the signal can travel up to 300 feet. With an outdoor access point the signal can reach out up to 30 miles to serve places like manufacturing plants, industrial locations, university and high school campuses, airports, golf courses, and many other outdoor venues.

Wireless Personal Area Network (WPAN)

Bluetooth is the industry standard wireless technology used for WPAN. Bluetooth devices in WPAN operate in a range up to 30 feet away. Compared to WLAN the speed and wireless operation range are both less than WLAN, but in return it doesn't use nearly as much power. This makes it ideal for personal devices, such as mobile phones, PDAs, headphones, laptops, speakers, and other devices that operate on batteries.

Who uses wireless?

Wireless technology has become so popular in recent years that almost everyone is using it, whether it's for home, office, business, D-Link has a wireless solution for it.

Home Uses/Benefits

- Gives everyone at home broadband access
- Surf the web, check email, instant message, etc.
- Gets rid of the cables around the house
- Simple and easy to use

Small Office and Home Office Uses/Benefits

- Stay on top of everything at home as you would at office
- Remotely access your office network from home
- Share Internet connection and printer with multiple computers
- No need to dedicate office space

Where is wireless used?

Wireless technology is expanding everywhere, not just at home or office. People like the freedom of mobility and it's becoming so popular that more and more public facilities now provide wireless access to attract people. The wireless connection in public places is usually called "hotspots".

Using a D-Link USB adapter with your laptop, you can access the hotspot to connect to the Internet from remote locations like: airports, hotels, coffee shops, libraries, restaurants, and convention centers.

Wireless network is easy to setup, but if you're installing it for the first time it could be quite a task not knowing where to start. That's why we've put together a few setup steps and tips to help you through the process of setting up a wireless network.

Tips

Here are a few things to keep in mind, when you install a wireless network.

Centralize your router or access point

Make sure you place the router/access point in a centralized location within your network for the best performance. Try to place the router/access point as high as possible in the room, so the signal gets dispersed throughout your home. If you have a two-story home, you may need a repeater to boost the signal to extend the range.

Eliminate Interference

Place home appliances such as cordless telephones, microwaves, and televisions as far away as possible from the router/access point. This would significantly reduce any interference that the appliances might cause since they operate on same frequency.

Wireless Modes

There are basically two modes of networking:

- **Infrastructure** – All wireless clients will connect to an access point or wireless router.
- **Ad-hoc** – Directly connecting to another computer for peer-to-peer communication using wireless network adapters on each computer, such as two or more wireless network USB adapters.

An Infrastructure network contains an access point or wireless router. All the wireless devices, or clients, will connect to the wireless router or access point.

An Ad-hoc network contains only clients, such as laptops with wireless USB adapters. All the adapters must be in Ad-hoc mode to communicate.

Networking Basics

Check your IP address


After you install your new D-Link adapter, by default, the TCP/IP settings should be set to obtain an IP address from a DHCP server (i.e. wireless router) automatically. To verify your IP address, please follow the steps below.

Click on **Start** > **Run**. In the run box type **cmd** and click **OK**. (Windows® 7/Vista® users type **cmd** in the **Start Search** box.)

At the prompt, type **ipconfig** and press **Enter**.

This will display the IP address, subnet mask, and the default gateway of your adapter.

If the address is 0.0.0.0, check your adapter installation, security settings, and the settings on your router. Some firewall software programs may block a DHCP request on newly installed adapters.

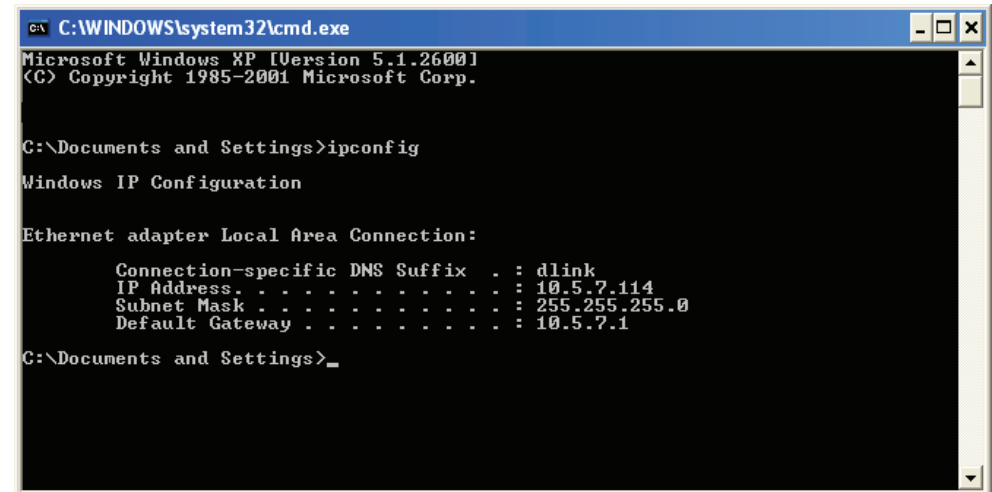

```
C:\WINDOWS\system32\cmd.exe
Microsoft Windows XP [Version 5.1.2600]
(C) Copyright 1985-2001 Microsoft Corp.

C:\Documents and Settings>ipconfig

Windows IP Configuration

Ethernet adapter Local Area Connection:

    Connection-specific DNS Suffix  . : dlink
    IP Address. . . . . : 10.5.7.114
    Subnet Mask . . . . . : 255.255.255.0
    Default Gateway . . . . . : 10.5.7.1

C:\Documents and Settings>
```


Statically Assign an IP address

1. If you are not using a DHCP capable gateway/router, or you need to assign a static IP address, please follow the steps below:

- | | |
|-----------------------|--|
| Windows® 7 | Start > Control Panel > Network and Internet > Network and Sharing Center |
| Windows Vista® | Start > Control Panel > Network and Internet > Network and Sharing Center > Manage Network Connections |
| Windows® XP | Start > Control Panel > Network Connections |
| Windows® 2000 | From the desktop, right-click My Network Places > Properties |

2. Right-click on the **Local Area Connection** which represents your network adapter and select **Properties**.


3. Highlight **Internet Protocol (TCP/IP)** and click **Properties**.

4. Click **Use the following IP address** and enter an IP address that is on the same subnet as your network or the LAN IP address on your router.

Example: If the router's LAN IP address is 192.168.0.1, make your IP address 192.168.0.X where X is a number between 2 and 99. Make sure that the number you choose is not in use on the network. Set the Default Gateway the same as the LAN IP address of your router (I.E. 192.168.0.1).

Set Primary DNS the same as the LAN IP address of your router (192.168.0.1). The Secondary DNS is not needed or you may enter a DNS server from your ISP.

5. Click **OK** twice to save your settings.

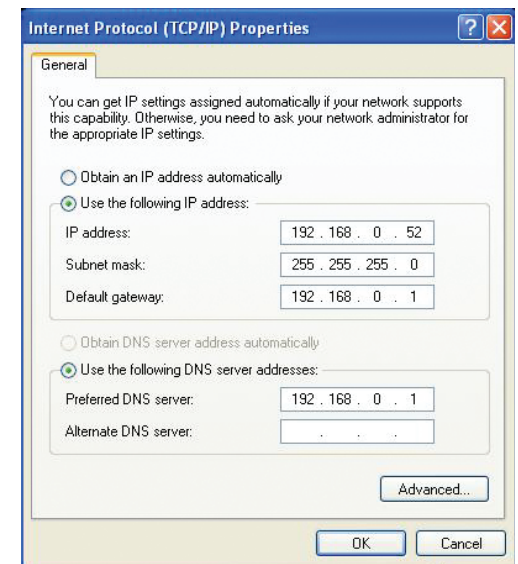

Wireless Security

This section will show you the different levels of encryption you can use to better protect your data from intruders. The router offers the following types:

- WPA2 (Wi-Fi Protected Access 2)
- WPA (Wi-Fi Protected Access)
- WPA2-PSK (Pre-Shared Key)
- WPA-PSK (Pre-Shared Key)

What is WPA?

WPA (Wi-Fi Protected Access), is a Wi-Fi standard that was designed to improve the security features of WEP (Wired Equivalent Privacy).

The 2 major improvements over WEP:

- Improved data encryption through the Temporal Key Integrity Protocol (TKIP). TKIP scrambles the keys using a hashing algorithm and by adding an integrity-checking feature, ensures that the keys haven't been tampered with. WPA2 is based on 802.11i and uses Advanced Encryption Standard (AES) instead of TKIP.
- User authentication, which is generally missing in WEP, through the extensible authentication protocol (EAP). WEP regulates access to a wireless network based on a computer's hardware-specific MAC address, which is relatively simple to be sniffed out and stolen. EAP is built on a more secure public-key encryption system to ensure that only authorized network users can access the network.

WPA-PSK/WPA2-PSK uses a passphrase or key to authenticate your wireless connection. The key is an alpha-numeric password between 8 and 63 characters long. The password can include symbols (!?*&_) and spaces. This key must be the exact same key entered on your wireless router or access point.

WPA/WPA2 incorporates user authentication through the Extensible Authentication Protocol (EAP). EAP is built on a more secure public key encryption system to ensure that only authorized network users can access the network.

Technical Specifications

Device Interfaces

- Wireless Interface (2.4 GHz): IEEE 802.11n/g/b
- Wireless Interface (5 GHz): IEEE 802.11 ac/n/a
- Four 10/100/1000 Mbps LAN ports
- One 10/100/1000 Mbps WAN port
- One USB 2.0 port
- One SuperSpeed USB 3.0 port

Antenna Types

- Six external antennas

Standards

- IEEE 802.11ac^{1,2,3}
- IEEE 802.11b
- IEEE 802.11n
- IEEE 802.11a
- IEEE 802.11g
- IEEE 802.3u
- IEEE 802.3ab
- IEEE 802.1p
- IEEE 802.1q

Security

- WPA/WPA2-Personal
- Wi-Fi Protected Setup (WPS)

Power

- Input: 100 to 240 V AC, 50 / 60 Hz
- Output: 12 V, 3 A

Temperature

- Operating: 0 to 40 °C (32 to 104 °F)
- Storage: -20 to 65 °C (-4 to 149 °F)

Humidity

- Operating: 10% to 90% maximum, non-condensing
- Storage: 5% to 95% maximum, non-condensing

Certifications

- IC

Dimensions

- L x W x H: 221.80 x 201.40 x 58.80 mm (8.70 x 7.90 x 2.30 in)

Weight

- 578 g (1.27 lbs)

¹ Maximum wireless signal rate derived from IEEE Standard 802.11a, 802.11g, 802.11n, and 802.11ac specifications. Actual data throughput will vary. Network conditions and environmental factors - including volume of network traffic, building materials and construction, and network overhead - lower actual data throughput rate. Environmental factors will adversely affect wireless signal range.

² Frequency Range varies depending on country's regulation.

³ The router does not include 5.25-5.35 GHz & 5.47-5.725 GHz in some regions.

Regulatory Statements

Federal Communication Commission Interference Statement

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

Non-modifications Statement:

Any changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate this equipment.

Caution:

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:

- (1) This device may not cause harmful interference, and
- (2) this device must accept any interference received, including interference that may cause undesired operation.

This device and its antenna(s) must not be co-located or operating in conjunction with any other antenna or transmitter except in accordance with FCC multi-transmitter product procedures. For product available in the USA/Canada market, only channel 1~11 can be operated. Selection of other channels is not possible.

Note

The country code selection is for non-USA models only and is not available to all USA models. Per FCC regulations, all WiFi product marketed in the USA must be fixed to USA operational channels only.

IMPORTANT NOTICE:

FCC Radiation Exposure Statement

This equipment complies with FCC radiation exposure limits set forth for an uncontrolled environment. This equipment should be installed and operated with minimum distance 38 cm between the radiator and your body.

Innovation, Science and Economic Development Canada (ISED) Statement:

This Class B digital apparatus complies with Canadian ICES-003.

Cet appareil numérique de la classe B est conforme à la norme NMB-003 du Canada.

Innovation, Science and Economic Development Canada (ISED) Statement:

This device complies with ISED licence-exempt RSS standard(s). Operation is subject to the following two conditions:

- (1) this device may not cause interference, and
- (2) this device must accept any interference, including interference that may cause undesired operation of the device.

Le présent appareil est conforme aux CNR d'ISED applicables aux appareils radio exempts de licence. L'exploitation est autorisée aux deux conditions suivantes :

- (1) l'appareil ne doit pas produire de brouillage, et
- (2) l'utilisateur de l'appareil doit accepter tout brouillage radioélectrique subi, même si le brouillage est susceptible d'en compromettre le fonctionnement.

Caution :

- (i) the device for operation in the band 5150-5250 MHz is only for indoor use to reduce the potential for harmful interference to co-channel mobile satellite systems;
- (ii) the maximum antenna gain permitted for devices in the band 5725-5850 MHz shall be such that the equipment still complies with the e.i.r.p. limits specified for point-to-point and non-point-to-point operation as appropriate; and
- (iii) Users should also be advised that high-power radars are allocated as primary users (i.e. priority users) of the bands 5650-5850 MHz and that these radars could cause interference and/or damage to LE-LAN devices.

Avertissement:

- (i) les dispositifs fonctionnant dans la bande 5150-5250 MHz sont réservés uniquement pour une utilisation à l'intérieur afin de réduire les risques de brouillage préjudiciable aux systèmes de satellites mobiles utilisant les mêmes canaux;
- (ii) le gain maximal d'antenne permis (pour les dispositifs utilisant la bande de 5725 à 5 850 MHz) doit être conforme à la limite de la p.i.r.e. spécifiée pour l'exploitation point à point et l'exploitation non point à point, selon le cas;
- (iii) De plus, les utilisateurs devraient aussi être avisés que les utilisateurs de radars de haute puissance sont désignés utilisateurs principaux (c.-à-d., qu'ils ont la priorité) pour les bandes 5650-5850 MHz et que ces radars pourraient causer du brouillage et/ou des dommages aux dispositifs LAN-EL.

Radiation Exposure Statement

This equipment complies with ISED radiation exposure limits set forth for an uncontrolled environment. This equipment should be installed and operated with minimum distance 44 cm between the radiator and your body.

Déclaration d'exposition aux radiations

Cet équipement est conforme aux limites d'exposition aux rayonnements ISED établies pour un environnement non contrôlé. Cet équipement doit être installé et utilisé avec un minimum de 44 cm de distance entre la source de rayonnement et votre corps.